




AUTOMOTIVE PRODUCTS, INC.

INSTRUCTIONS

APPLICATION: 2007-08 CHEVY TAHOE/SUBURBAN 1500/AVALANCHE 1500/
GMC YUKON/YUKON XL 1500

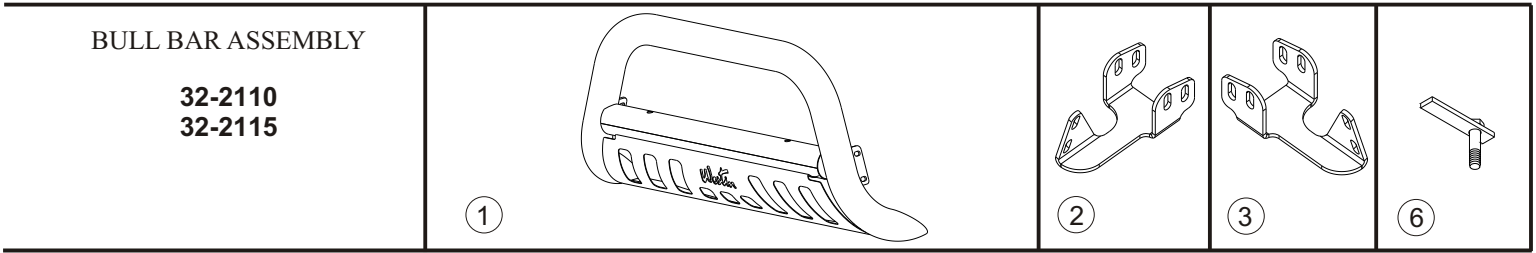

ITEM QTY CONTENTS			TOOLS
1	1	BULL BAR ASSEMBLY	3/4" SOCKET 3/4" WRENCH 9/16" SOCKET 9/16" WRENCH 18MM SOCKET 18MM WRENCH FLAT TIP SCREWDRIVER RATCHET SOCKET EXTENSION TORQUE WRENCH UTILITY KNIFE
2,3	2	BRACKET, PASSENGER (2) AND DRIVER (3)	
4	2	PLASTIC PLUG	
5	4	RUBBER BUMPER	
6	6	BOLT PLATE	
7	6	1/2" FLAT WASHER	
8	6	1/2" LOCK WASHER	
9	6	1/2-13 HEX NUT	
10	4	3/8-16 X 1.25" HEX HEAD BOLT, STAINLESS STEEL	
11	8	3/8" FLAT WASHER, STAINLESS STEEL	
12	4	3/8" LOCK WASHER, STAINLESS STEEL	
13	4	3/8-16 HEX NUT, STAINLESS STEEL	

- STEP 1.** Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning. **NOTE:** Westin advises the installer to use a thread lubricant on all of the stainless steel fasteners.
- STEP 2.** **NOTE:** It will be necessary to remove the front license plate and bracket. Remove license plate from bracket. Using a 3/16" drill bit, drill out the two pop rivets that hold the bracket to the bumper. If local/state laws requires a license plate, license plate relocation kit 32-0055 is available.
- STEP 3.** Remove tow hooks by removing the front bolt and rear bolt that threads into the side of the tow hooks. On passenger side, it may be easier to access the rear tow hook bolt with a 18mm wrench and going through the tow hook pocket. Tow hooks will not be reinstalled.
- STEP 4.** Remove the tow hook pocket cover. Tahoe's have two pockets that can be removed by releasing four clips per cover. **SEE FIGURE 3.** Yukon's have a one piece cover that can be removed by pulling out the two push pins on either side and releasing several clips in the center section. Once all of these clips are released, start pulling from the center and the edges will release themselves. **SEE FIGURE 2.**
- STEP 5.** Determine passenger and driver side brackets. Slide bracket in through the tow hook pocket. Align slots on bracket with holes on frame. Slide the three bolt plates inside the frame and out through aligned holes on both sides of the frame. Secure with 1/2" yellow zinc fasteners. Leave loose. **SEE FIGURES 2 OR 3.**
- STEP 6.** If pocket covers are to be reinstalled, minor trimming around mount brackets is required.
- STEP 7.** Attach Bull Bar to mount brackets using 3/8" stainless steel fasteners. Level and adjust Bull Bar as desired and tighten all fasteners. Recommended torque values are 64 Ft. Lbs. for 1/2" yellow zinc fasteners and 17 Ft. Lbs. for 3/8" stainless steel fasteners. **SEE FIGURES 2 OR 3.**

LIGHT INSTALLATION: Insert threaded stud on base of the light through hole in cross tube. Using a ratchet, extension and socket for correct size of nut supplied, insert through large clearance hole in bottom of cross tube. Thread nut and washers on stud and tighten. **SEE FIGURE 1.** **NOTE:** A short socket, not a deep well works best to get the nut started.

NOTE: Fits most 6" round or rectangle lights. Some lights may require replacing included mount/isolator with rubber bumpers provided. Mounting stud of 1/2" or less required. Plug mount holes with caps provided if not installing

FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnuba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.