



INSTALLATION INSTRUCTIONS

2006-08 Hummer H3

Part # 45-1920, 40-1925

PARTS LIST:

1	Grille Guard
2	Top Support Brace (Driver and Passenger)
2	M8 Button Head Bolt, Stainless Steel
2	M8 Flat Washer, Stainless Steel
2	M8 Lock Washer, Stainless Steel
1	Allen Key

Note: Westin advises the installer to use a thread lubricant on all stainless hardware.

IMPORTANT: Carefully read this information before attempting to install this product. The manufacturer is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product. NO DRILLING REQUIRED.

PROCEDURE:

Step 1: Remove the contents from box and verify all parts are present. Read instructions completely before beginning.

Step 2: Remove the tow hook loops from the front of the vehicle using a 24mm socket and 24mm wrench, remove the brackets using an 18mm socket, 18mm wrench, and T-30 Torx driver. (Figure 1)

Step 3: Install the Grille Guard behind the loop mount brackets using the factory bolts.

Step 4: Remove two bolts from the grille as shown in Figure 2.

Step 5: Install Upper braces on the Grille Guard using the M8 hardware, reinstall the bolts removed from the grille. (Figure 3 & 4)

Step 6: Level and adjust Grille Guard, tighten all bolts, and reinstall tow hook loops.



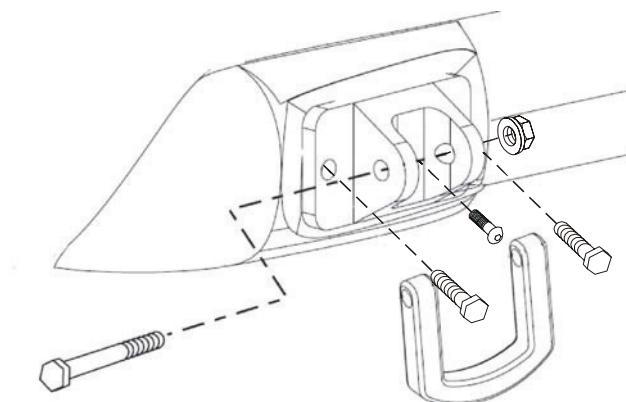


Figure 1 Removing Tow Hook Loop and Bracket

Figure 2

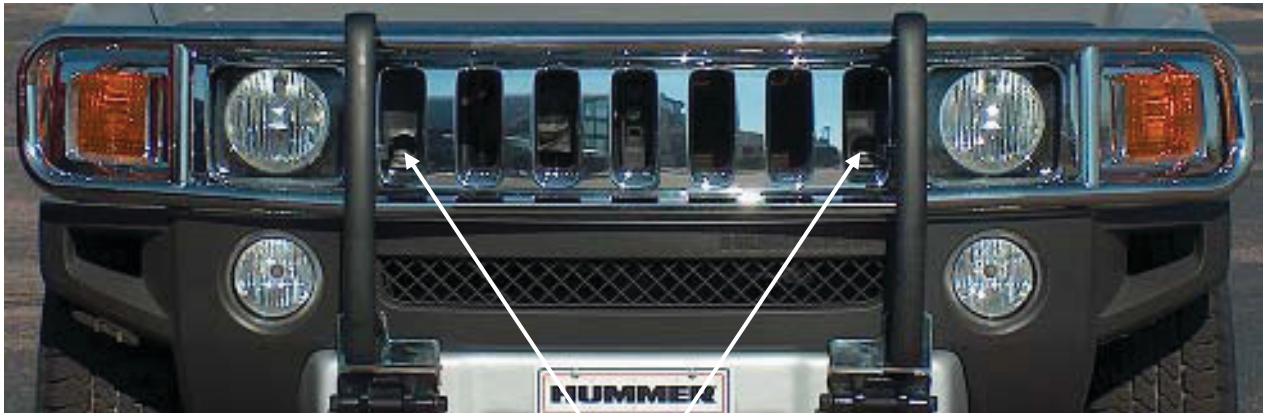

Remove Bolts from
Grille

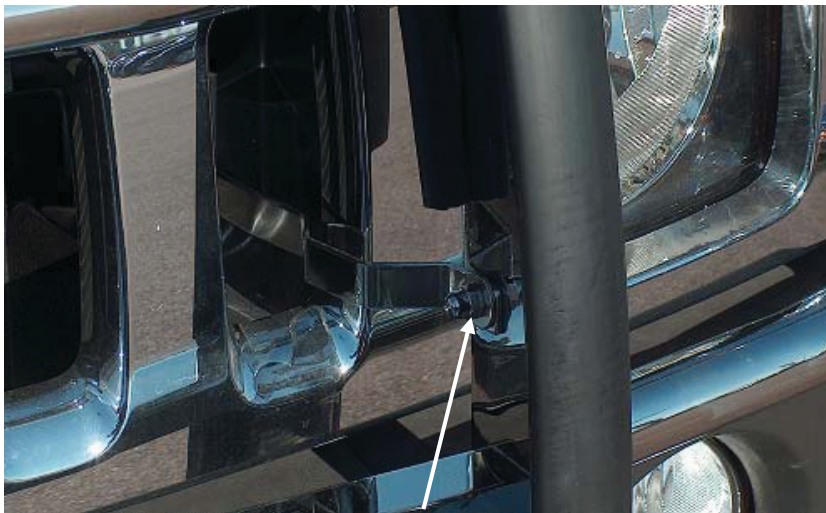

M8 Hardware

Figure 3
Driver Side Shown

Factory Bolt
in Grille



Figure 4