



## Window Visors

### Installation Instructions

**PLEASE READ THESE  
INSTRUCTIONS BEFORE  
INSTALLATION**

Tape adheres best at temperatures  
over 65°F (18° C)

**1) Trial Fit without removing the  
masking from the double-sided tape.  
Take note of the contact area.**

**2) With alcohol pad clean contact  
area. After cleaning, wipe dry with  
a clean, dry cloth.**

**3) Partially remove masking (fold  
upwards)**


**4) Carefully put visor in place**

**5) By pulling upward remove the  
rest of the masking.**

**6) Rub over taped edge firmly with a  
soft cloth to fully adhere tape.**

**\*For a four piece set, repeat the  
above steps.**

**REQUIRES 48 hours to cure. Do  
not wash vehicle for 48 hours after  
installation.**

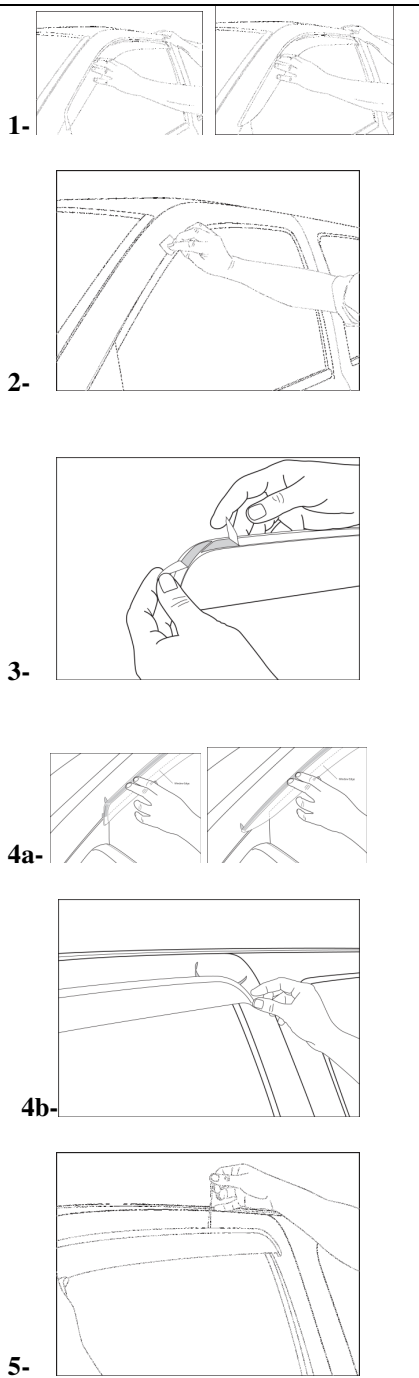

Cleaning Instructions: Wash with warm water and a mild soap solution using a soft, clean cloth or sponge. Use of cleaners not approved for acrylic, or use of improper solvents could result in permanent damage.