





## Platinum Series Bug Shield Non Drill BUG DEFLECTOR

### Installation Instruction: BBB

The installation of this bug shield can be done by a single individual, but it is not recommended.

- 1) Thoroughly clean front hood area. Open Hood
- 2) Remove the two screws with a 10mm socket. Pull grill straight out to remove. There are 5 push pins holding the grill in place (you may need to work it a little).
- 3) Swap out the 5 push pins from grill with the new push pins

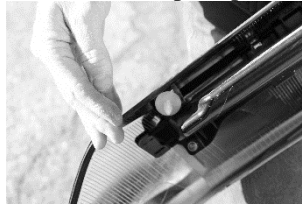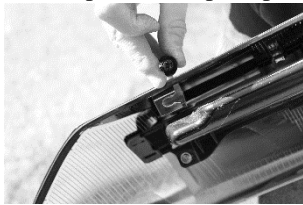

- 4) Put Bug Shield in place (between hood and grill). Reinstall grill.



- 5) Reinstall the 10mm screws. **DO NOT OVER TIGHTEN.**
- 6) Finish installing by screwing Bug Shield into the pre-existing holes.
- 7) Close hood and tell all your friends about your FANTASTIC new shield from WADE.

Cleaning Instructions: Wash with warm water and a mild soap solution using a soft, clean cloth or sponge. Use of cleaners not approved for acrylic, or use of improper solvents could result in permanent damage which will not be covered by the warranty.

Warning: All items are made of breakage resistant material, but to avoid damage, machine car washes are not advised.

5 – Yellow Christmas Trees, 2- 5/16 washer, 2- 5/16 x 1/2 BAS screws