




SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.

INSTALLATION INSTRUCTIONS

APPLICATION: 1998-UP FORD RANGER EXTENDED CAB

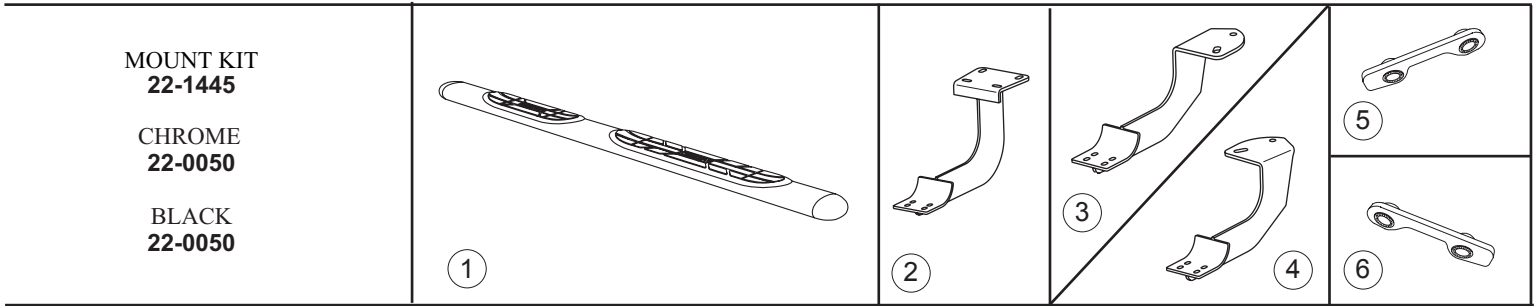

ITEM	QTY	CONTENTS	TOOLS
1	2	STEP BAR (PURCHASED SEPARATELY)	9/16" SOCKET 9/16" WRENCH 7/16" SOCKET 7/16" WRENCH 13MM SOCKET RATCHET TORQUE WRENCH
2	2	REAR BRACKET	
3,4	2	FRONT BRACKET, PASSENGER (3) AND DRIVER (4)	
5,6	2	MOUNT PLATE ASSEMBLY, PASSENGER (5) AND DRIVER (6)	
7	4	3/8-16 X 1.00" HEX HEAD BOLT	
8	4	3/8" FLAT WASHER	
9	4	3/8" LOCK WASHER	
10	8	M8-1.25 FLANGE NUT	
11	8	1/4-20 X .75 T-HEAD BOLT	
12	8	1/4" FLAT WASHER	
13	8	1/4-20 NYLON INSERT LOCK NUT	

- STEP 1. Remove contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Insert mount plates as shown. **SEE FIGURE 1.**
- STEP 3. Install brackets as shown. **SEE FIGURES 2 AND 3.**
- STEP 3. Slide T-head bolts on step bar as shown (2 per slot, 4 per bar). Place step bar on saddle with long step pad forward and end cap screw facing inward. Assemble with 1/4" fasteners. **SEE FIGURES 4 AND 5.**
- STEP 4. Make sure step bar and brackets are properly aligned. Tighten and torque 3/8" fasteners to 22 FT. LBS, 1/4" fasteners to 9 FT. LBS, and 8mm fasteners to 19 FT.LBS.
- STEP 5. Repeat for passenger side.

FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.

