



SIGNATURE OF QUALITY



# INSTALLATION INSTRUCTIONS

APPLICATION: 2006-UP TOYOTA FJ CRUISER

AUTOMOTIVE PRODUCTS, INC.

MOUNT KIT  
22-1615  
TUBES

CHROME  
22-0060  
TUBES  
BLACK  
22-0065

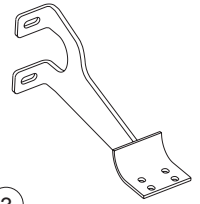

①/②

③

ITEM	QTY	CONTENTS	TOOLS
1,2	2	STEP BAR, PASSENGER (1) AND DRIVER (2) (PURCHASED SEPARATELY)	7/16" SOCKET
3	4	MOUNT ASSEMBLY	13MM SOCKET
4	8	M8-1.25 X 30MM HEX HEAD BOLT	13MM WRENCH
5	8	3/8" LOCK WASHER	RATCHET
6	8	3/8" FLAT WASHER	TORQUE WRENCH
7	8	1/4-20 X .75 T-HEAD BOLT	
8	8	1/4" FLAT WASHER	
9	8	1/4-20 NYLON INSERT LOCK NUT	

STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.

**NOTE:** Factory rocker bars or step boards must be removed before installing step bars.

STEP 2. Locate the driver side mount locations on vehicle. There are four sets of threaded holes along the side of the frame. From the front of the vehicle, the first and last set of holes are used.

STEP 3. Attach brackets to vehicle frame using two M8-1.25 x 30mm hex head bolts, 3/8" flat washers, and 3/8" lock washers per bracket. Hand tighten. **SEE FIGURE 1.** **NOTE:** Do not pinch or crush brake lines with brackets.

STEP 4. Slide T-head bolts on step bar as shown (2 per slot, 4 per bar.) **SEE FIGURE 2.** Place step bar on saddle with long step pad forward and end cap screw facing inward. Assemble with 1/4" fasteners. **SEE FIGURE 3.**

STEP 5. Make sure step bar and brackets are properly aligned. Tighten and torque M8 fasteners to 25 Ft.Lbs. and 1/4" fasteners to 9 FT. LBS.

#### FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.

