






SIGNATURE OF QUALITY

# INSTALLATION INSTRUCTIONS

APPLICATION: 2006-11 HONDA RIDGELINE

AUTOMOTIVE PRODUCTS, INC.

MOUNT KIT  
22-1675  
CHROME  
22-0030, 22-5030  
BLAC  
22-0035, 22-5035

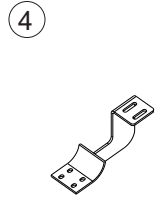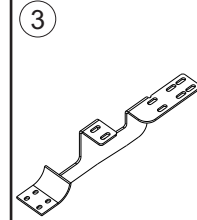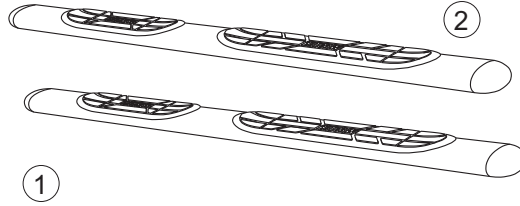

ITEM	QTY	CONTENTS	TOOLS
1,2	2	OVAL TUBE, PASSENGER (1) AND DRIVER (2)	10MM SOCKET 13MM SOCKET RATCHET TORQUE WRENCH
3	4	FRONT/CENTER BRACKET	
4	2	REAR BRACKET	
5	20	M8-1.25 X 30MM HEX HEAD BOLT	
6	20	8MM FLAT WASHER	
7	20	8MM LOCK WASHER	
8	6	M6 BOLT PLATES (INCLUDED WITH STEP TUBES )	
9	24	M6 FLAT WASHERS (INCLUDED WITH STEP TUBES)	
10	24	M6 LOCK NUTS (INCLUDED WITH STEP TUBES)	

- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Both front and center brackets are the same for each side. Rear brackets are also the same for each side.
- STEP 3. Locate driver side mounting locations on vehicle. SEE FIGURES 1,2 AND 3.
- STEP 4. Attach brackets to underside of rocker panel as shown. Hand tighten. SEE FIGURES 1,2 AND 3.
- STEP 5. Attach Ovals to mounting brackets using M6 Hardware included with step tubes SEE FIGURES, 4,5,6.
- STEP 6. Make sure step bar and brackets are properly aligned and tighten fasteners. Recommended torque values are 23 FT.LBS. for 8mm fasteners and 7 FT.LBS. for 1/4" fasteners.
- STEP 7. Repeat installation for passenger side.

### FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.

