




INSTALLATION INSTRUCTIONS

APPLICATION: 1995-99 TAHOE/YUKON 4-DOOR

AUTOMOTIVE PRODUCTS, INC.

STEP BAR ASSEMBLIES


25-0770
25-0775
26-0770
26-0775

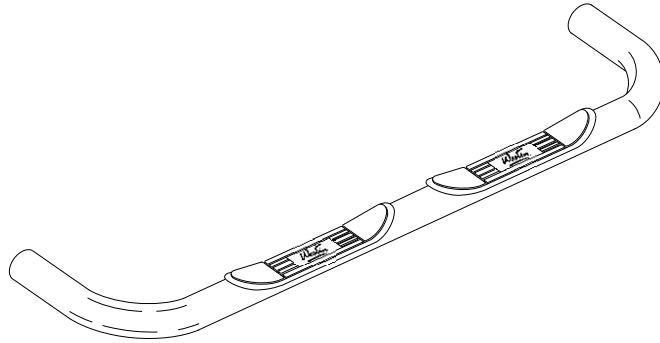

QTY	PARTS KIT CONTENTS DESCRIPTION	TOOLS REQUIRED
1	STEP BAR, PASSENGER SIDE	15MM SOCKET
1	STEP BAR, DRIVER SIDE	3/4" SOCKET
4	REAR MOUNTING HOOK	RATCHET
1	REAR MOUNT ASSEMBLY, PASSENGER SIDE	3/4" COMBINATION WRENCH
1	REAR MOUNT ASSEMBLY, DRIVER SIDE	18MM SOCKET
2	FRONT MOUNT BRACKET	TORQUE WRENCH
2	M12-1.75 X 120MM HEX HEAD BOLT	
10	1/2" LOCK WASHER	NOTE: FASTENERS ARE
10	1/2" FLAT WASHER	CONTAINED IN BOLT KIT
8	1/2-13 X 2.00" HEX HEAD BOLT	60-1118.

- STEP 1. Remove the contents from the box and check for any damage.
- STEP 2. Read and understand instructions completely before beginning installation.
- STEP 3. Remove the body mount bolt from front mount located under the cab of truck. Position front mount bracket up to body mount and install using the M12-1.75 x 120MM hex head bolt, 1/2" lock washer and 1/2" flat washer provided. Leave bolt loose to allow positioning of the step bar.
- STEP 4. Position rear mount assembly against truck frame making sure the clearance holes in the plate cover the plastic inserts in the frame. Position one of the rear mounting hooks over the top edge of the frame. Insert a 1/2-13 x 2.00" hex head bolt, 1/2" lock washer and 1/2" flat washer through the top hole in the mounting plate and thread into the nut on the mounting hook. Hand Tighten.
- Repeat Step 4 to install the other mounting hook over bottom edge of frame. On driver side, adjust bottom mounting hook so the emergency brake cables are not binding on it. Leave hooks hand tight.
- STEP 5. Position step bar up to mount brackets. Fasten using (2) 1/2-13 x 2.00" hex head bolts, (2) 1/2" flat washers and (2) 1/2" lock washers. Leave loose.

- STEP 6. Tighten and torque front body mount bolt to 65 FT. LBS. Tighten rear mount assembly hooks gradually to keep mounting plate flat against truck frame. Tighten and torque to 45 FT. LBS. or until tight.
- STEP 7. Tighten and torque step bar bolts to 65 FT. LBS. Or until tight. Repeat steps for other side.

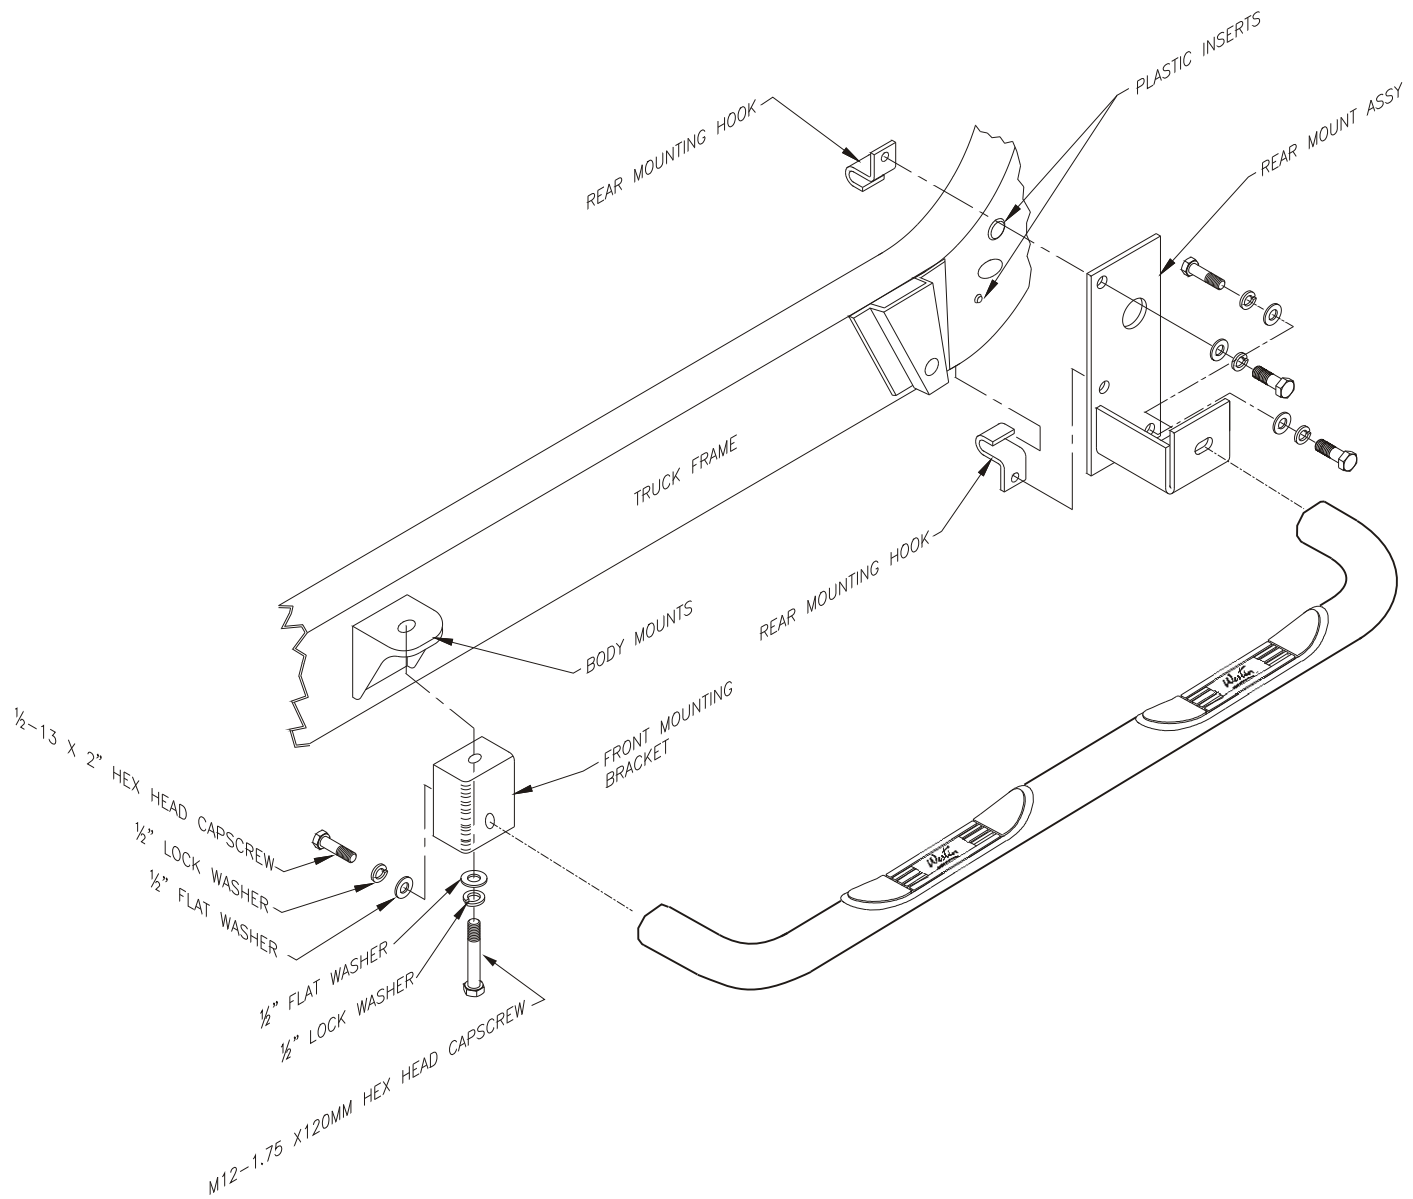

ASSEMBLY AND INSTALLATION VIEW OF DRIVER SIDE - PASSENGER SIDE OPPOSITE