



# INSTRUCTIONS

APPLICATION: 2005-08 NISSAN FRONTIERCREW CAB

AUTOMOTIVE PRODUCTS, INC.


<p>STEP BAR ASSEMBLIES</p> <p>23-2750</p> <p>23-2755</p>			
--	--	--	--

ITEM	QTY	CONTENTS	TOOLS
1,2	2	STEP BAR, PASSENGER (1) AND DRIVER (2)	13MM SOCKET 13MM WRENCH RATCHET
3	3	MOUNT PASSENGER SIDE	
4	3	MOUNT DRIVER SIDE	
5	12	M8-1.25 X 30MM BUTTON HEAD BOLT	
6	12	M8 INTERNAL TOOTH LOCK WASHER	
7	12	M8 FLAT WASHER	
8	12	M8-1.25 HEX REVERSIBLE LOCK NUT	

- STEP 1. Remove contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Locate passenger side mounting locations on vehicle. Attach mount brackets to rocker panel. Leave loose. **SEE FIGURES 1 AND 2.**
- STEP 3. Attach passenger side step bar to cradles with the *Westin* logo facing outward as shown. Assemble with M8 fasteners. Leave loose. **SEE FIGURES 2 AND 3.** The step pad closest to the bend goes to the rear of the vehicle.
- STEP 4. Make sure step bar and brackets are properly aligned with vehicle and tighten fasteners Recommended torque values are 23 Ft. Lbs for 8mm fasteners and 28 Ft. Lbs for 10mm fasteners..
- STEP 5. Repeat installation for opposite side.


### FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.

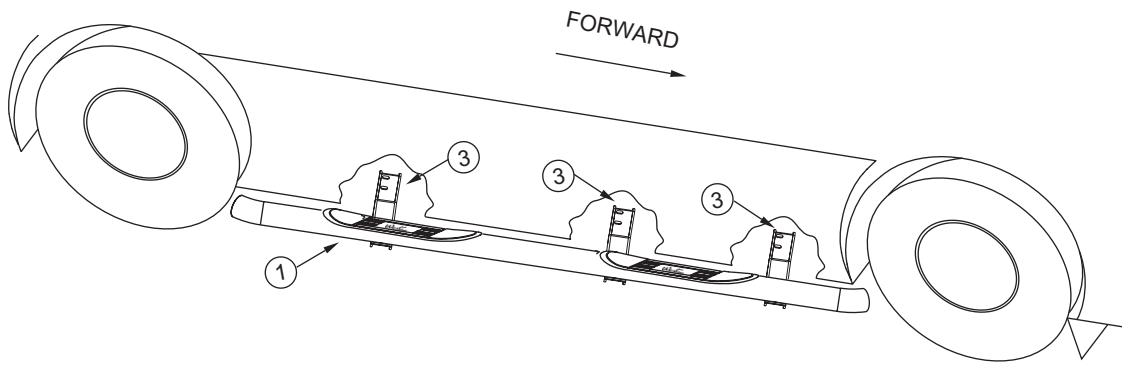

**FIGURE 1** INSTALLATION VIEW OF PASSENGER SIDE SHOWN, DRIVERS SIDE OPPOSITE

**FIGURE 2** INSTALLATION VIEW OF PASSENGER SIDE SHOWN, DRIVERS SIDE OPPOSITE

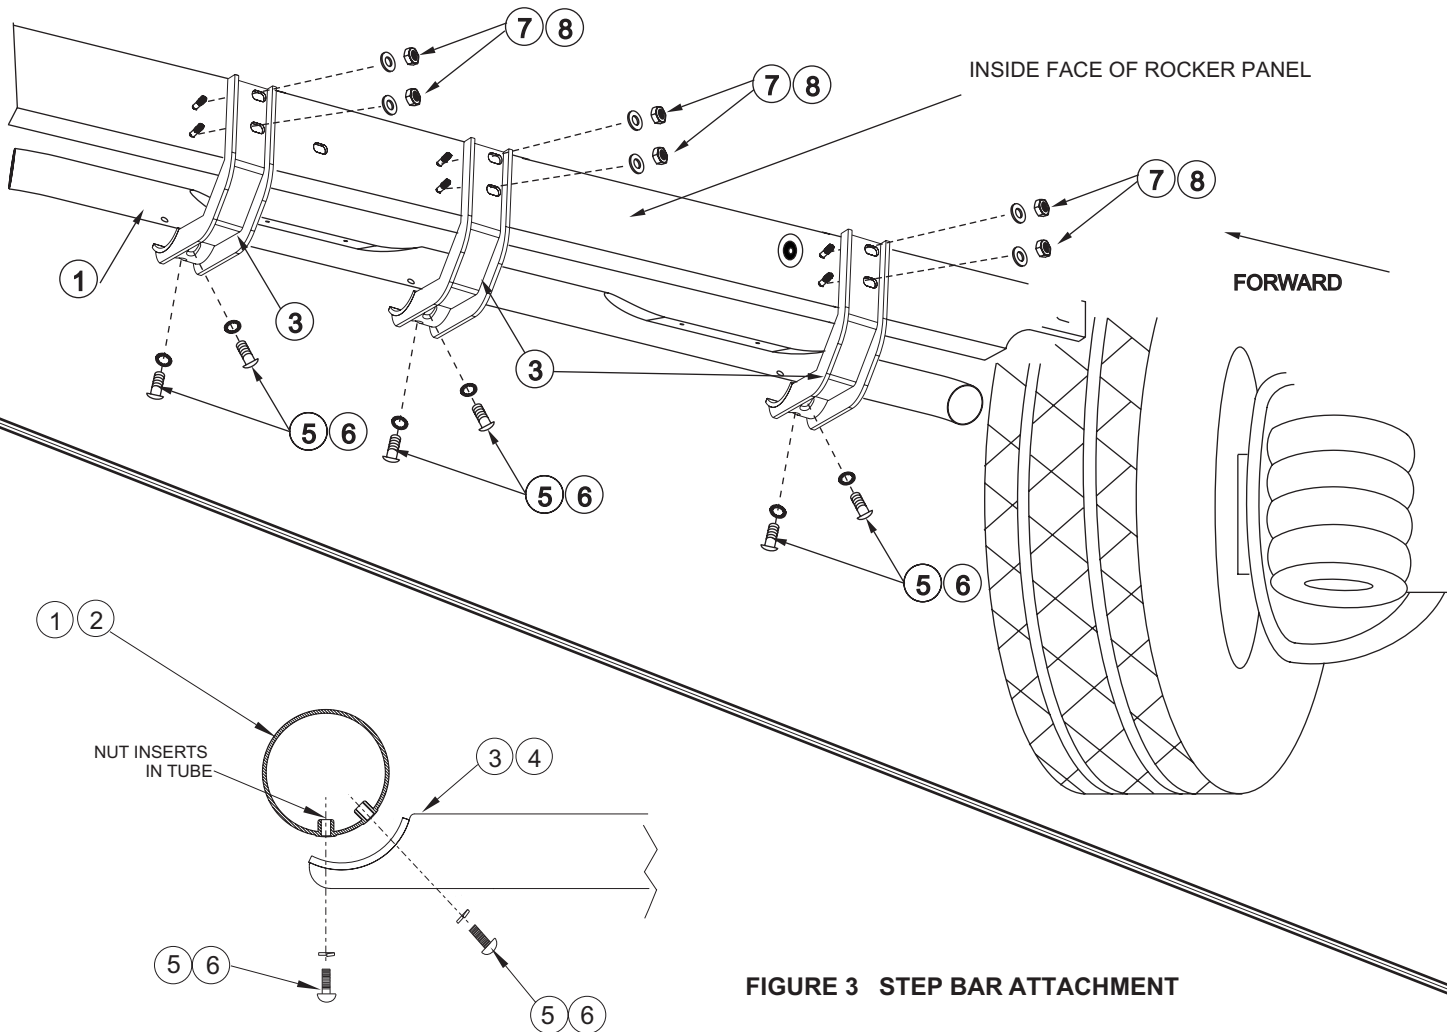

**FIGURE 3** STEP BAR ATTACHMENT