







SIGNATURE OF QUALITY

INSTRUCTIONS

APPLICATION: 2004-2008 DODGE DURANGO/2006-2008 CHRYSLER ASPEN

AUTOMOTIVE PRODUCTS, INC.
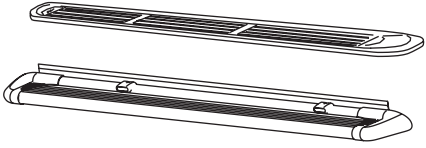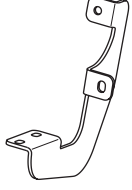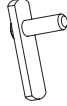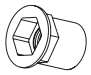
| | | | | | |
|--|---|---|---|---|---|
| MOUNT KIT 27-1545 | SURE GRIP OPTIONAL LIGHT KIT 27-6000 |  |  |  |  |
| MOLDED STEP BOARDS 27-0010 27-0015 | SURE GRIP BOARDS 27-6130 27-6135 27-6530 | ① | ② | ③ | ⑧ |

| ITEM | QTY | CONTENTS | TOOLS |
|------|-----|-----------------------------------|--|
| 1 | 2 | STEP BOARD (PURCHASED SEPARATELY) | 9/16" SOCKET 7/16" SOCKET 9/16" WRENCH 7/16" WRENCH PLIERS RATCHET TORQUE WRENCH |
| 2 | 6 | MOUNT BRACKET | |
| 3 | 6 | BOLT PLATE | |
| 4 | 6 | 3/8 16 X 1.00" HEX HEAD BOLT | |
| 5 | 12 | 3/8" FLAT WASHER | |
| 6 | 12 | 3/8" LOCK WASHER | |
| 7 | 6 | 3/8 16 HEX NUT | |
| 8 | 6 | 3/8" HEX RIVNUT/NUTSERT | |
| 9 | 12 | 5/16 18 X .75" SQUARE HEAD BOLT | |
| 10 | 12 | 5/16" SAE FLAT WASHER | |
| 11 | 12 | 5/16 18 LOCK NUT | |

- STEP 1.** Remove contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning. It is strongly recommended to install the Sure Grip Gap Strip for these vehicle applications.
- STEP 2.** Insert hex rivnuts as shown. **SEE FIGURE 2.**
- STEP 3.** Separate trim from rocker panel and insert bolt plates as shown. Leave loose. **SEE FIGURES 1 AND 2.**
- STEP 4.** Loosely attach brackets as shown. **SEE FIGURE 3.** Tighten top bolt to crimp rivnut until increased resistance is felt. **SEE FIGURE 4.** Verify rivnut is not loose in hole, otherwise re tighten. Hold bolt plate parallel to rocker panel and tighten bottom nut. Re attach trim panel as shown. **SEE FIGURE 4.**
- STEP 5.** Insert square head bolts as shown (3 per slot, 6 per board). **SEE FIGURES 6 AND 7. NOTE:** For lighted boards, run wiring harness prior to attaching board to brackets (refer to Step 8). **SEE FIGURES 6,7, AND 10.** Run longer wire harness on passenger side.
- STEP 6.** For Sure Grip Running Boards, slide closure strip as shown. Set lights (if purchased) in appropriate location. Attach to Sure Grip Running Board as shown. **SEE FIGURE 5.** Drill hole through plastic strip and run wires as shown. **SEE FIGURE 8.**
- STEP 7.** Attach board to brackets as shown. Make sure board and brackets are properly aligned and tighten fasteners. Recommended torque values are 10 FT.LBS. for 5/16" square head fasteners and 26 FT.LBS. for 3/8" fasteners.
NOTE: For lighted version of Molded Step Board, remove plastic cover from each end of under side of board. Proceed to Steps 8 9.

WARNING: INSTALLING LIGHT HARNESS REQUIRES SPLICING INTO VEHICLES ELECTRICAL SYSTEM. WESTIN RECOMMENDS USING A PROFESSIONAL FOR THIS INSTALLATION. NOTE: AVOID AREAS OF EXCESSIVE HEAT, VIBRATION, PINCH OR ROTATION WHEN SECURING HARNESS TO VEHICLE. CAUTION: ALWAYS USE A FUSED(+) POSITIVE SUPPLY SOURCE. UNDERCOAT SEAL FOR HARSH WEATHER.

HINT: Molded Step Boards: For longevity, check rubber seals before installation. Rubber grommets around red and blue wires going into rear sockets, should be inserted and recessed about 1/4". **NOTE:** Remove bulbs and apply white grease into sockets and replace bulbs. Apply RTV Silicone where lights go into socket. Install lights and run wire loom as shown. **SEE FIGURE 7.** For Sure Grip Running Boards, run wire loom down center as shown. **SEE FIGURE 6.**

- STEP 8.** Determine whether your vehicle has a positive or negative switching courtesy system or an auxiliary light source (most Fords). Obtain an accurate wiring diagram for your vehicle's courtesy light system.

For positive and negative switching:

Locate a pass through point (usually under carpet at driver side door sill) for the wire harness. Locate main courtesy wire (usually wire lead to dome light). **NOTE:** If you do not use the main courtesy wire, lights will only function when one door is open. Route wire harness so that the 2 female connections (from step board) are nearest to pass thru point.*Connect opposite step board lead to either connection. Connect the splicing lead to remaining female socket and route one wire thru pass thru point. **SEE FIGURE 10.**

VERY IMPORTANT Double check that your system has positive or negative switching.

For positive switching only: Connect positive wire to main courtesy system, (usually wire lead to dome light). TEST CONTINUITY BEFORE CONNECTING BY OPENING AND CLOSING ALL DOORS. Ground remaining wire.

For negative switching only: Connect negative wire to main courtesy system, (usually wire lead to dome light but sometimes from dome light to courtesy ECU). TEST GROUND CONTINUITY BEFORE CONNECTING BY OPENING AND CLOSING ALL DOORS. Connect remaining wire to battery using a 5A fuse.

**Be sure that you have not routed any wires near moving parts (i.e.. driveshaft) or near any heat generating source (i.e.. transmission, engine, exhaust).

Auxiliary Light source:



Locate auxiliary light source connection under vehicle (usually attached to back side of front or rear fender well (refer to vehicles owners manual).

SEE FIGURE 10. TEST SOURCE BEFORE CONNECTING. Connect splicing leads to aux light source. test step board lights for proper function by opening and closing doors.

STEP 9. Under coat board, brackets and electrical wires, connections and lenses for harsh weather conditions. Reinstall plastic cover on underside of Step boards. **INSTALLATION IS COMPLETE.**

FINISH PROTECTION

Westin products have a high quality finish that must be cared for like any other exposed finish on the vehicle. Protect the finish with a non abrasive automotive wax, (e.g. Pure Carnuba) on a regular basis. The use of any soap, polish or wax that contains an abrasive is detrimental, as the compounds scratch the finish and open it to corrosion.

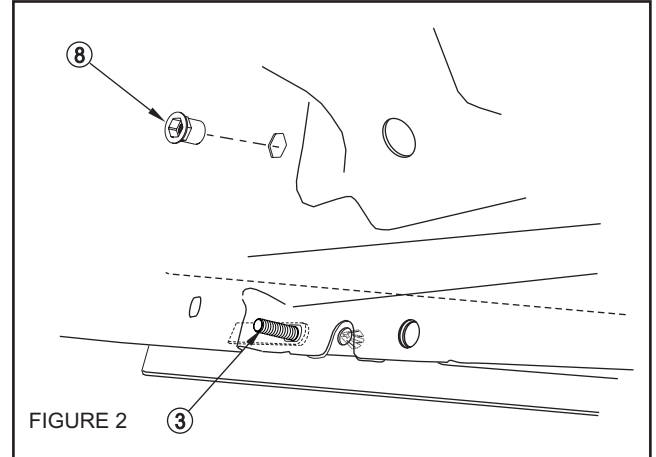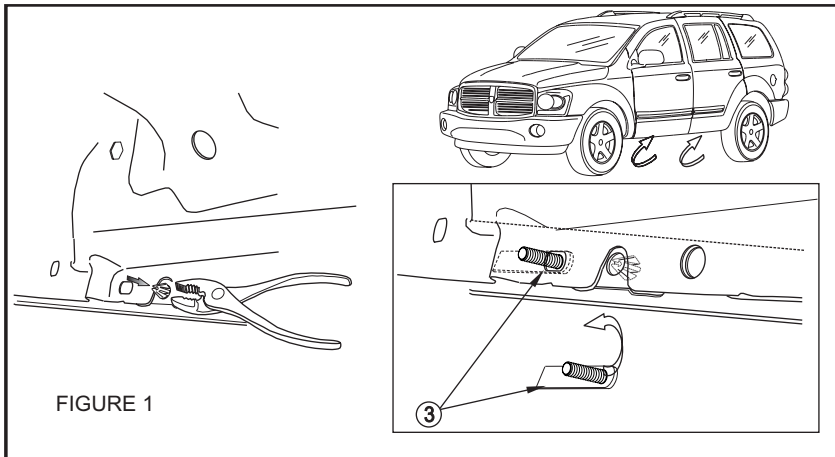

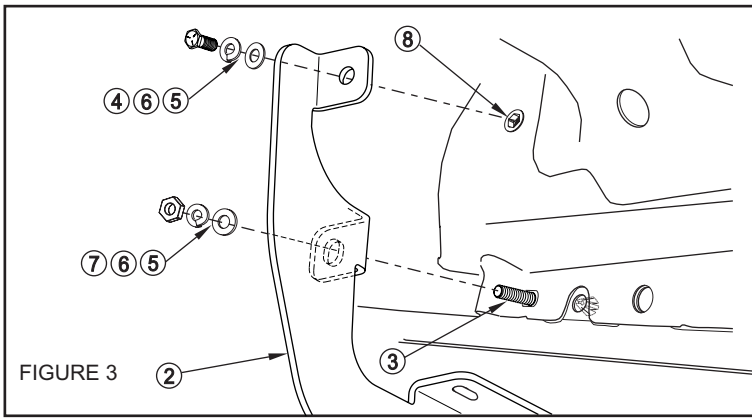


FIGURE 3

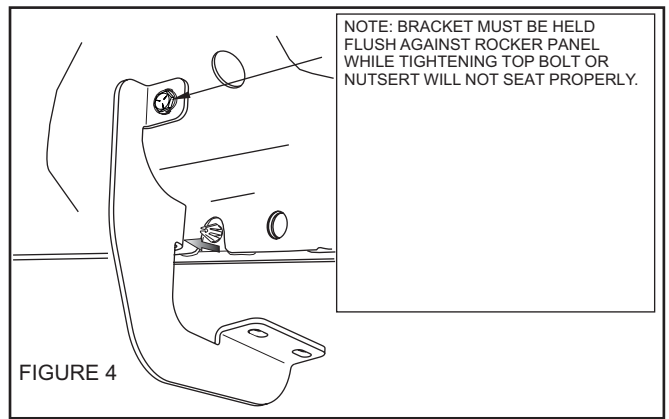


FIGURE 4

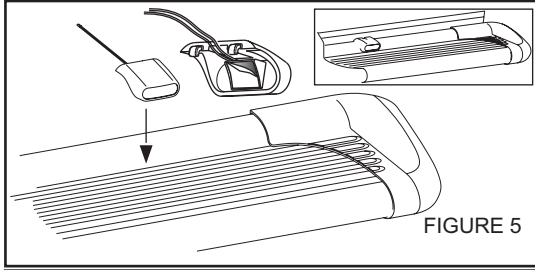


FIGURE 5

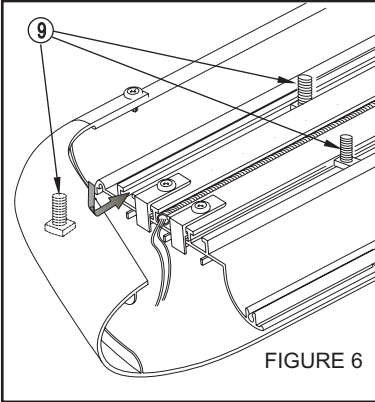


FIGURE 6

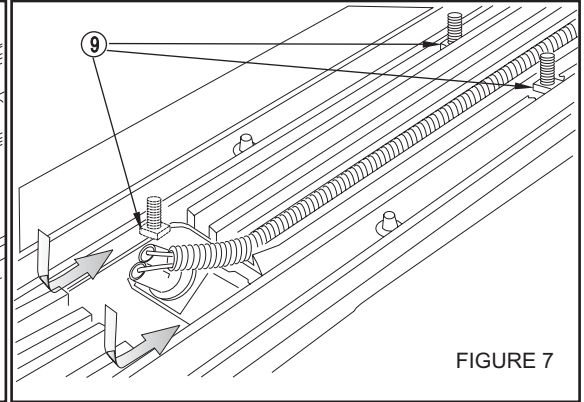


FIGURE 7

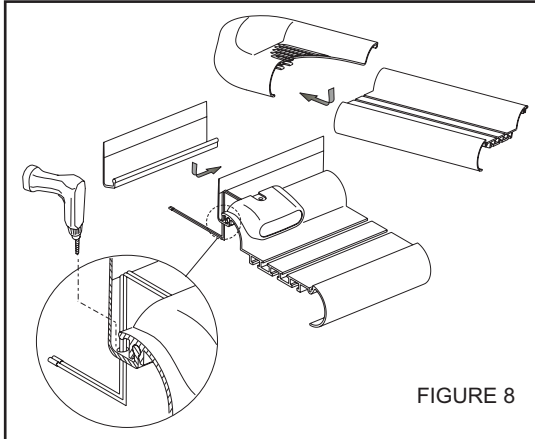


FIGURE 8

