

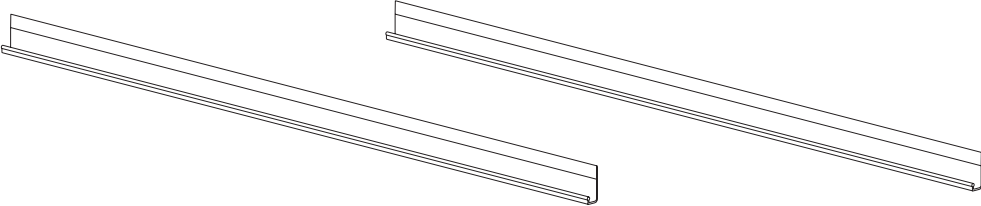


SIGNATURE OF QUALITY

INSTRUCTIONS-INSTRUCCIONES-CONSIGNES

APPLICATION: SURE-GRIP GAP STRIP KIT

AUTOMOTIVE PRODUCTS, INC.

<p>SURE-GRIP GAP STRIP KIT</p> <p style="text-align: center; margin-top: 20px;">27-9907</p>	
--	--

ITEM	QTY	CONTENTS - CONTENIDO - CONTENU	TOOLS - HERRAMIENTA - OUTILS
1	2	GAP STRIP	HACKSAW PHILLIPS SCREWDRIVER

- STEP 1. Remove the contents from box and check for damage. Verify all parts are present. Read instructions completely before beginning.
- STEP 2. Determine, by measuring, the desired length of the Sure Grip gap strip. Suggested lengths are 45" gap strip for a 54" board application, 60" gap strip for 69" board application, 63" gap strip for a 72" board application, 70" gap strip for a 79" board application, and a 84" gap strip for a 93" board application.
- NOTE:** All listed gap strip lengths are suggestions. Actual lengths may vary by vehicle application and personnel preference. **MAKE SURE TO DOUBLE CHECK ALL MEASUREMENTS BEFORE CUTTING.**
- STEP 3. Using a hacksaw, cut the gap strip to the desired length as shown. **SEE FIGURE 1.**
- STEP 4. Remove one of the end caps from the board using a Phillips screwdriver to remove the three end cap screws. **SEE FIGURES 2 AND 3.**
- STEP 5. Slide the gap strip into the gap strip channel on the back of the Sure Grip running board as shown. **SEE FIGURES 2 AND 3.** Reinstall the end cap and the three end cap screws.
- STEP 6. This step applies only if installing optional light kit (part number #27-6000) on appropriate vehicle applications. Set lights in appropriate location. Attach to running board as shown. Drill hole through plastic strip and run wires as shown. **SEE FIGURE 4.**

