



AUTOMOTIVE PRODUCTS,

# INSTALLATION INSTRUCTIONS

## SNYPER TRIPLE TUBE ROCK RAIL

### APPLICATION:

2007-2016 Jeep Wrangler 2 Door

2007-2016 Jeep Wrangler Unlimited 4 Door PART



### NUMBER:

42-6005, 42-6015

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	DRIVER ROCK RAIL	15MM SOCKET
2	1	PASSENGER ROCK RAIL	15MM WRENCH
3	12	M10 FLAT WASHERS (YELLOW ZINC)	RATCHET
			TORQUE WRENCH

**ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING**

### Driver/Passenger Side Items Opposites

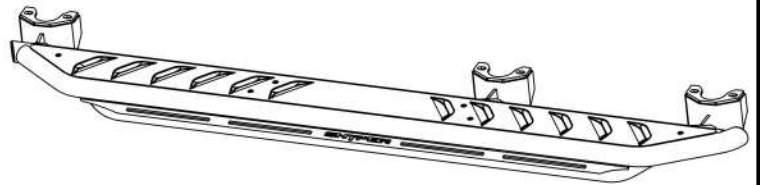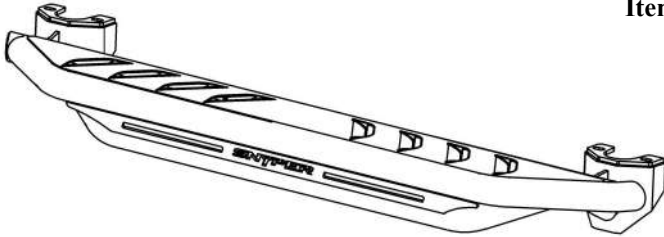

ITEM 1

2 DOOR

ITEM 1

4 DOOR

### PROCEDURE

- Remove contents from box, verify if all parts listed are present and free from damage. Carefully read and understand all instructions before attempting installation.  
**Failure to identify damage before installation could lead to a rejection of any claim.**
- Locate mounting location on the vehicle frame. **See Figure 1. Note:** The 2 door Jeep model will have 2 mounting locations each side and the 4 door model will have 3 mounting locations each side.
- Remove (2) factory M10 nuts on each mounting location. Align the Sidearm Rock Slider (Item 1/2) with the mounting locations and loosely secure using the provided M10 flat washers (Item 3) and the factory M10 nuts. **See Figure 2. Note:** There will be extra M10 flat washers for the 2 door Jeep model that will not be used.
- Align and adjust the Rock Rail as necessary and then tighten M10 hardware to 30-35 ft-lbs.

Align Snyder Rock Rail onto factory bolts after removing the factory M10 nuts.


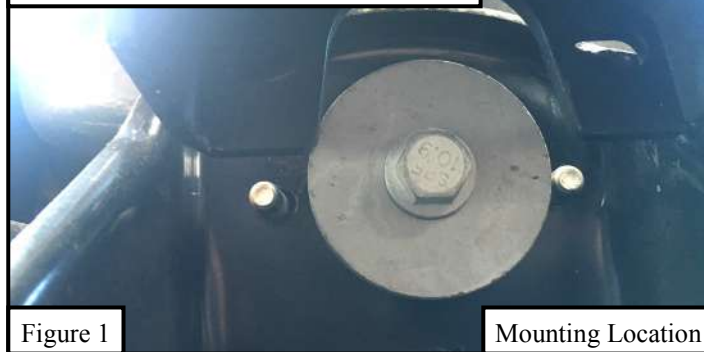


Figure 1

Mounting Location



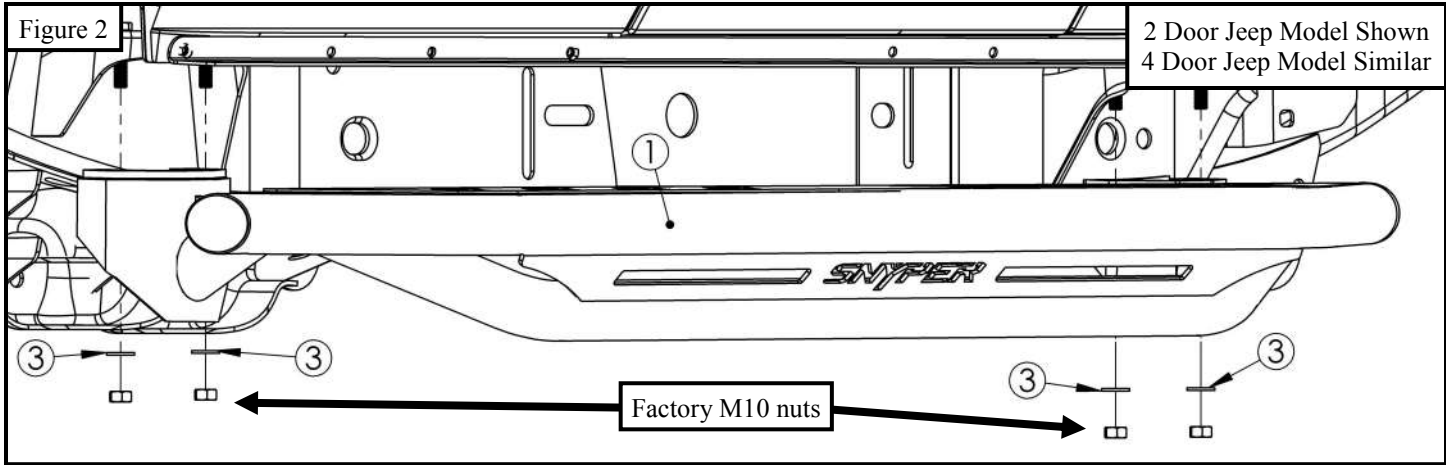

INSTALLATION COMPLETE



#### CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.

# Westin

SIGNATURE OF QUALITY

AUTOMOTIVE PRODUCTS, INC.



## WARNING



Failure to follow these instructions could lead to death, personal injury, and / or property damage.

### FASTENERS:

All Westin supplied fasteners must be utilized and installed in accordance with the installation instructions and apply torque to the specifications as defined. **DOUBLE CHECK ALL FASTENERS BEFORE INITIAL USE, AND PERIODICALLY IN THE FUTURE TO ENSURE PROPER FUNCTION AND SAFETY.**

### DRILLING:

Most Westin products do not require drilling for installation. If drilling is defined as required, use caution when drilling a vehicle. **FAILURE TO REVIEW AN AREA TO BE DRILLED MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

### EYE PROTECTION:

**ALWAYS WEAR SAFETY GLASSES OR GOGGLES DURING THE INSTALLATION PROCESS TO AVOID PERSONAL INJURY.**

### MAXIMUM TOWING/CARRYING CAPACITY:

The Westin Receiver Hitches will have a visible tow rating label affixed directly on the product. User should never exceed the vehicle manufacturers maximum tow and weight rating regardless of the capacity of the hitch. **FAILURE TO FOLLOW THESE GUIDELINES WILL VOID THE WESTIN WARRANTY AND MAY RESULT IN PERSONAL INJURY AND/OR INJURY TO OTHERS AS WELL AS VEHICLE DAMAGE.**

Rely on premium side steps and nerf bars made by Westin if you're looking for quality and efficiency.