


Installation Guide

Rear Sway Bar

Suits: V.A.G. A5(PQ35) AWD + FWD PLATFORM

(Always refer to the current catalogue for complete application listings)

N.B: These instructions should be used in conjunction with the workshop manual

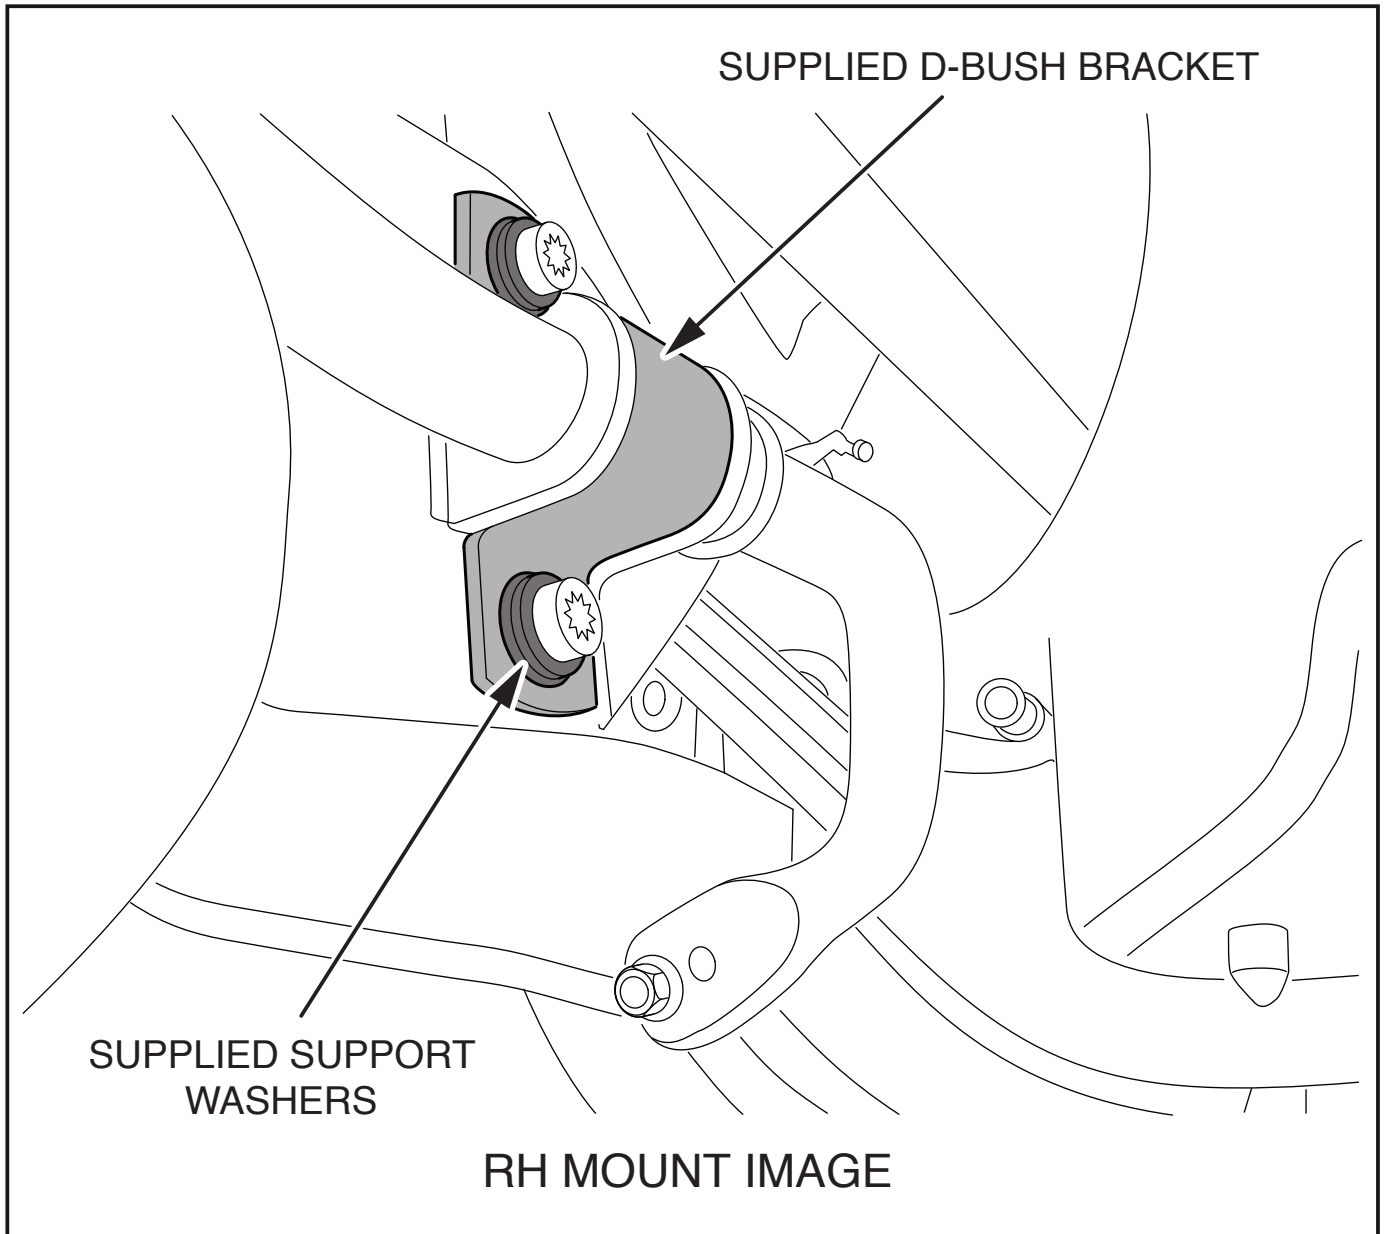

NOTE: Caution must be taken when installing the BWR21XZ 24mm rear sway bar to the vehicle without fitting the front BWF19 series or BWF20 series front swaybars as the balance of the vehicle will be altered. This may cause the vehicle to oversteer during sudden braking/steering manoeuvres.

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.