

FITTING INSTRUCTIONS


Sway Bar Link Upper Bushes Commodore VX Series 2 -VY.

WH Statesman 8/9/00-on

N.B: These instructions should be used in conjunction with workshop manual.

1. Raise the front of the vehicle and place on chassis stands.
2. Remove the front wheels.
3. Remove top retaining nut on the sway bar links and allow sway bar to drop away.
4. Remove old bushes and discard. **DO NOT DISCARD OLD WASHERS.**
5. Inspect strut leg tab and link rod for rust, pitting, wear and old rubber deposits. Clean, repair or replace as necessary.
6. Fit new replacement 2997A oval bush with the washers cupped away to allow articulation.
7. Refit all removed parts.
8. Retension retaining nut at ride height to manufacturers specification.

WHITELINE
Flat out

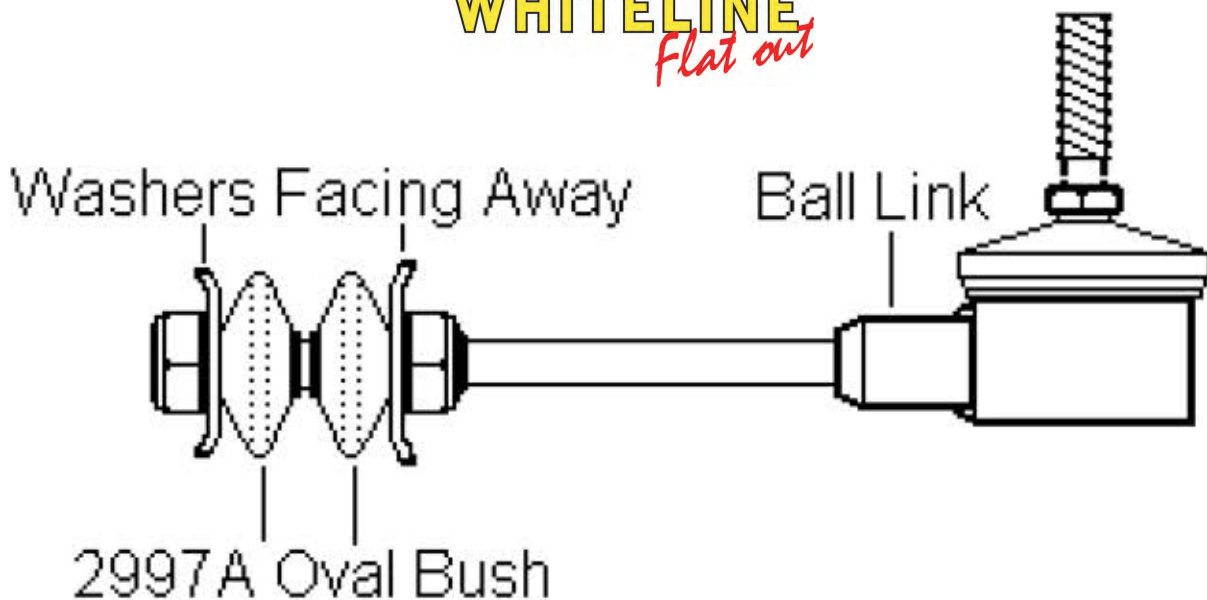

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.