

# Installation Guide


## FRONT ARM UPPER INNER BUSHING

Z 5242

Suits: Volkswagen

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual.

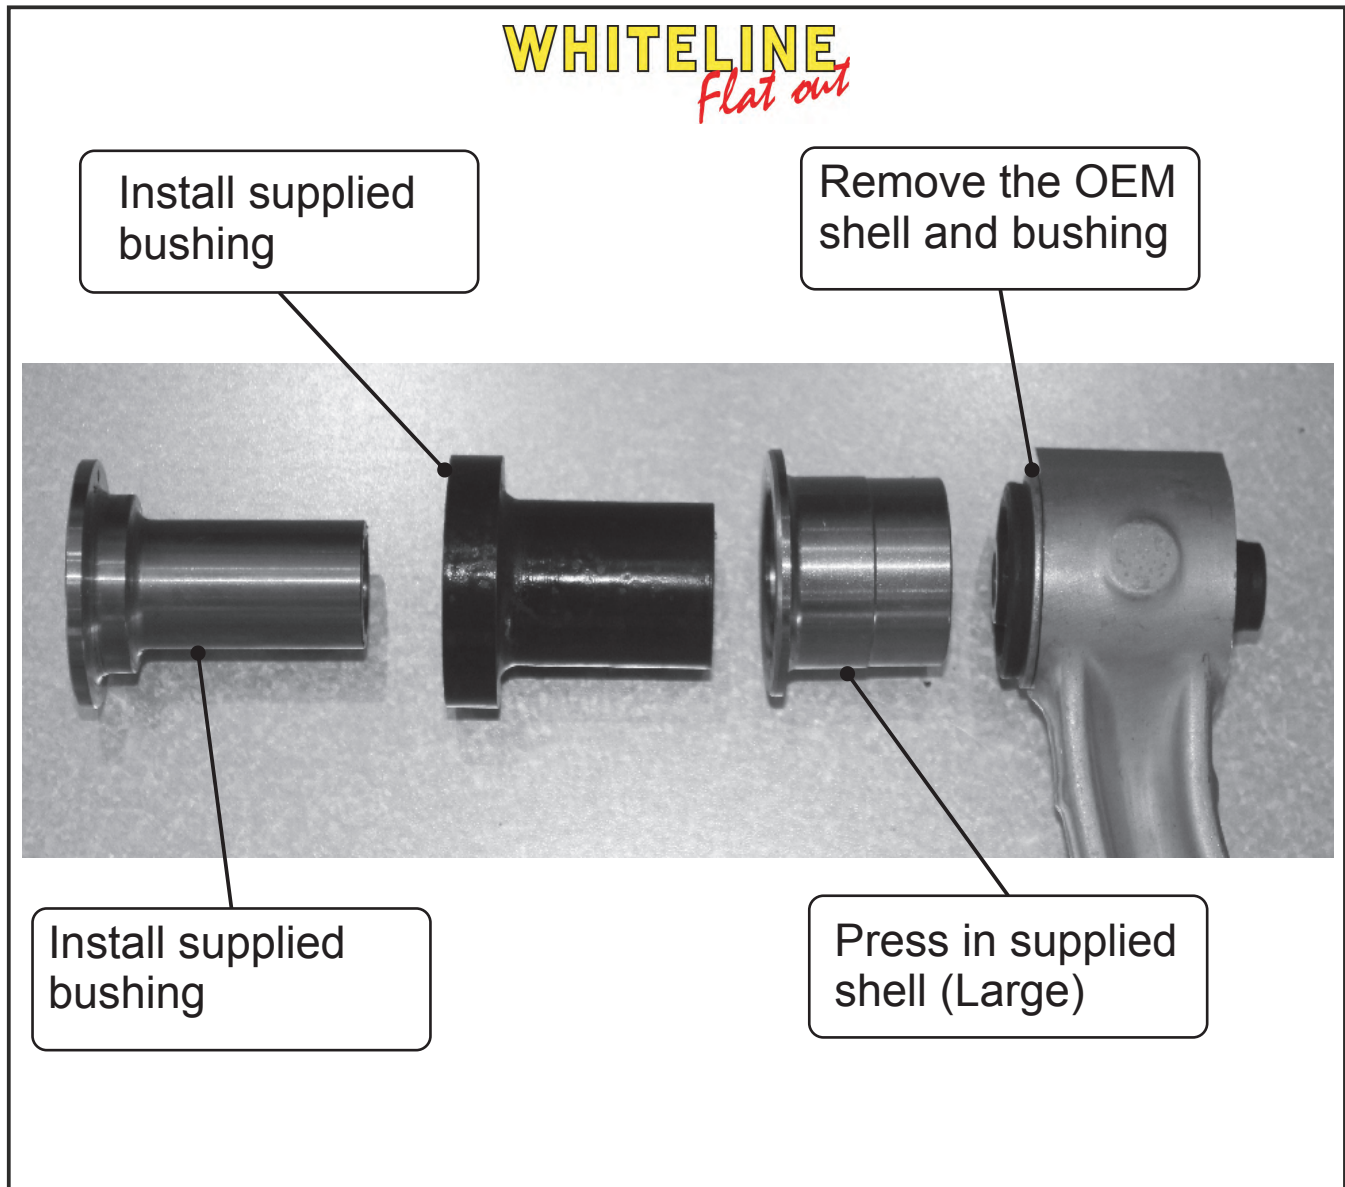

### \*Note:

- Remove any burrs from the arm eyelet.
- Lightly apply a thin layer of lubricant to the contact faces of the supplied bushing.
- Tension all removed bolts to manufacturers torque

N.B: It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.