


Installation Guide Rear Trailing Arm Bushings

Suits: BMW E90

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual. It is recommended that a licenced workshop or trades person carry out the below procedure and that workshop manual and relevant safety procedures are followed in addition to the below.

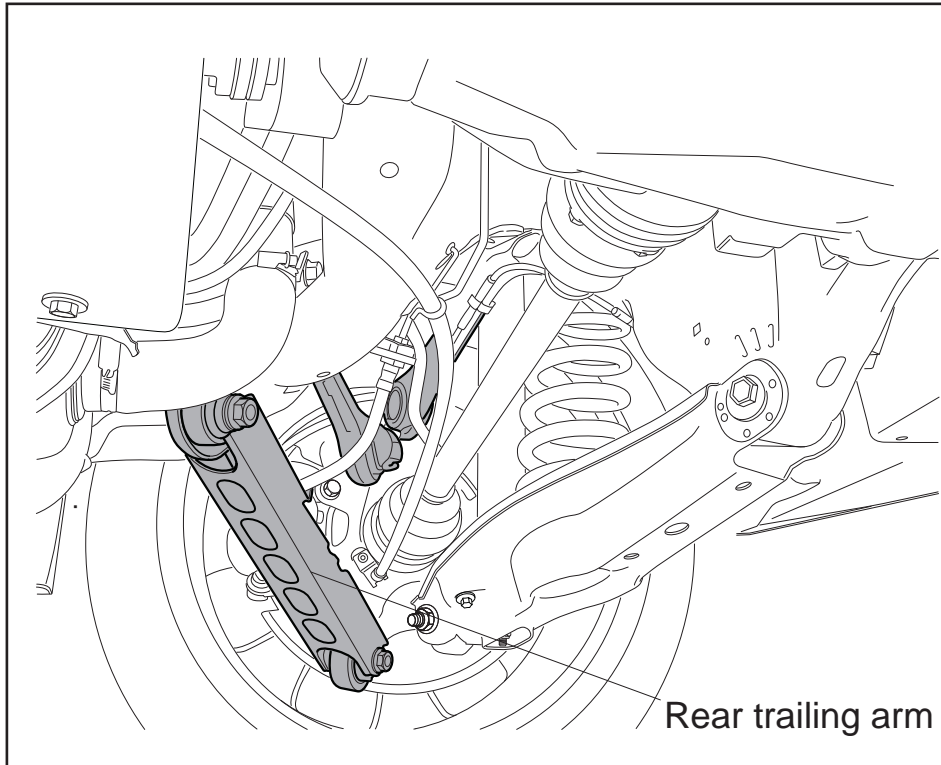

1. Raise vehicle and safely support.
2. Remove rear wheels.
3. Un bolt both inner and outer mounting points of the trailing arm.
4. Press/push out the old bushings from hub and chassis.
5. Press new bushings in so they are sitting evenly either side of hub.
6. Lubricate ID and face of bushing with the supplied grease only.
7. Re fit arm to vehicle and carry out wheel alignment.
8. Re check after initial 100kms


Z 5218
WHITELINE
Flat out

Installation Guide Rear Toe Arm Bushings

Suits: BMW E90

(Always refer to the current catalogue for complete application listings)

N.B: This installation guide should be used in conjunction with the workshop manual. It is recommended that a licenced workshop or trades person carry out the below procedure and that workshop manual and relevant safety procedures are followed in addition to the below.

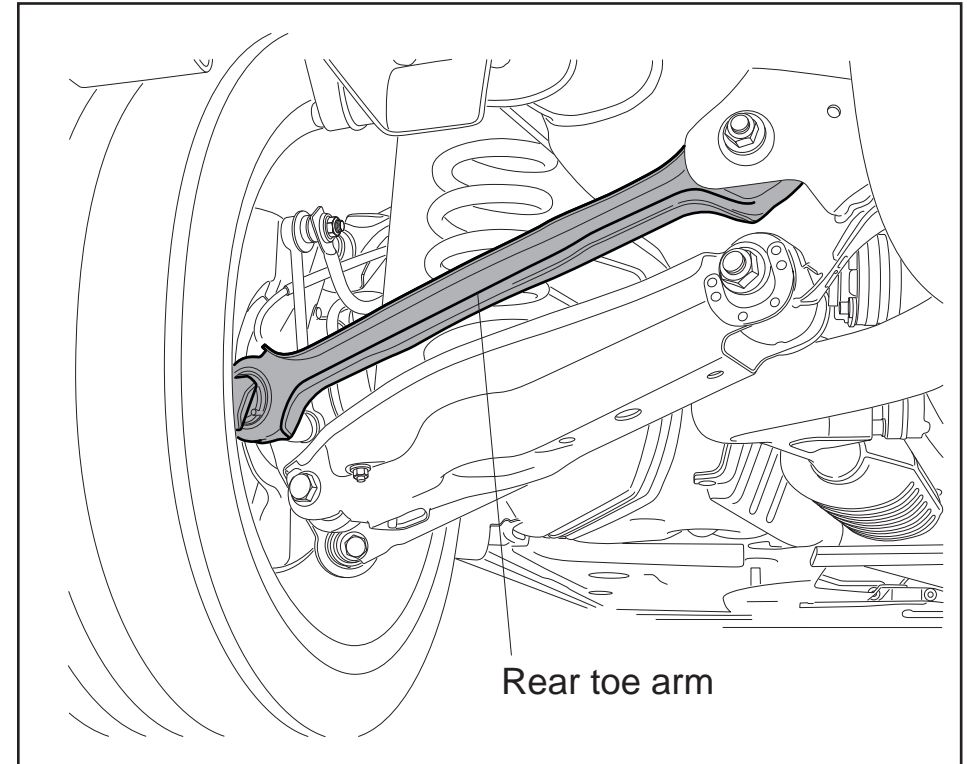

1. Raise vehicle and safely support.
2. Remove rear wheels.
3. Un bolt both inner and outer mounting points of the rear toe arm.
4. Press/push out the old bushings taking care not to damage the arm.
5. Press new bushings in so they are sitting evenly either side of arm.
6. Lubricate ID and face of bushing with the supplied grease only.
7. Re fit arm to vehicle and carry out wheel alignment.
8. Re check after initial 100kms