

Installation Instructions Adjustable Toe Arm

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.


Application: Ford Mustang S550

Contents: 2x Adjustable Control Arms

2x M14 Bolts

4x M14 Nuts

4x Lock-Out plates

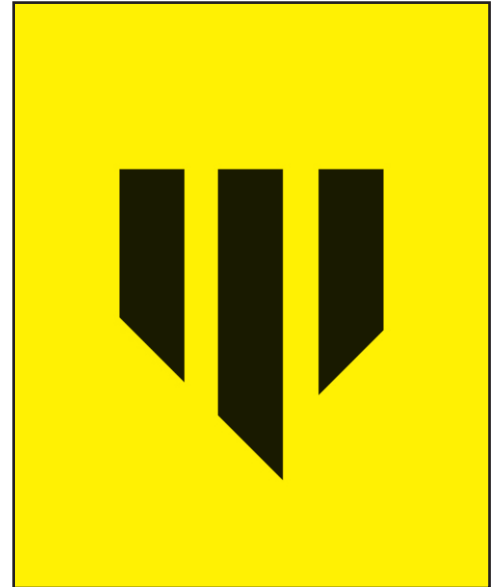

Note - it is recommended current wheel alignment settings be noted prior to install.

1. Raise vehicle evenly and safely support.
2. Un-bolt and remove original control arms. (including OE eccentric bolts/washers)

Refer image #1 - refer OE arm for appropriate install length by using existing bolts.

3. Bolt up Adj. Control arm - start with the inner point. The inner point will require new supplied M14 bolt/nut and new supplied Lock-Out plates.

(Lock-Out plates will replace OE eccentrics)

4. Bolt up outer point with OE bolt and new supplied M14 nut.


Do not tighten until vehicle is at ride height.

Caution - vehicle will require immediate wheel alignment prior to test driving.

5. Carry out wheel alignment and road test - re-check lock nuts.

Place Lock-Out plates on inner point

Re-check lock nuts after test drive

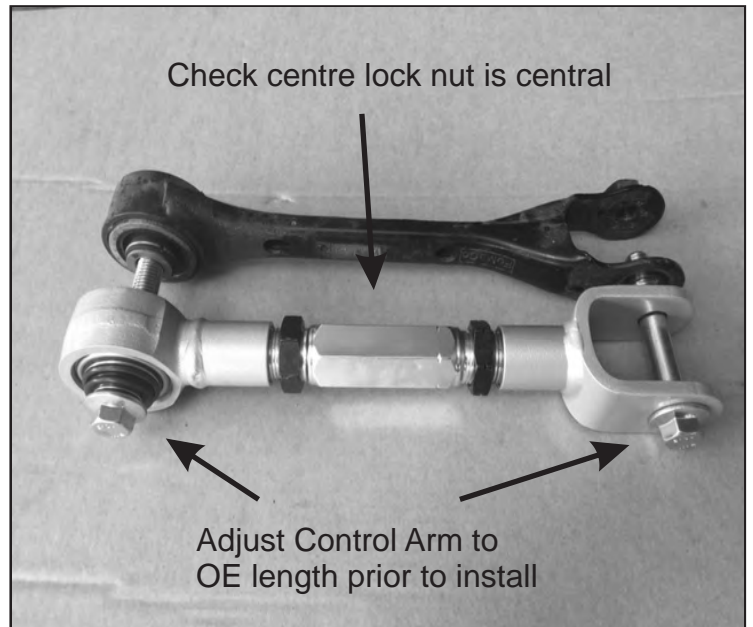

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.

Learn more about performance suspension parts we have.