


King Penn Industries Inc.
12V Adapter Plug Option

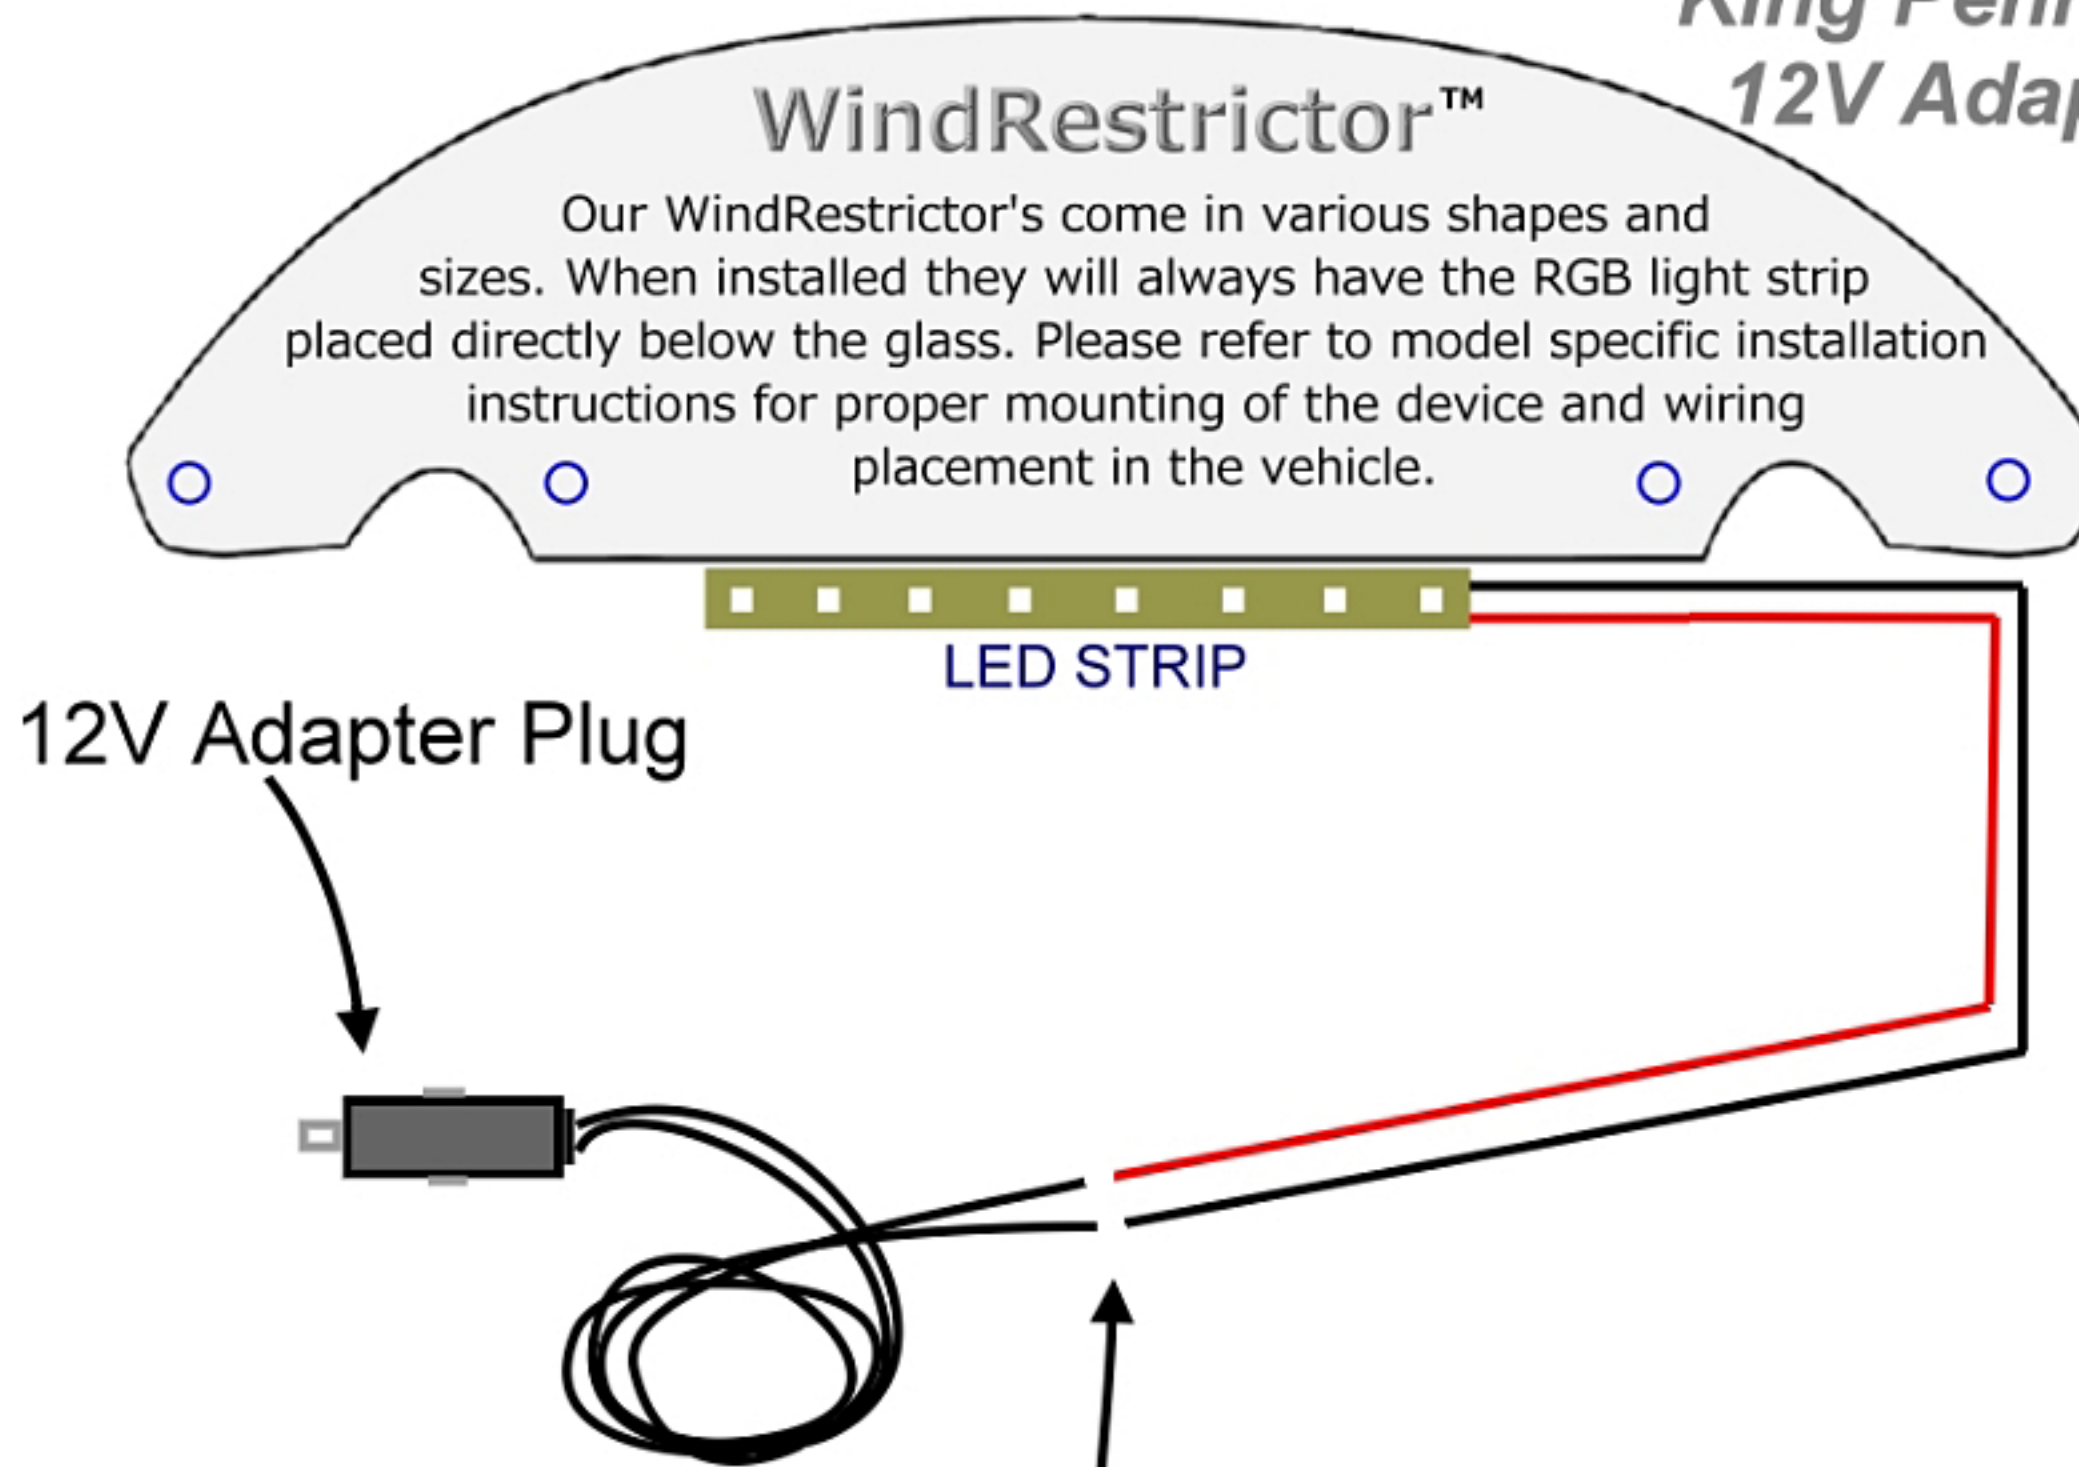

WindRestrictor™

Our WindRestrictor's come in various shapes and sizes. When installed they will always have the RGB light strip placed directly below the glass. Please refer to model specific installation instructions for proper mounting of the device and wiring placement in the vehicle.

LED STRIP

12V Adapter Plug

Attach the positive + to red wire from strip
Attach the negative - to black wire from strip

Depending on your vehicle, the engine may have to be turned on for power to work.

Step 1 Install your Windrestrictor.

Step 2 Attach the wires from plug to the wires from LED strip. Please use electrical tape after they are attached.

Step 3 Hide all excess wiring behind a panel or seat inside the car.

Step 4 Plug the adapter into any 12V socket inside your vehicle. They are usually in or under your dash as well as in a console.