

WindRestrictor®

World's First Fully Personalized Wind Deflector

Universal Coupe Installation Instructions

Parts included:


Wind deflector glass
LED Light System
Sample Cleaner

Attached stabilizing bar and plate
Gloves
Wire Clamp

Tools needed:

#10 Deep Socket wrench
Set with Extension Bar

Pair of plyers
Exacto Knife

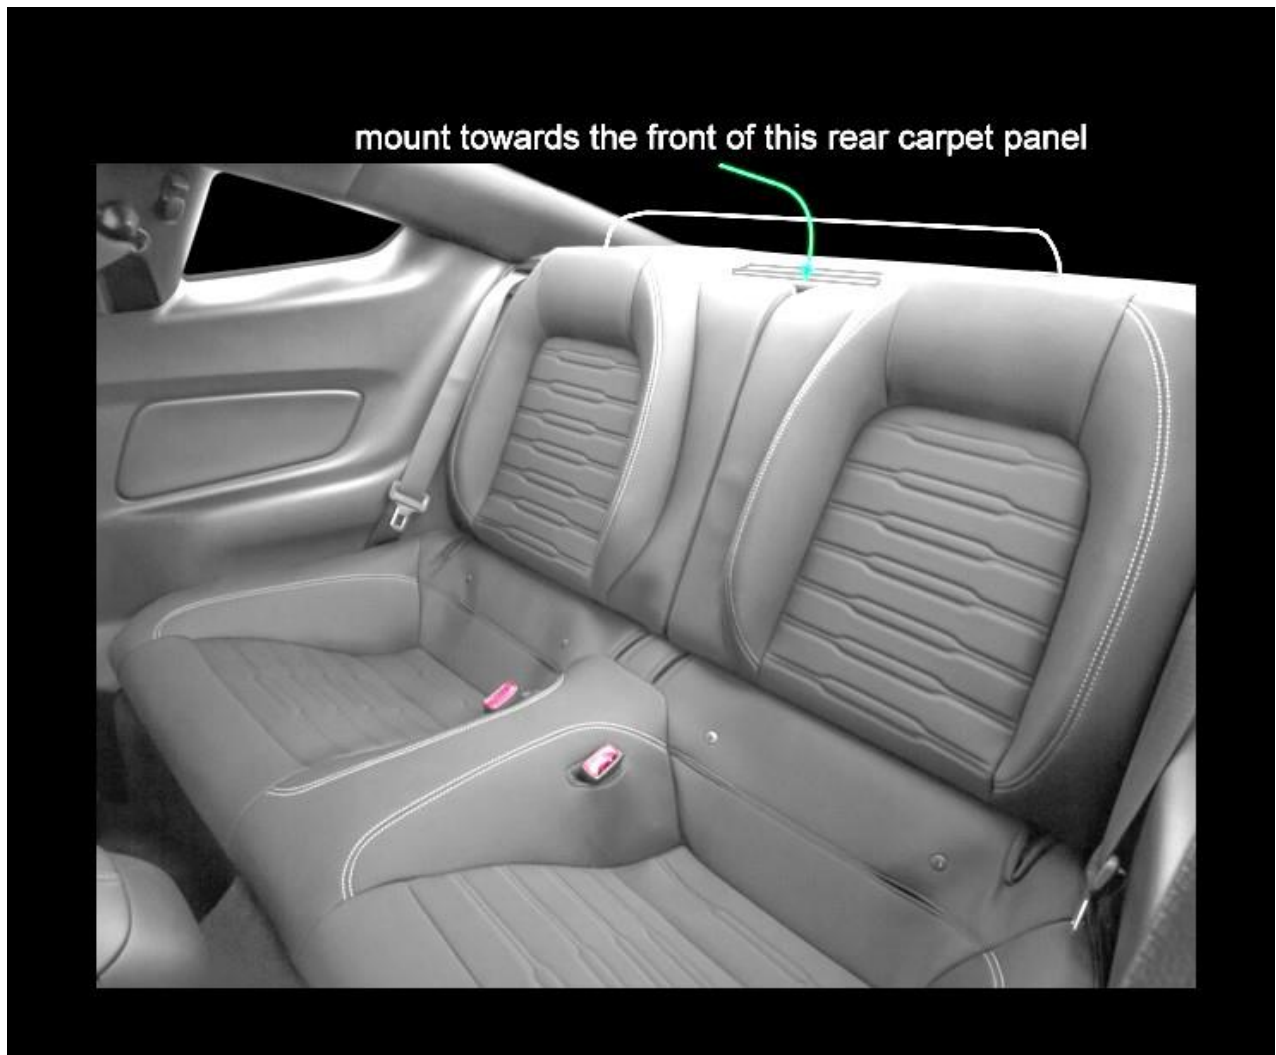

INSTALLATION INSTRUCTIONS

- Step 1** Move the seats to their most forthright position. Place glow plate on the rear panel so that the straight edge of mounting base is aligned with the forward edge of panel (*towards the front of car*).



- Step 2** Place Glow Plate in the center of back panel so that there is equal distance on both the left and right side.
- Step 3** Once the position is adjusted and on center, apply a firm downward pressure on the mounting base to lock Velcro onto the carpet. For vehicles with a non-carpeted panel, prep surface with 3M adhesive primer pen supplied. Apply a firm downward pressure on the mounting base and hold for 60 seconds. Allow 72 hours of curing time to achieve a 100% bond to surface.
- Step 4 Hard Wiring:**
- **Ground:** *black* negative wire from LED strip to car chassis or framework.
 - **Power:** Using the red wire clamp provided, connect the positive wire (black with gray stripe) from the LED strip to any 12-volt source. Consult owner's manual for wiring diagram.

Accessories:

When purchased, please refer to the product specific instructions provided with accessory.