



TWIN POWER HORNS MODEL 200

12 Volt


Your purchase of a Twin Power Horn set is a perfect choice to compliment your vehicle. Wolo's horns are manufactured with the finest of materials. Each horn is bench tested before it's packaged and comes with all mounting hardware and wire connectors.

TRUMPET INSTALLATION

Mount the Twin Power Horn Set in an area that is dry and safe from the exhaust manifold heat. Trumpets should be mounted facing downward; this will help prevent water from entering into the horn. Fasten the mounting bracket securely using the hardware provided.

WIRING - Two (2) Wire System - Fig. 1

1. Connect the RED wire from each trumpet to the RED wire that has the double female plug.
2. Connect the BLACK wire from each trumpet to the BLACK wire that has the double female plug.
3. Transfer the vehicle's horn wires, using their quick connect plugs, to the RED and BLACK wires of your new Twin Power Horns. Installation is complete

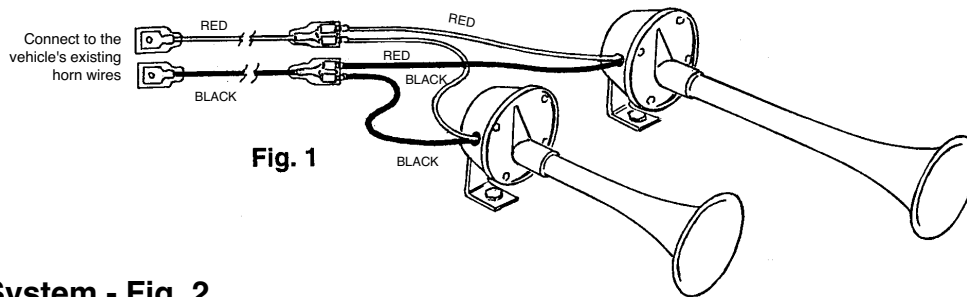

One (1) Wire System - Fig. 2

In vehicles where the factory wiring connects to only one (1) horn terminal first follow steps 1 and 2 above. Now simply transfer the vehicle's horn wire to the RED wire of your new Twin Power Horns. Ground the BLACK wire from your Twin Power Horns to any metal body bolt that is clean of paint and rust.

