

990701255



PLEASE READ THE FOLLOWING INSTRUCTIONS BEFORE INSTALLATION.

Sealed Splice Instructions


1. Determine proper sleeve for wire gauge.
2. Position stripped ends of wire into sleeve until wire hits stop.
3. Hand crimp each side of the sleeve separately using a crimping tool. Gently tug on the wires to make sure they are securely crimped.
4. Apply heat carefully to shrink the tubing. Recommend using a heat gun.
5. Check for electrical continuity.

COLOR CODE:	
Green	26-22 Ga.
Salmon	20-18 Ga.
Blue	16-14 Ga.
Yellow	12-10 Ga.

SEALED SPLICE

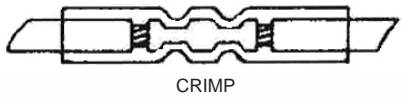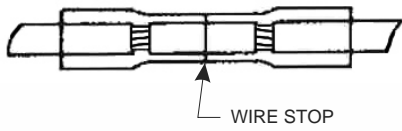

APPLY HEAT

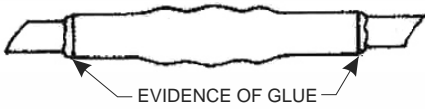

10.00