


1A Hi Rise Kit


YAKIMA / Ensemble

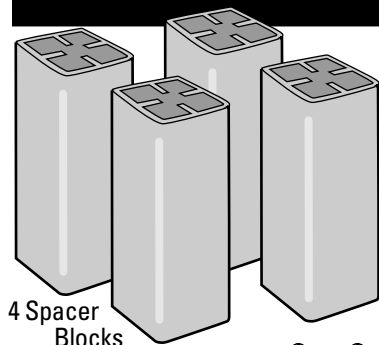


4 Spacer
Blocks
4 entretoises




4 Pal Nuts
4 capuchons Pal Nut

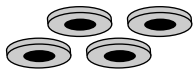


4 Washers
4 rondelles

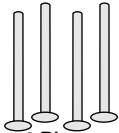

4 Rivets
4 rivets

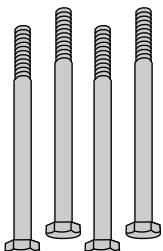


4 Long Bolts
4 boulons longs

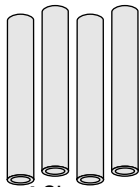

4 Sleeves
4 manchons

The **1A Hi Rise Kit** is designed to be used with **1A Raingutter Tower** carrier. Use of the High Rise Kit will provide 3 1/2" of additional crossbar height over raised or elevated roof lines, or unusually tall factory installed luggage carriers.

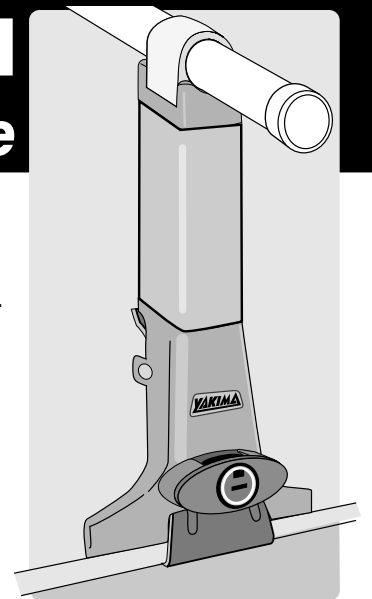

INSTRUCTIONS:

1. Remove the rivet that is included with your 1A Towers. The rivet will need to be cut with side-cutting pliers or fine-tooth saw. (Fig.1)
2. Unscrew the Shear Block* and Shear Block base**, and remove the short bolt and washer from the Tower. Replace the short bolt and washer with the Long Bolt and its washer.
3. Slide one of the sleeves onto the long bolt end then slide the Spacer Block over the sleeve. Re-thread the Shear Block and Shear Block base onto the Long Bolt.
4. Replace the cut rivets with the rivets supplied in this kit. To secure the rivets, push a Pal Nut onto the small end pushing **FIRMLY** to seat it. (Fig.2)
5. Repeat the procedure for the remaining three towers.
6. Assemble the carrier and adjust it to your vehicle following the instructions supplied with the 1A Towers.

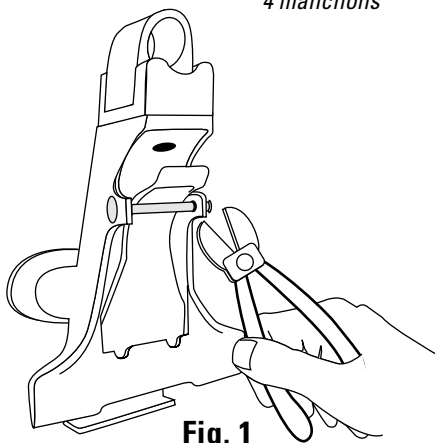


Fig. 1

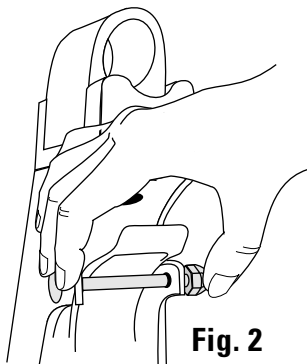


Fig. 2

