

YAKIMA® HITCH FIT TIPS




1. CHECK YOUR DEPTH

To ensure a proper Yakima hitch carrier fit, it's important to measure the depth of your receiver. Determine the hitch depth measurement (A) by doing the following.

With a ruler inserted in the receiver, measure from the center of the hitch mounting hole to the point where you make contact with an obstacle. This obstacle could be a hitch backstop (a 'ledge' or 'lip' inside your hitch's receiver that prevent overloading on Class I hitch receivers). If you already know you have a Class I hitch, measure the distance to the back-stop. This is measurement A. Using the table below, compare your measurement to see which hitch rack will work with your vehicle.

If you do not contact a back-stop first or your hitch receiver does not have a back-stop, another potential point of contact could be an undercarriage-mounted spare tire or the undercarriage itself. Measure back to the spare tire or undercarriage, whichever you contact first. This is your 'A' measurement. Using the table below, compare your measurement to see which hitch rack will work with your vehicle. **Your measurement A needs to be equal or greater to the product measurement listed in the table below for a proper fit of a Yakima hitch rack**

If your vehicle has a bumper or a rear-mounted spare tire, proceed to step 2 and 3.

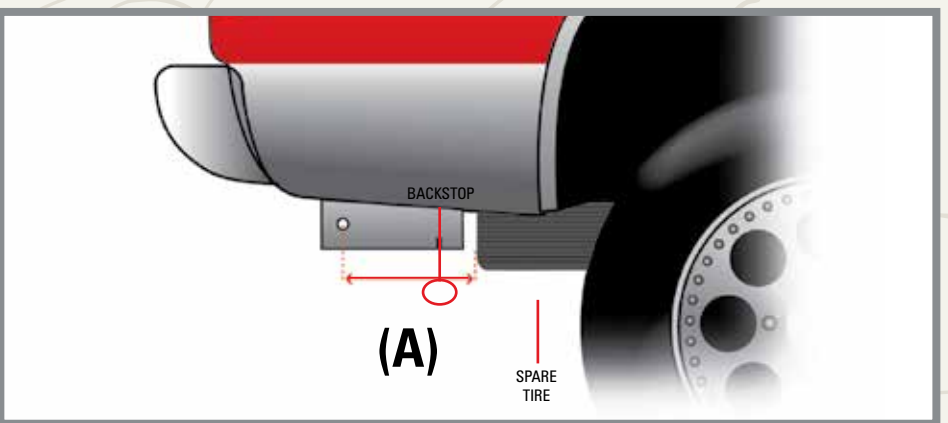


	MINIMUM DISTANCE (A) REQUIRED FOR PROPER FIT
HOLDUP 2"	3"
HOLDUP 1.25"	2"
STICKUP	2"
HIGHLITE SERIES	2.4"
DOUBLEDOWN	1.5"
DOUBLEDOWN ACE	1.6"
FLIPSIDE	2"
SWINGDADDY (2" only)	3"
KINGPIN	1.5"
BIGHORN 1.25"	1.5"
BIGHORN 2"	3"

2. CHECK YOUR BUMPER*

The next step is to check to make sure your bumper will not interfere with the Yakima hitch rack.

Measure the distance from the center of the mounting hole on your hitch receiver to the end of your bumper. This is fit measurement B.

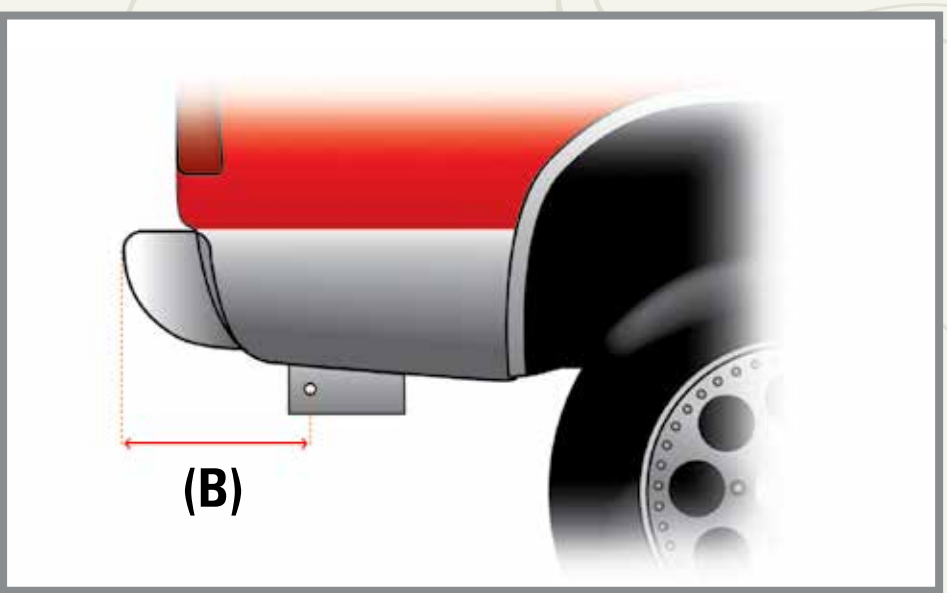


	MINIMUM DISTANCE (B) REQUIRED FOR PROPER FIT
HOLDUP 2"	9.2"
HOLDUP 1.25"	10.2"
STICKUP	7.6"
HIGHLITE SERIES	8.3"
DOUBLEDOWN	9"
DOUBLEDOWN ACE	9.1"
FLIPSIDE	7.6"
SWINGDADDY (2" only)	6.5"
KINGPIN	5.7"
BIGHORN 1.25"	11.1"
BIGHORN 2"	10.5"

3. CHECK YOUR SPARE TIRE*

If you have a spare tire on the back of your vehicle it may interfere with the installation of your Yakima hitch rack. This guideline will help you make sure it won't get in the way.

Measure the distance from the center of the mounting hole on your hitch receiver to the end of your spare tire. This is fit measurement C.

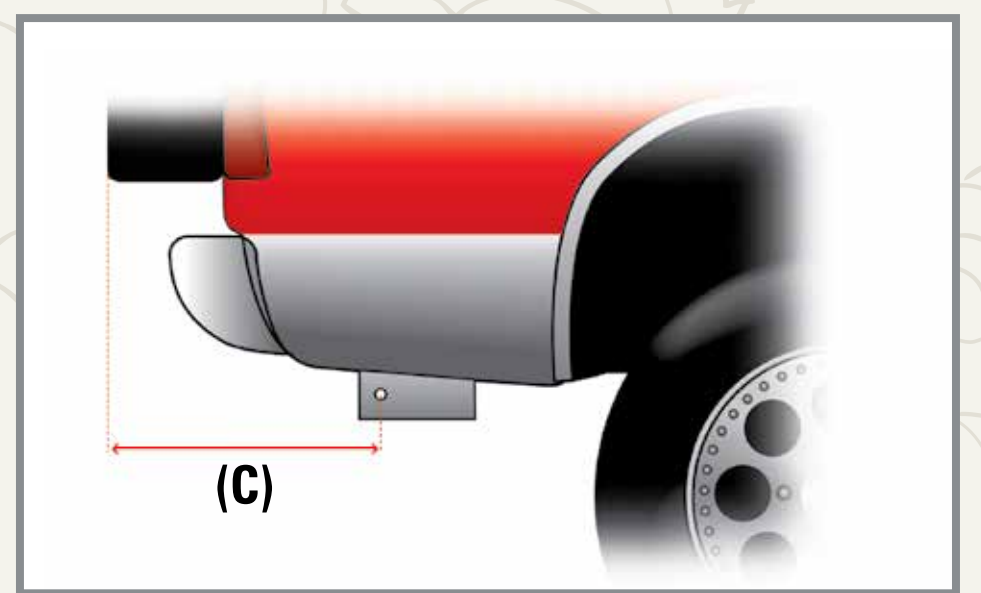

	MINIMUM DISTANCE (C) REQUIRED FOR PROPER FIT
HOLDUP 2"	8.5"
HOLDUP 1.25"	9.5"
STICKUP	6.5"
HIGHLITE SERIES	7.9"
DOUBLEDOWN	8.6"
DOUBLEDOWN ACE	8.5"
FLIPSIDE	8.9"
SWINGDADDY (2" only)	7.8"
KINGPIN	10.7"
BIGHORN 1.25"	11.1"
BIGHORN 2"	10.5"

*** Based on variances in bumper and rear-mounted spare tire heights, you may have more or less clearance than what is stated on this chart. When you are fitting a hitch rack, it is always good to visit an authorized Yakima dealer first, to ensure a proper fit before ordering.**