


## CONTENTS

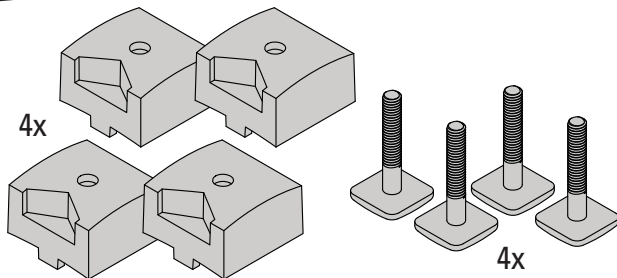

For use with Yakima FatCat snow mounts.

**1**

Remove the clamps from each mount.

4X

**2**

Remove an endcap from each bar.

2X

**3**

Slide two t-bolts into the slot on each crossbar. Match the distance between mounting holes on your FatCat.

Note: Kit works at both mounting positions on FatCat Evo 6.

4X

**4**

Install the Low Rise blocks onto the t-bolts. Be sure to orient the blocks as pictured below.

4X

**5**

Place the mounts onto the blocks.

**2X**

**6** Install the washers and knobs. Tighten the knobs down until you achieve resistance of 65N (15 lb) when closing the levers.

**65N (15 lb)**

**2X**

Check that the mounts are secure. Repeat step 6 if there is movement. Read and adhere to all warnings and cautions in your FatCat instructions.

**8**

Reinstall the endcaps.