




YAKIMA

JayHook


24" Min. / 61 cm

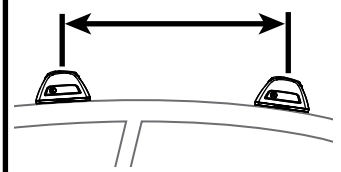

80 lbs. Max. / 36.3 kg

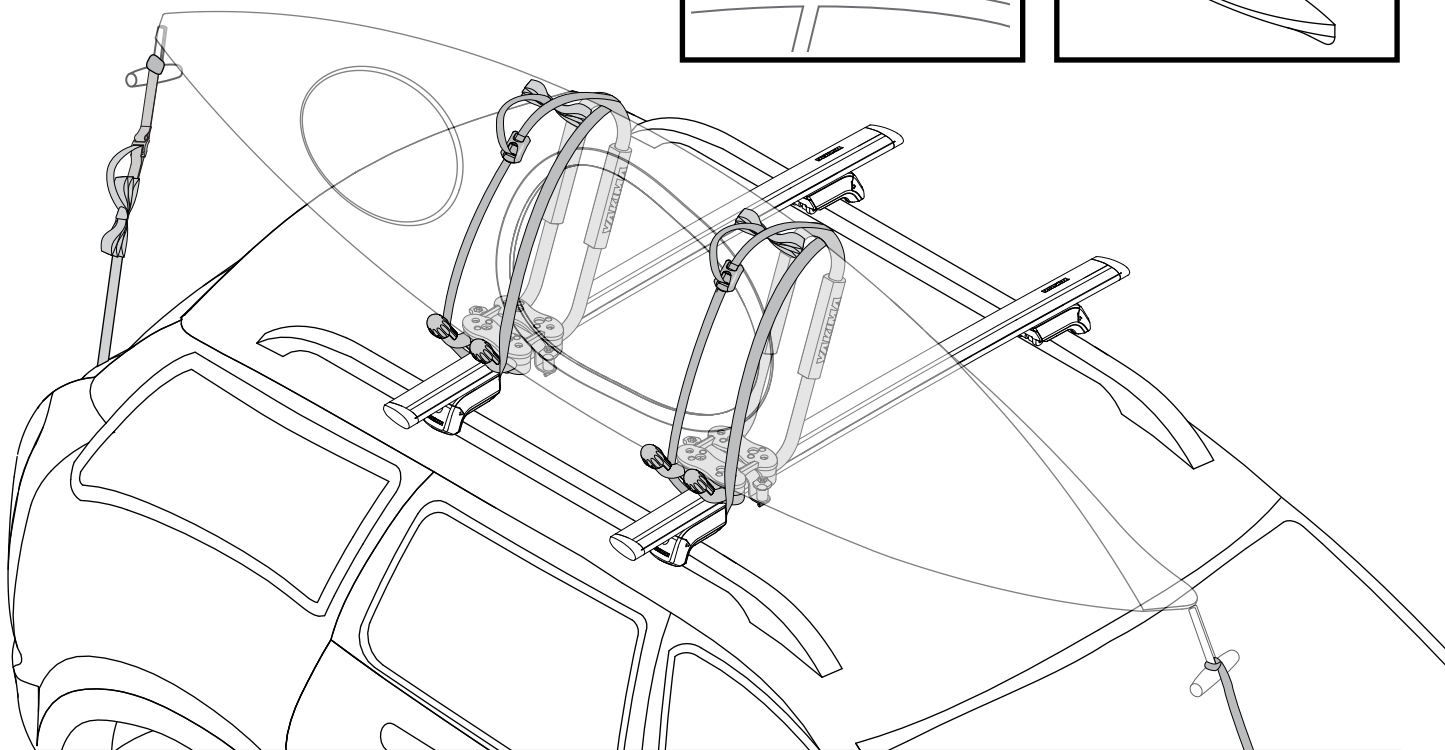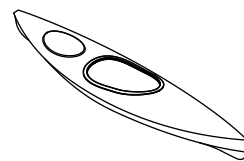


CONTENTS

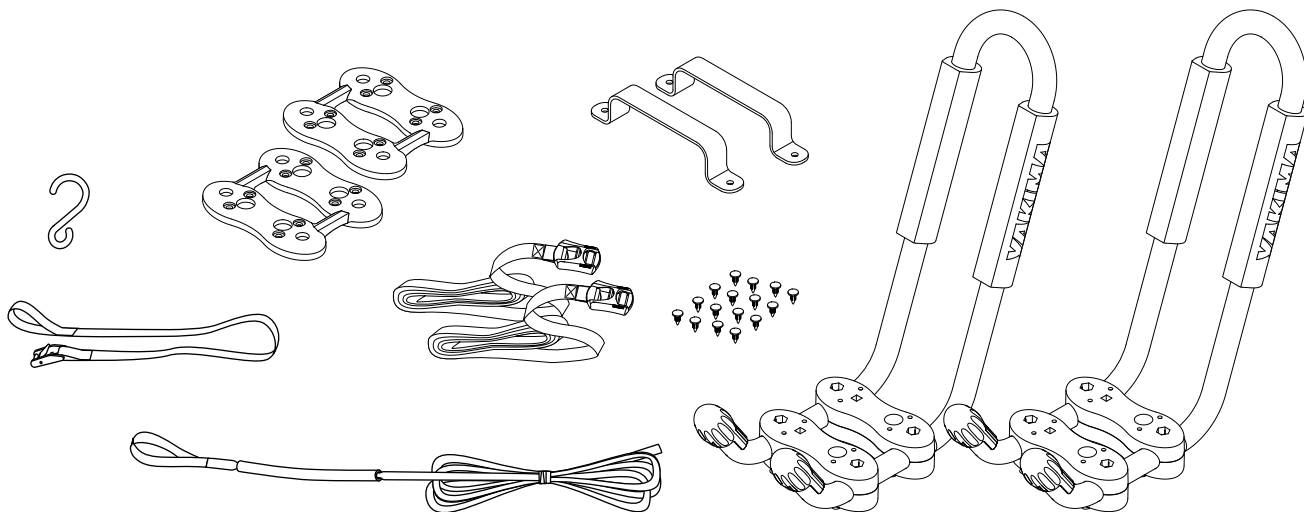


1


Install metal bracket
over bases.

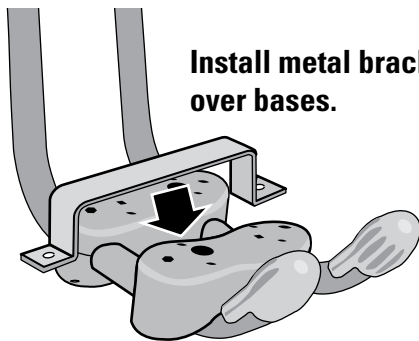**2**

With brackets in place,
attach pads onto bases.

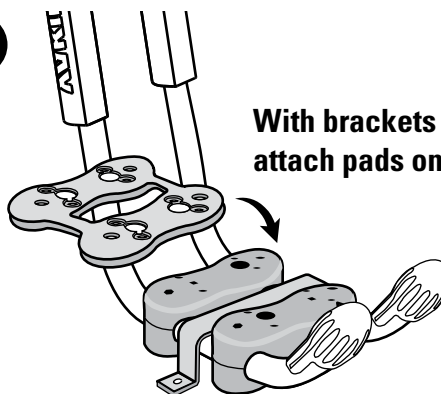**3**

Attach base pads to bases with plugs.

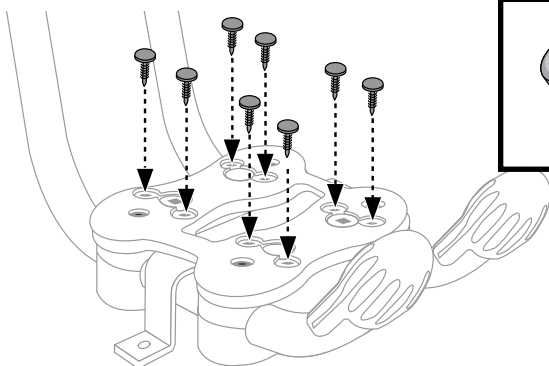


Plugs can be used only once.

*If you reconfigure the bases, see your Yakima
Dealer for replacement plugs # 8890058.*

4


Attach bails to metal brackets using long bolts.

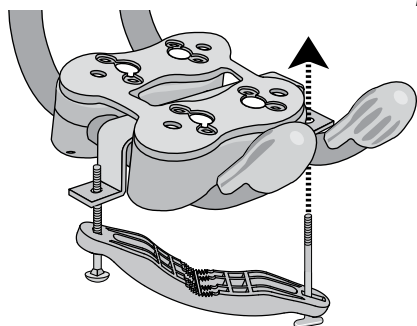


*Insert bolt into round
hole, and T-bolt
into slotted hole.*

5



ATTACH THE KNOBS.

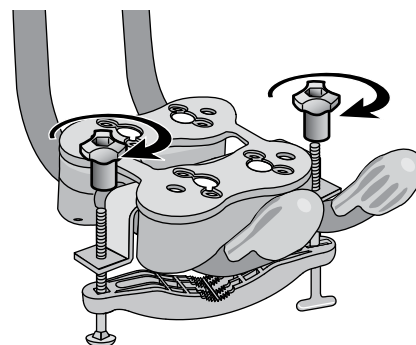**6**


With the T-bolt free, position the
Jayhooks on the factory crossbars.

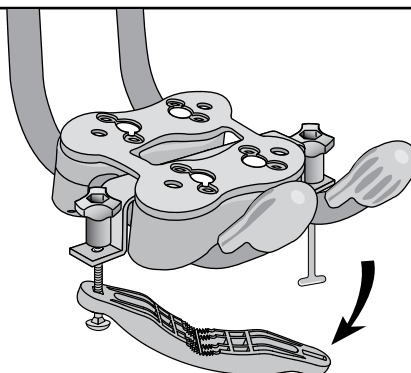


7 MAKE SURE THE CARRIERS SIT VERTICALLY ON THE BARS.

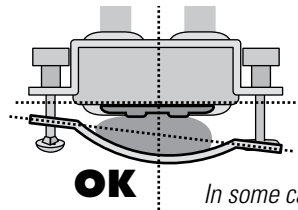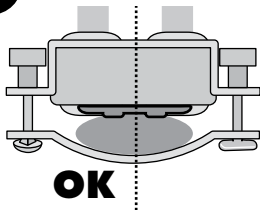

In some cases, the bracket and the bail may not be parallel.

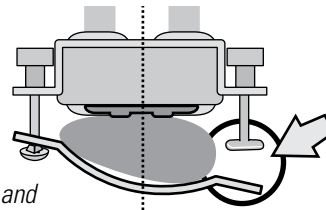


If the bolts seem too short, use the longer bolts included in this kit.

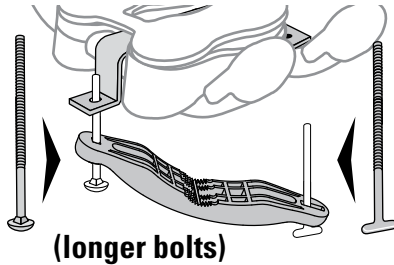


BOLTS MUST NOT EXTEND ABOVE THE KNOBS.

If bolts extend above the knob, you must use the shorter bolts.

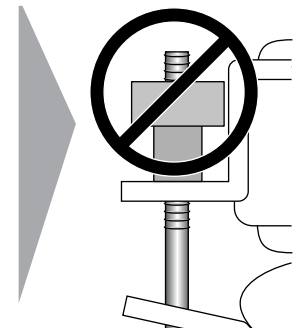

8



TIGHTEN THE KNOBS.

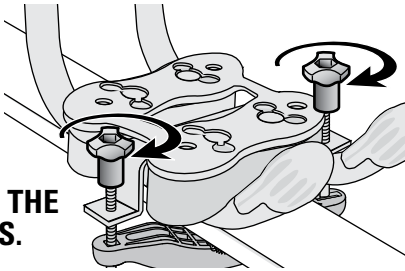

9

Adjust foam pads to support boat at contact points.


Note: Some lacquer hull finishes may stick to pads. Protect with soft cloth.

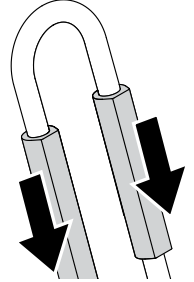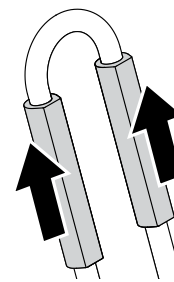


10

LOAD THE BOAT, AND TIE IT DOWN.

- Loop strap around hoop of JayHook.
- Bring straps up and over boat so that they hang in front of the boat.

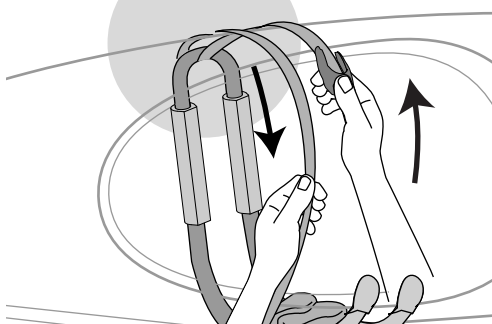


- Slide buckle up so that it hangs at top edge of boat.
- Thread end of strap around tower or crossbar.

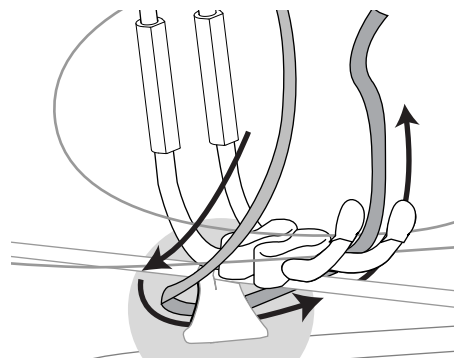


11

SECURE STRAPS.


Press open buckle and insert end of strap.

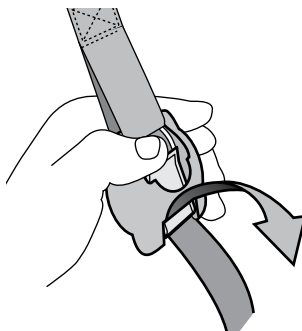

- To tighten straps, hold and pull.
- Secure the loose ends.

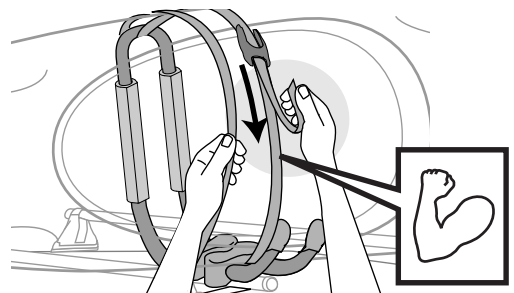


- 12** Attach buckle strap to bow and stern of boat.

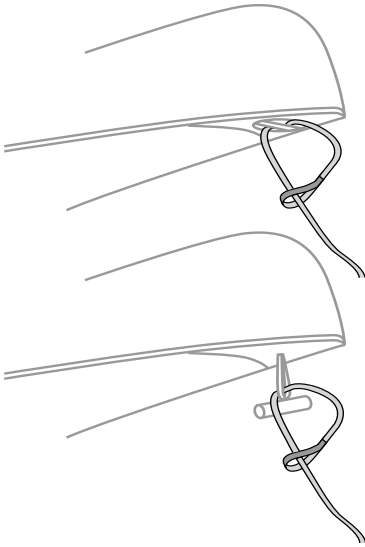


Attach strap to *grab handle* or *rescue bar* and pull tight.


- 13** Attach hook to plain strap loop.

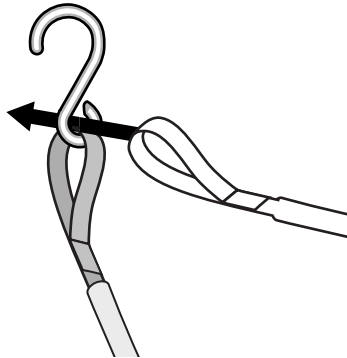


- 14** Hook the strap to a metal surface on the bumper, tow loop, or frame hole using hook.

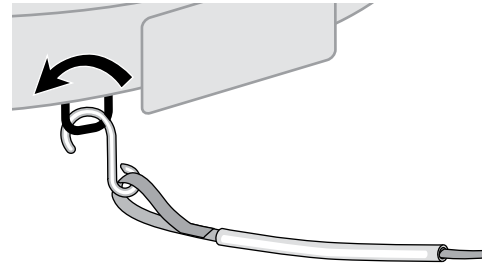

- 15** Slide plastic tube to protect vehicle at contact point.

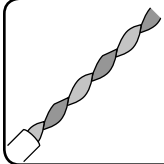


NOTE: Twisting the strap will help reduce wind vibration.

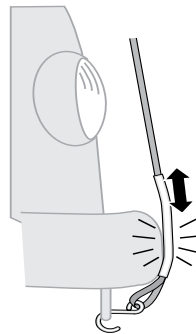


- 17** Adjust strap tension by pulling plain end.

- Apply even pressure to front and rear straps.
- Bind up and tie off any excess strap.

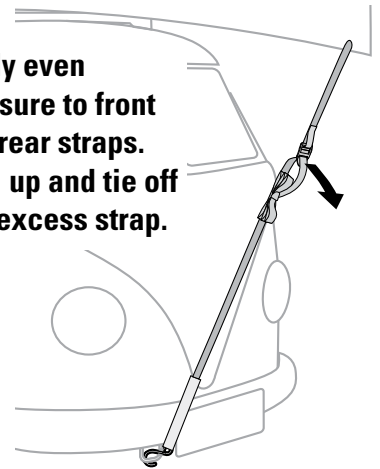

- 16** Insert end of plain strap into buckle.

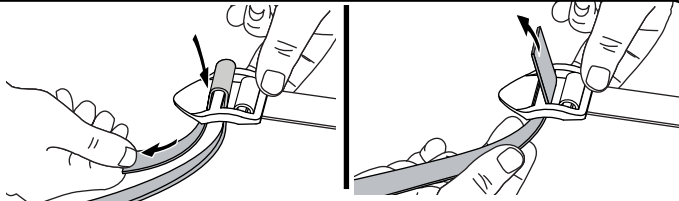

Failure to secure front and rear of long loads to ends of vehicle can result in property damage, personal injury, or death.



BEFORE DRIVING AWAY

- Test movement by rocking boat.
- Tighten again if loose.
- READ ALL CAUTIONS AND LIMITS ON NEXT PAGE.














Check straps periodically during travel and tighten if necessary. Replace any straps that are worn or frayed before using (see your Yakima dealer).

SEE YOUR ACCESSORY INSTRUCTIONS FOR IMPORTANT WARNINGS









IMPORTANT!

Be sure to read all the warnings and warranty information contained in the insert accompanying these instructions!

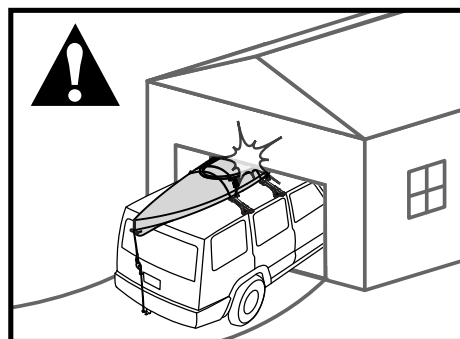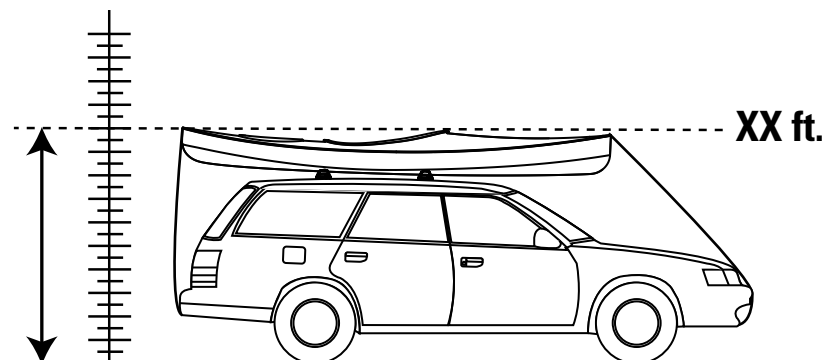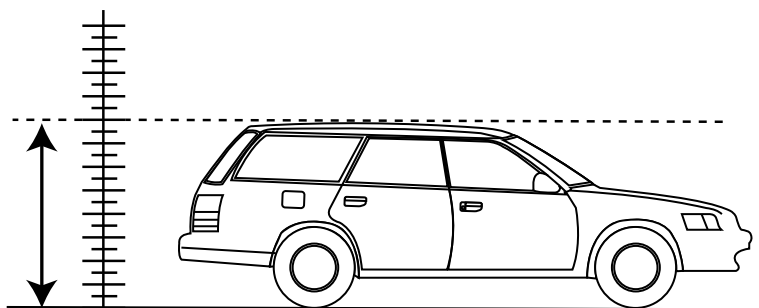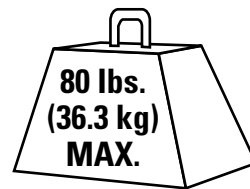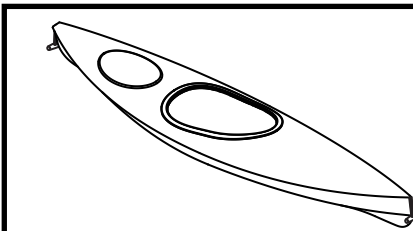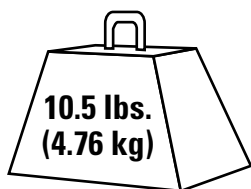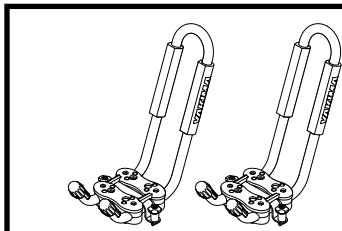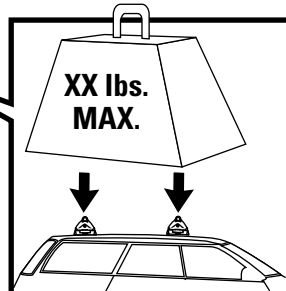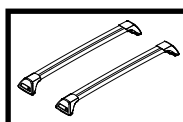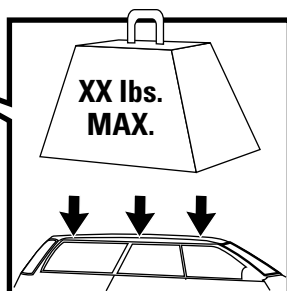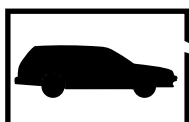

Record Height Here.



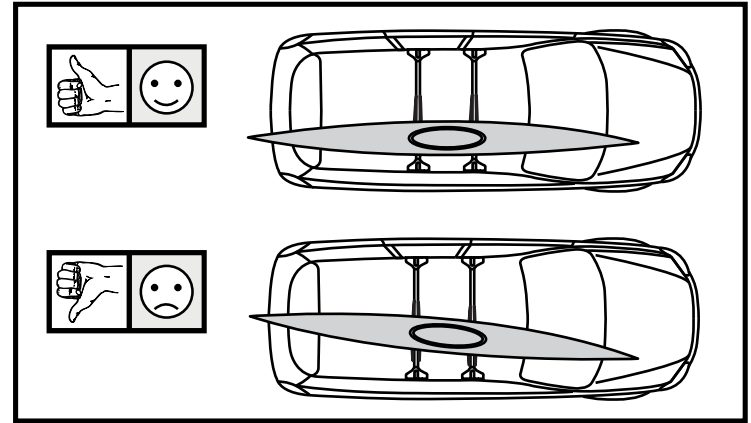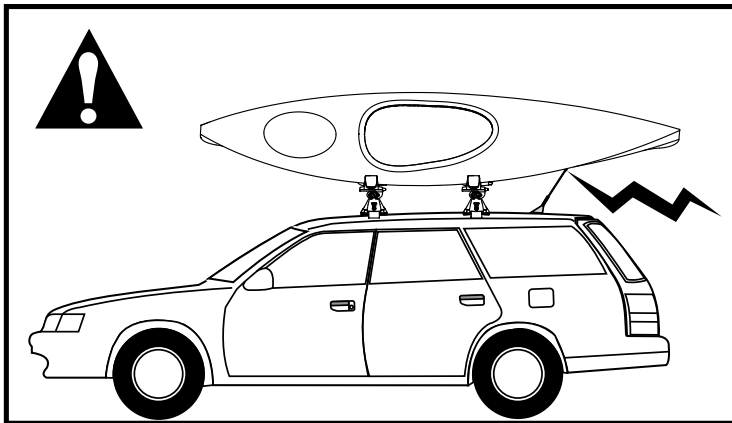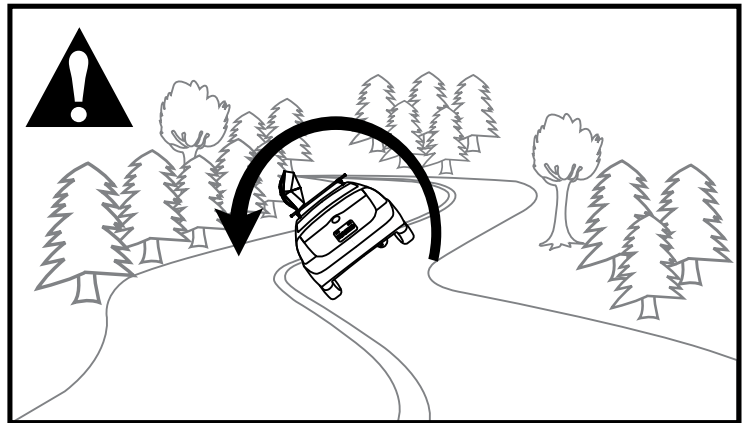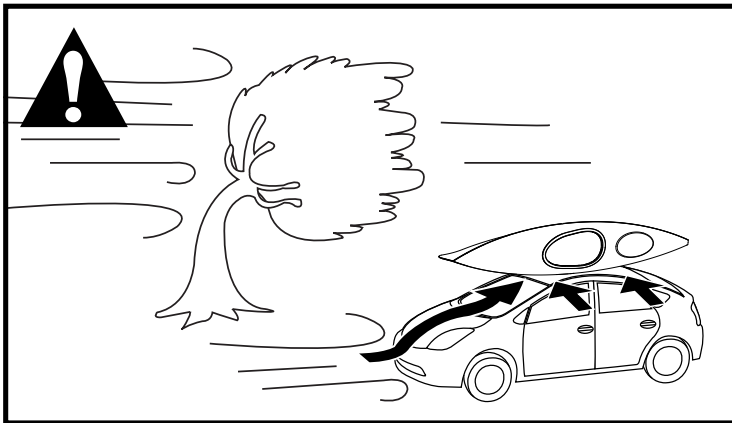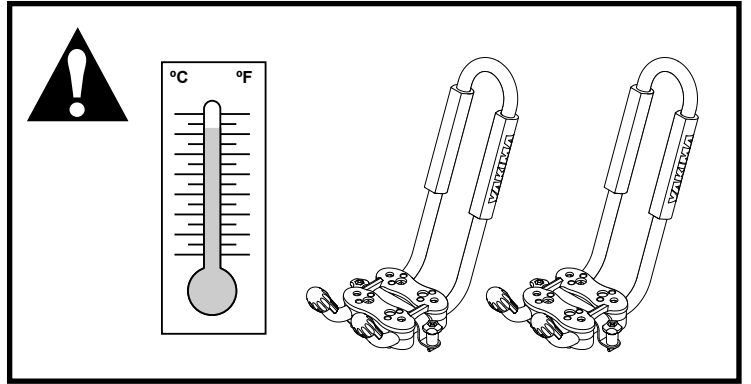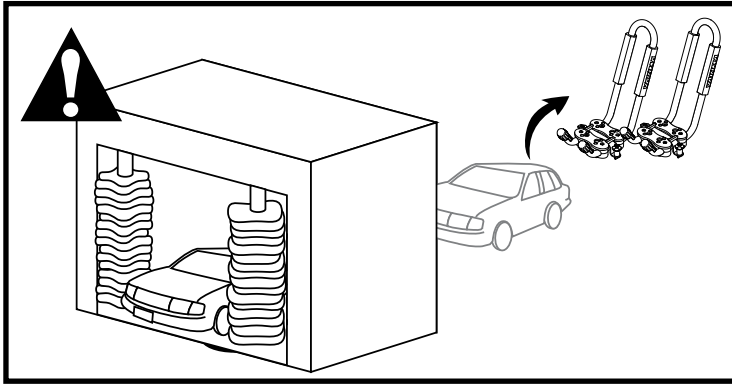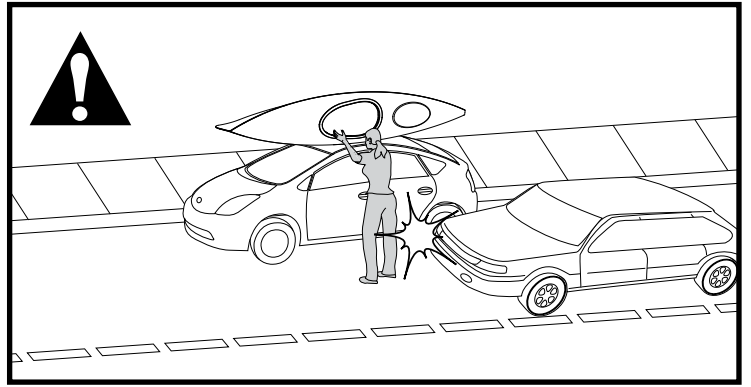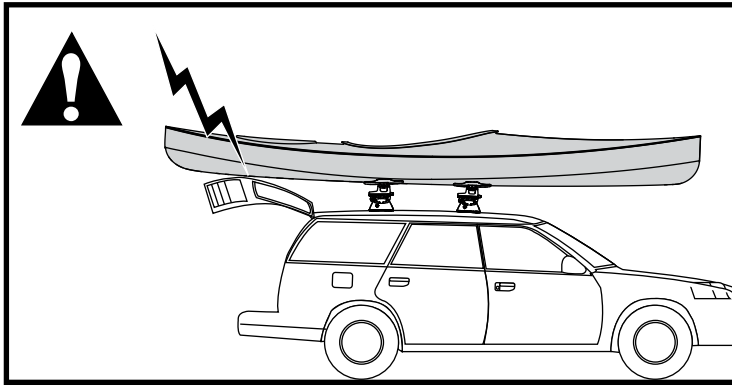

KEEP THESE INSTRUCTIONS!