


## YAKINA LANDING PAD #13



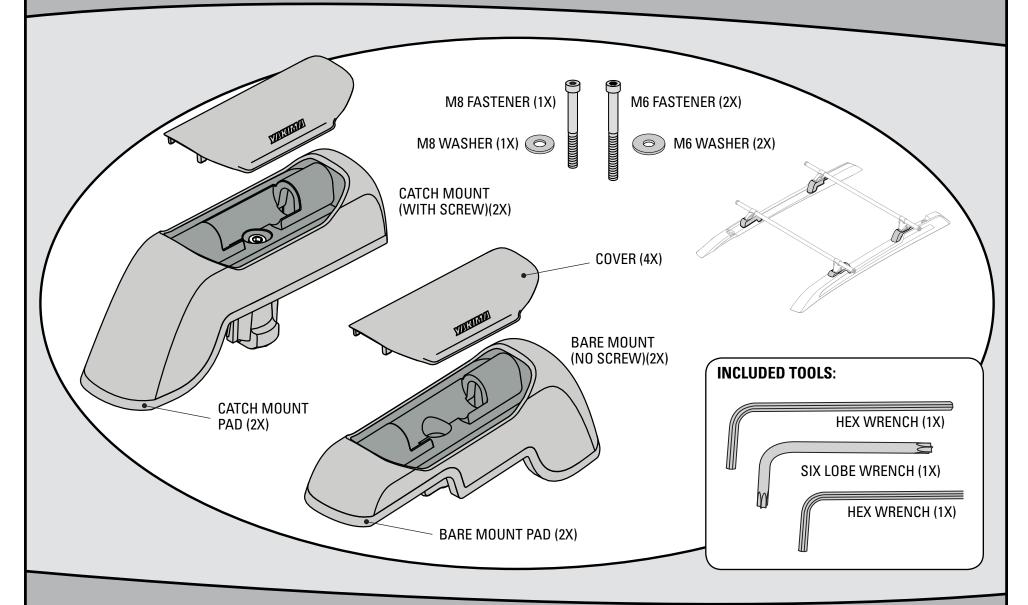

Refer to YAKIMA <u>Control Tower</u> instructions for important warning and load limitations, and YAKIMA's limited warranty.

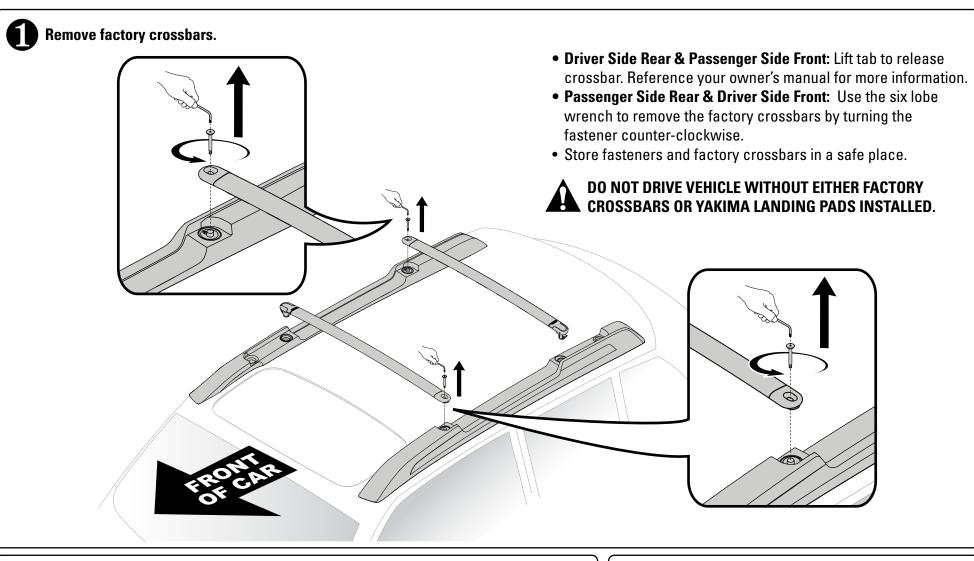

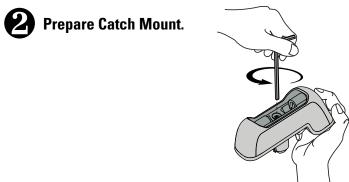


 Using the hex wrench fully open both Catch Mounts by turning the screw counter-clockwise. For Outback 2010

For Outback 2013+



## 2010-2012 OUTBACK

- **8** Install Landing Pads.
  - A Using the hex wrench install each Catch Mount and pad as pictured (Catch Mounts are located diagonally from one another). Fully tighten.
  - B Using the hex wrench install the M6 fastener, washer, Bare Mount, and pad as pictured.

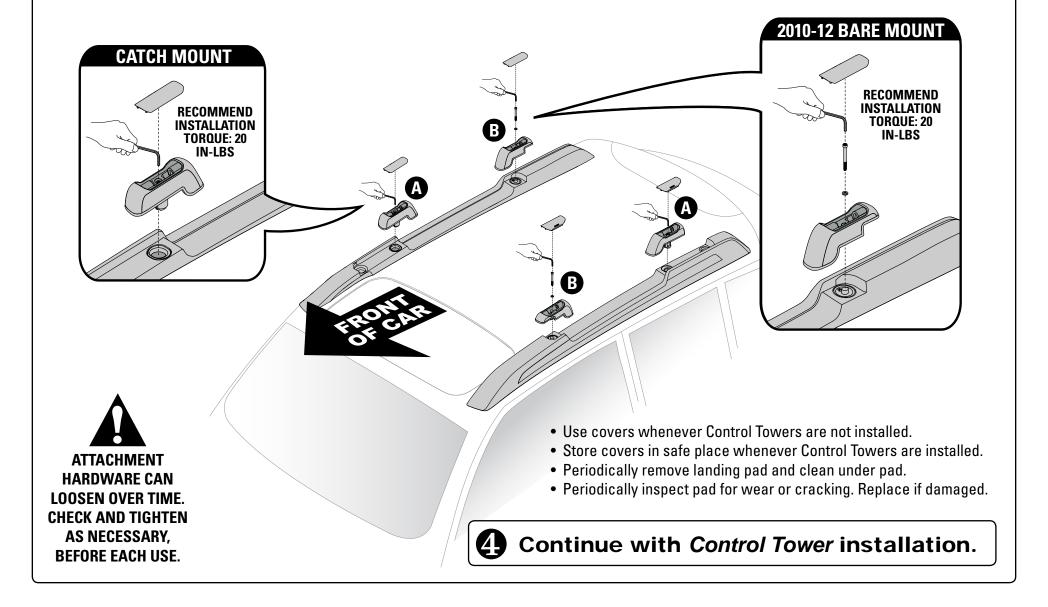

## **2013 OUTBACK**

- **3** Install Landing Pads.
  - A Using the hex wrench install each Catch Mount and pad as pictured (Catch Mounts are located diagonally from one another). Fully tighten.
  - B Using the hex wrench install the M6 fastener, washer, Bare Mount, and pad as pictured.
  - Using the hex wrench install m8 fastener, M8 washer, bare mount and pad as shown. To prevent screws from cross-threading start threading fastener using your fingers. Fully tighten.

