
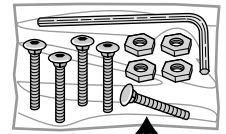



MightyMount 23H

YAKIMA


MightyMounts replace SnapArounds for factory installed racks. Follow accessory instructions and use this reference sheet to attach your accessory.

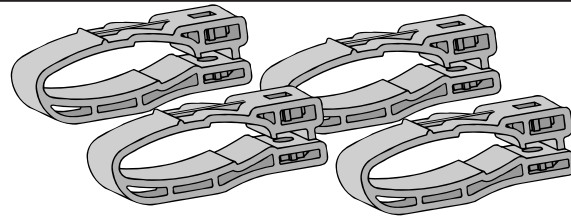


UPRIGHT BIKES:
Bolt for wheel tray.

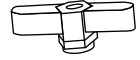





Use at rear of wheel tray with bolt.

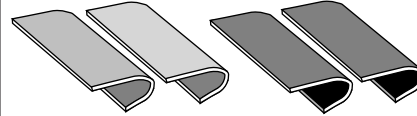


1 PRESS the nuts firmly into each of the MightyMounts.

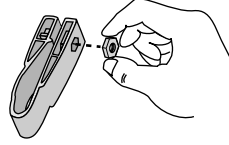

Bikes: Do not press nuts into the MightyMount at rear of wheel tray.

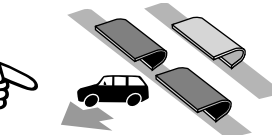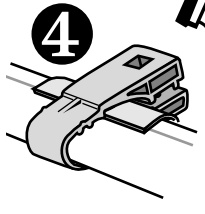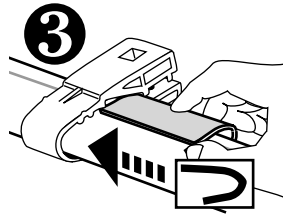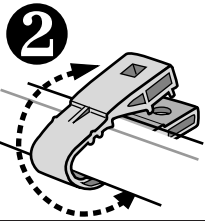


UPRIGHT BIKES:
BLACK caps must go on FRONT bars.

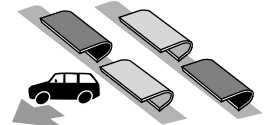

KAYAKS & BASKET CASES:
ALTERNATE the grey and black caps.


UPRIGHT BIKES
—
Which baseplate do you have?

Ridged Baseplate

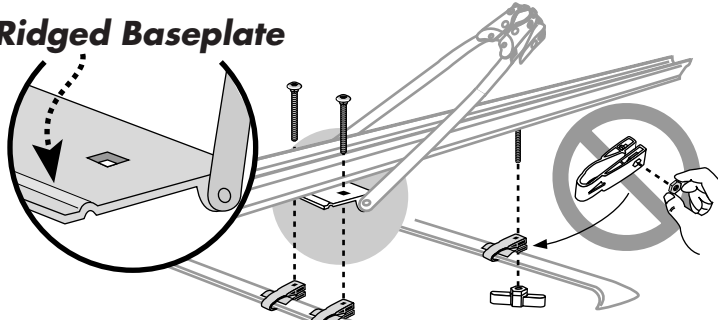


DO NOT press nuts into MightyMount at rear of wheel tray.

Angled Baseplate

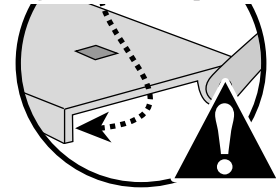


If you have this baseplate call us for the MightyMount Spacer Kit Part #8820062

BASKETCASE


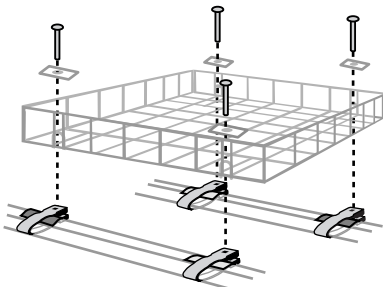


MAKO SADDLES

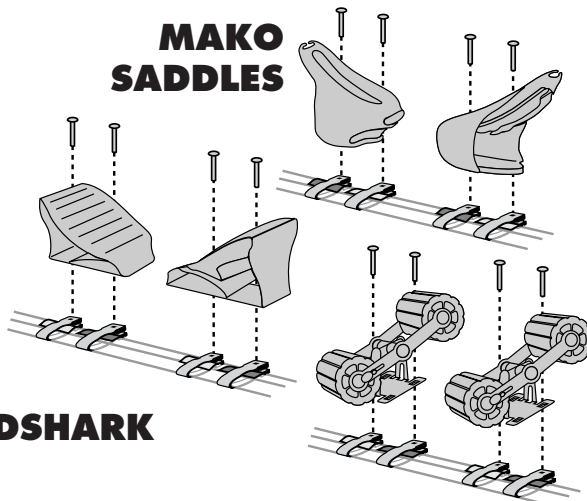

KAYAK STACKERS

If you have this accessory call us for the Bolt Upgrade Kit Part #8860007

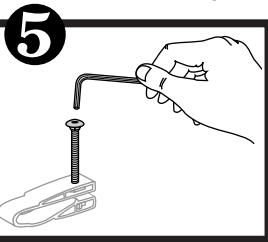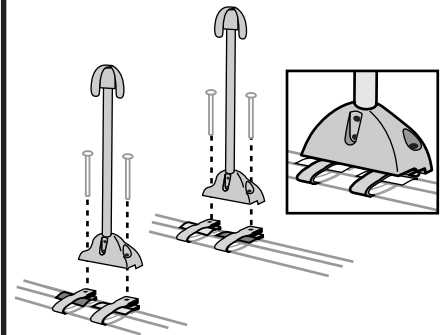

LANDSHARK

HULLY ROLLERS



DO NOT EXCEED THE FACTORY WEIGHT LIMIT OF YOUR VEHICLE'S RACKS.



Secure front and rear of long loads to ends of vehicle for safe transport. Failure to do so can result in property damage, personal injury, or death.