



YAKIMA BLOCKHEAD

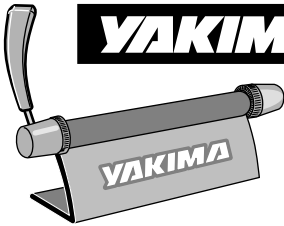

BlockHead attaches securely to flat surfaces.

Recommended Mounting Hardware includes 1/4" (6mm) bolts or screws, fender washers, and locking nuts.

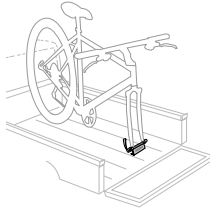


1

Remove the skewer from the block by loosening the nut.



2 Use the template below to scribe two drilling points.

- Use 1/4" (6mm) mounting hardware.

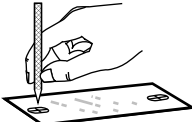

- Always check handlebar clearance before attaching block.

3 Align block with drilled holes.

Pivot the bolts or screws into place.




4 Tighten hardware securely.

Test installation by pulling and shaking.




Replace skewer and attach the nut.

5 Set the bicycle forks onto the skewer.

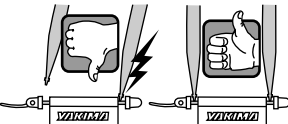

6 With lever open, tighten nut until the lever closes with some resistance.

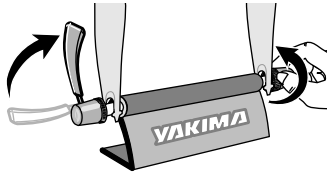

Loosen or tighten the nut as needed so that lever closes with some resistance.


7



Test security by tugging at forks. If forks can move out of the skewer, open lever and tighten the nut slightly. Close lever again with firm pressure. Repeat if necessary.

Yakima accepts no responsibility for improper installation.


TEMPLATE



DRILL POINT

8 Periodically check the attachment hardware and tighten if needed.

Lubricate skewer occasionally.



DRILL POINT