



#3350 & 7350 Installation Instructions 2005-2012 Ford F250/350 4wd Dual Steering Stabilizer Kit (for 2"+ lift kits)

Read and understand all instructions and warnings prior to installation of product and operation of vehicle.

Zone Offroad Products recommends this system be installed by a professional technician. In addition to these instructions, professional knowledge of disassembly/ reassembly procedures and post installation checks must be known. Minimum tool requirements include the following: Assorted metric and standard wrenches, hammer, hydraulic floor jack and a set of jack stands. See the "Special Tools Required" section for additional tools needed to complete this installation properly and safely.

» **PRODUCT SAFETY WARNING**

Certain Zone Suspension Products are intended to improve off-road performance. Modifying your vehicle for off-road use may result in the vehicle handling differently than a factory equipped vehicle. Extreme care must be used to prevent loss of control or vehicle rollover. Failure to drive your modified vehicle safely may result in serious injury or death. Zone Offroad Products does not recommend the combined use of suspension lifts, body lifts, or other lifting devices.

You should never operate your modified vehicle under the influence of alcohol or drugs. Always drive your modified vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Always wear your seat belt.

» **PRE-INSTALLATION NOTES**

1. Special literature required: OE Service Manual for model/year of vehicle. Refer to manual for proper disassembly/reassembly procedures of OE and related components.
2. Adhere to recommendations when replacement fasteners, retainers and keepers are called out in the OE manual.
3. Larger rim and tire combinations may increase leverage on suspension, steering, and related components. When selecting combinations larger than OE, consider the additional stress you could be inducing on the OE and related components.
4. Post suspension system vehicles may experience drive line vibrations. Angles may require tuning, slider on shaft may require replacement, shafts may need to be lengthened or trued, and U-joints may need to be replaced.
5. Secure and properly block vehicle prior to installation of Zone Offroad Products. Always wear safety glasses when using power tools.
6. If installation is to be performed without a hoist, Zone Offroad Products recommends rear alterations first.
7. Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle attitude. Always measure the attitude prior to beginning installation.

Difficulty Level

easy 1 **2** 3 4 5 difficult

Estimated installation: 1 hour

Special Tools Required

None

Kit Contents

Qty	Part
1	Center bracket
2	Outer TRE brackets
2	Outer cylinder spacers
4	5/16" x 1-1/2" ID x 2-1/4" Round U-bolt
4	7/16" x 4-1/4" ID x 4-3/4" Round U-bolt
1	Bolt Pack
2	Stabilizer
4	EB1 Bushings
4	1.375" long sleeves (1/2" ID)

Note

For use with 2" and larger suspension lift kits.

Installation Instructions

1. Park vehicle on clean, flat, and level surface.
2. Block rear wheels for safety.
3. Install the center bracket with 7/16" U-bolts as shown in the picture. Rotate the bracket so there is 1/4" gap between the tie rod and the bottom of the bracket. Tighten U-bolts to 45 ft-lbs. Figure 1 & 2

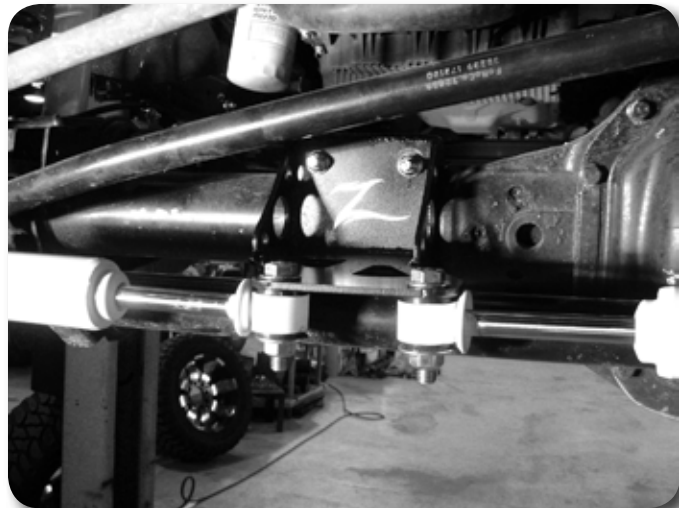


Figure 1



Figure 2

4. Remove the anti-rotation brackets from the tie rod ends (both sides), it will not be reinstalled.
5. Install the outer tie rod end brackets on the flats of the tie rod ends with 5/16" U-bolts. The brackets have stoppers on them that will align with the edge of the square on the tie rod end. Tighten to 20 ft-lbs. **Figure 3**



Figure 3

6. Remove the factory adjusting collar bolt and replace with new 3/8" bolt. Run the bolt from front to rear. Adjust tie rod ends joints so they are centered. This will put the outer tie rod end brackets parallel with the center bracket. Tighten to 35 ft-lbs. Figure 4

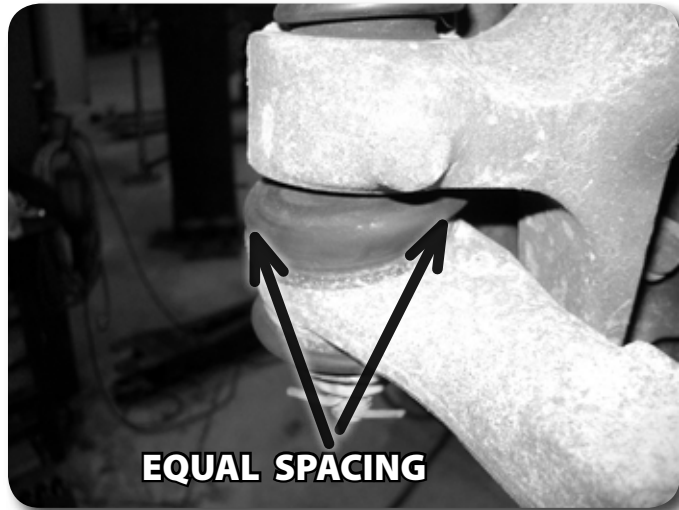


Figure 4

7. Grease and install the bushings and sleeves into the stabilizers. Attach the stabilizer to the bottom side of the center bracket with 1/2" x 2-1/2" hardware. Attach the stabilizer to the outer brackets with spacers and 1/2" x 3-1/4" hardware. Run hardware from top – down. Tighten to 50 ft-lbs. Figure 5

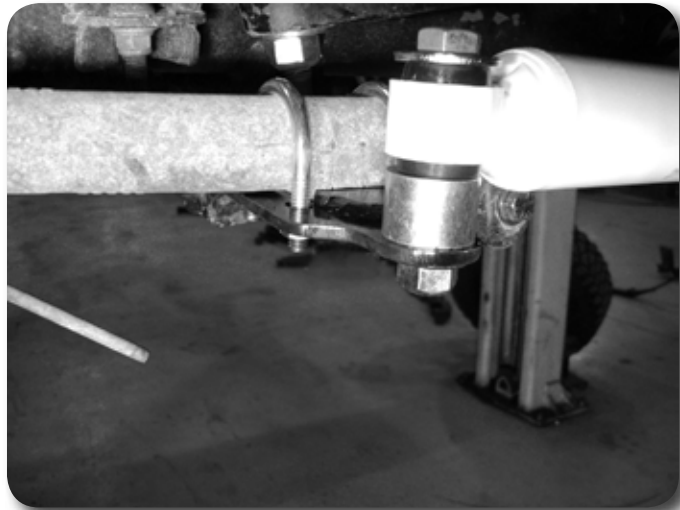


Figure 5

8. Perform a steering sweep to check for adequate compression and extension of stabilizer cylinders.
9. Recheck all fasteners for proper torque. Check again after 500 miles.