



**ZROADZ**  
DYNAMIC LED MOUNTING SOLUTIONS

Z325672  
INSTALLATION INSTRUCTIONS

1. Remove the factory bumper strut bolt.



2. Install the bracket using the provided 6mm hex bolt on the outside mounting slot location.




3. On the inside mounting slot use the 6mm hex bolt, washer, lock washer and hex nut.



4. Install the LED lights and wire harness. If you purchased the KIT from ZROADZ take note to install the brackets as shown into the light.




NUMBER	PART	QTY
1	M6 X 25 MM HEX BOLT	4
2	M6 SPLIT LOCK	8
3	1/4" X 5/8" WASHER	4
4	M6 HEX NUT	2
5	M8 HEX NUT	6
6	3/8" X 7/8" WASHER	6
7	M8 X 20 MM HEX BOLT	6
8	WHITE POD LIGHT	4
9	AMBER POD LIGHT	2




TOP VIEW

PASSENGER SIDE

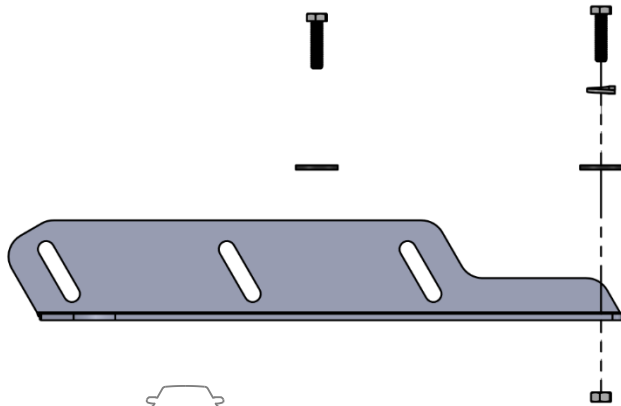

FRONT VIEW

DRIVER SIDE

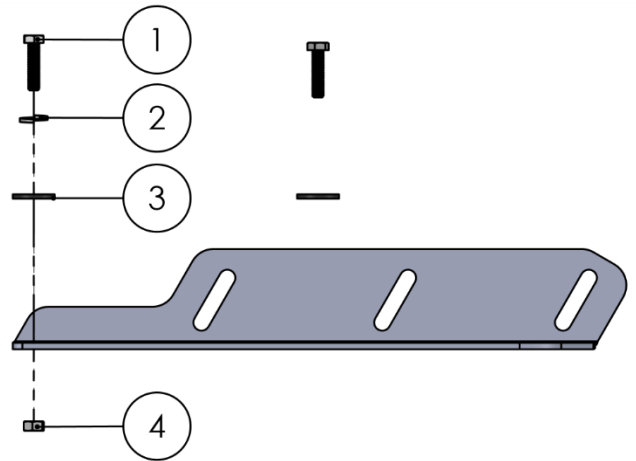

PASSENGER SIDE

DRIVER SIDE

