



# ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS



## 2007-2013 Chevrolet Silverado 1500 / 2007-2013 GMC SIERRA 1500

Z362051 / Z362051-KIT2 / Z362051-KIT4  
HOOD HINGE / A-PILLAR LED LIGHT MOUNTS

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.

### PARTS INCLUDED

- (1) Driver Side Light Mount Bracket
- (1) Passenger Side Light Mount Bracket



Mounting  
Brackets Only

\* Simulated Rendering, NOT Actual Parts.

### LED LIGHTS INCLUDED

- Z362051** - No LED Lights Included
- Z362051-KIT2** - (2) ZROADZ 3" LED Light Pods
- Z362051-KIT4** - (4) ZROADZ 3" LED Light Pods
- \* LED Lights include a separate hardware kit.

### HARDWARE INCLUDED

\* APPLIES TO KIT PACKAGES ONLY

#### Z362051-KIT2

- (2) - M8 - 1.25 x 20 Stainless Steel Hex Bolt
- (2) - M8 Stainless Steel Nuts
- (2) - M8 Stainless Steel Lock Washers
- (1) - Bracket - L
- (1) - Bracket - R

#### Z362051-KIT4

- (4) - M8 x 12mm Hex Cap Screw
- (2) - M8 - 1.25 x 20 Stainless Steel Hex Bolt
- (6) - M8 Stainless Steel Nuts
- (6) - M8 Stainless Steel Lock Washers
- (2) - Dual Light Bracket Adapter
- (1) - Bracket - L
- (1) - Bracket - R

### TOOLS REQUIRED

- Various Socket Set
- Various Wrenches
- Ratchet Tool
- Ratchet Extensions

### INSTALLATION GUIDE

#### START HERE

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model.

\* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS.  
\* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR MODEL OR PART.

#### BEFORE YOU BEGIN

START HERE: Turn off engine, chalk tires with stop block, open the hood and disconnect the battery.

#### LED LIGHT BRACKET INSTALLATION

- STEP 1** 1) Identify the pair of Fender Core Support.



FIG 1

NOTE: There are actually three pairs on each side.

The Hood Hinge Brackets will mount to the pair in the very back closest to the windshield.

#### STEP 2

- 2) Loosen and remove the two bolts.

Put into place the provided ZROADZ Bracket Mounts.

#### SEE FIGURE 2



FIG 2



# ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS

## LED LIGHT BRACKET INSTALLATION - CONTINUED

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.

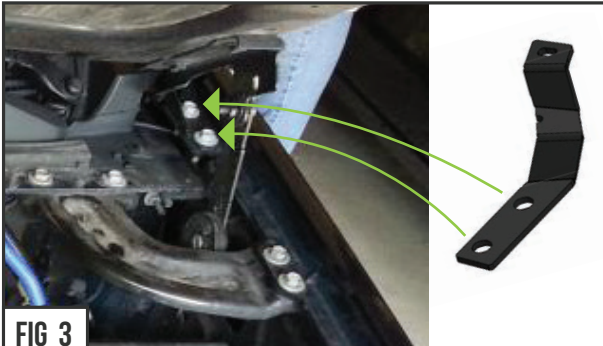


FIG 3

### STEP 3

SEE FIGURE 3

3) Secure bracket to vehicle's core support using the factory bolts. Repeat on opposite side of vehicle. At this point, carefully close the hood while checking for clearance and the ZROADZ Brackets are correctly positioned.



FIG 4

### STEP 4

SEE FIGURE 4

4) Mount LED Lights onto each of the brackets. For Now, Hand tighten mounting bolts.



FIG 5

### STEP 5

SEE FIGURE 5

Wire LED Light with a ZROADZ optional wiring harness kit (part# Z390020S-A) or by utilizing a compatible custom wiring harness. ZROADZ recommends LED Lights be wired with ZROADZ harness kit (part# Z390020S-A).

### STEP 6 ADJUSTMENT TIPS

6) To adjust the angle of your Light Bar, rotate the LED(s) to adjust the angles till your desired light pattern is reached. You may then tighten the hardware and also mounting bracket to hood and secure everything into place. Note your tape marker under hood to check for proper alignment. Be careful not to over tighten the mounting hardware.

It is best to adjust the angle with the vehicle on level ground with lights facing a wall, garage door or other solid barrier. We recommend checking from a distance of 25'. Your installation is now completed.

## FINISHED EXAMPLES



FIG 6



FIG 7

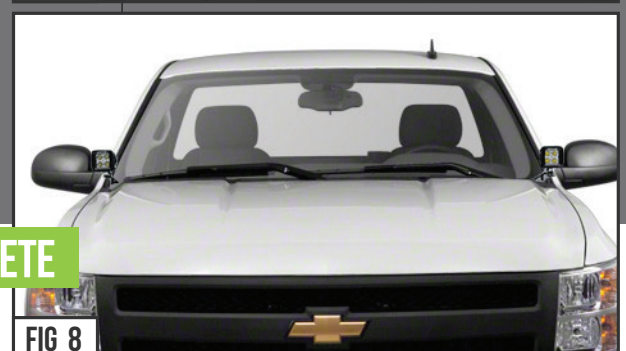


FIG 8

## LED LIGHT BRACKET INSTALLATION - PROCESS COMPLETE