



ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS



PROFESSIONAL INSTALL RECOMMENDED

2007 - 2015 JEEP WRANGLER

PART#: Z374814 / Z374814-KIT

A-PILLAR - LED POD LIGHT MOUNTS

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.

PARTS INCLUDED

- (2) A-Pillar LED Pod Mounts:
 - (1) Driver Side and
 - (1) Passenger Side.

INSTALLATION GUIDE

START HERE

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. Auto makers offer varied models to each vehicle and occasionally manufacture more than one body style of the same model.

* APPLICATION MODELS VARY. WE RECOMMEND TO VERIFY FITMENT BEFORE BEGINNING INSTALLATION PROCESS.
* IMAGES FEATURED IN THE INSTRUCTION DOCUMENTS MAY NOT ALWAYS EXACTLY MATCH YOUR MODEL OR PART.

LED LIGHTS INCLUDED

Z374814 - No LED Lights Included

Z374814-KIT - (2) ZROADZ 3" Pod LED Lights

HARDWARE INCLUDED

Z374814

- (4) - M8 x 1.25" x 35mm Button Head Allen Cap Screws
- (2) - M8 x 20 Hex Head Cap Screws

Z374814-KIT

- (4) - M8 x 1.25" x 35mm Button Head Allen Cap Screws
- (2) - M8 x 20 Hex Head Cap Screws

TOOLS REQUIRED

- Air Hose & Nozzle
- Alcohol Cleaning Solution
- Cleaning Rag
- Socket Set & Ratchet Tool
- Ratchet Extensions
- Various Wrenches
- Dikes or Snips
- Torq Bit Set
- Heat Gun

MATERIALS NEEDED - Clear RTV Silicone
- 1/2" x 1/4" DIA Shrink Tube

BEFORE YOU BEGIN

START HERE: Turn off engine, chalk tires with stop block, open the hood and disconnect the battery.

LED LIGHT BRACKET INSTALLATION

- STEP 1** 1) Begin by removing the 4 pieces of factory hardware that secure the front windshield to the cab of the Jeep.

FIG 1



There are 2 screws on each side.

PRO TIP:

APPLY A PROTECTIVE LAYER OF 3M MASKING TAPE AROUND THE APPLICATION AREA.

STEP 2

SEE FIGURE 2

2) Set screws aside to re-install and secure the new ZROADZ LED Light Bar Mounts to the Jeep.



FIG 2



ZROADZ

DYNAMIC LED MOUNTING SOLUTIONS

LED LIGHT BRACKET INSTALLATION - CONTINUED

PARTS ARE PATENT PENDING. ALL RIGHTS RESERVED - COPYRIGHT ©2016 - ZROADZ LED, INC.



FIG 3

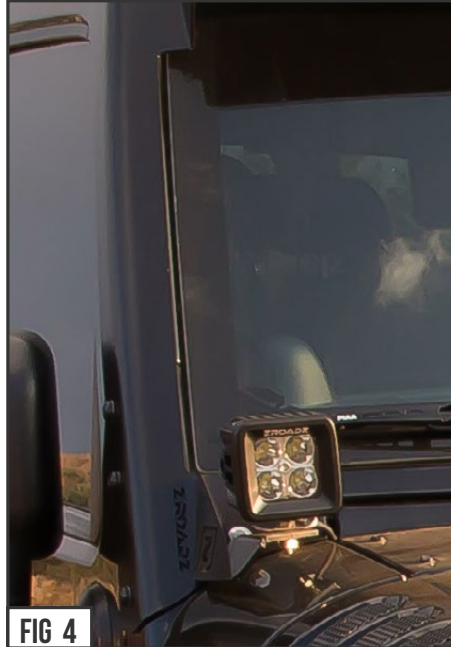


FIG 4

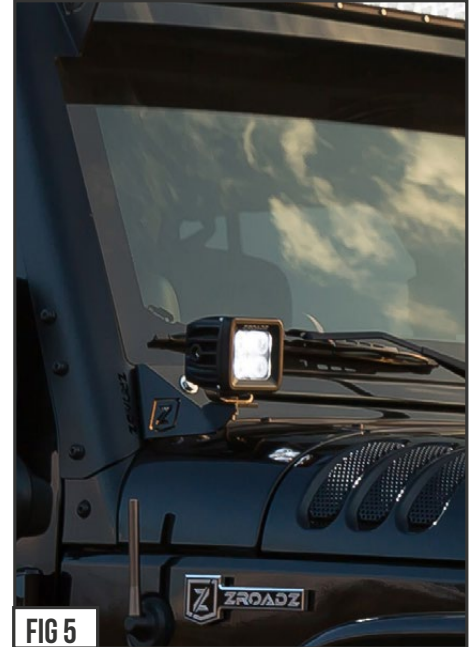


FIG 5

STEP 3

Identify which bracket goes on Driver Side and which bracket goes on Passenger side.

3) Carefully move bracket into position and align with the recently exposed factory bolt holes.

SEE FIGURE 3 & 4

STEP 4

4) Secure bracket to Jeep cab with factory bolts. Repeat on opposite side of vehicle.

SEE FIGURES 4 & 5

STEP 5

5) Mount (1) LED Light Pod to each bracket and than tighten mounting bolts.

SEE FIGURE 6 & 7

STEP 6

6) ZROADZ recommends LED Lights be wired with ZROADZ harness kit (part# Z390020S-A) or by utilizing a compatible custom wiring harness. Wiring must be installed by competent & knowledgeable automotive electrician.

STEPS 7

ADJUSTMENT TIPS

7) To adjust the angle of your Light Bar, rotate the LED(s) to adjust the angles till your desired light pattern is reached. There will be minimal adjustment due to curved light bar orientation. You may than tighten the hardware and secure everything into place. Be careful not to over tighten the mounting hardware.

It is best to adjust the angle with the vehicle on level ground with lights facing a wall, garage door or other solid barrier. We recommend checking from a distance of 25'. Your installation is now completed.

FINISHED EXAMPLES



FIG 6



FIG 7

LED LIGHT BRACKET INSTALLATION - PROCESS COMPLETE