Endgate Handle with Codeable Lock

Removal of Existing Endgate Handle without Lock

- Remove pickup box endgate latch handle bezel bolt as shown in Figure 1, item #1.
- Release the 3 retainer clips securing the bezel to the endgate outer panel as shown in Figure 1, item #2. Lift the endgate latch handle in order to aid in the removal of the latch handle bezel.
- Remove remaining pickup box endgate latch handle bolts (Qty 2) as shown in Figure 2, item #1.
- Pull pickup box endgate latch handle free as shown in Figure 2, item #2. Release the rods from the latch handle.

Installation of New Endgate Handle with Lock

- Align latch handle to endgate using the 3 holes in the part. Install 2 endgate latch handle bolts. Do not tighten.
- Re-install rods to handle. Verify lock cylinder is properly installed to latch
- Install endgate latch handle bezel by snapping the 3 clips into place and securing 3. with 1 bezel bolt. Do not tighten.
- Tighten all three bolts to 25 N·m (18 lb ft).

CAUTION: Only insert key intended for everyday use.

- 1. Remove protective label.
- 2. Fully insert key intended for everyday use.
- 3. Rotate key clockwise until it stops while maintaining full key insertion.

Lock is now fully coded and ready for everyday use.

FIGURE 1


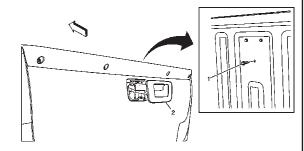


FIGURE 2

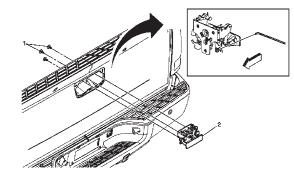

Endgate Handle with Codeable Lock

REV 160C12

19132330

1

ALL INFORMATION WITHIN ABOVE BORDER TO BE PRINTED EXACTLY AS SHOWN ON 8.5 x 11 WHITE 16 POUND NON-BOND RECYCLABLE PAPER.
PRINT ON BOTH SIDES, EXCLUDING TEMPLATES. TO BE UNITIZED IN ACCORDANCE WITH GM SPECIFICATIONS

AUTH DR TITLE REVISION 21SE06 Initial Release - Barton Crowell 29AU07 Revised - Scott Besemer 16OC12 Revised - John Wessels

INSTALLATION INSTRUCTIONS Endgate Handle with Codeable Lock

PART NO.

19132330

OF