


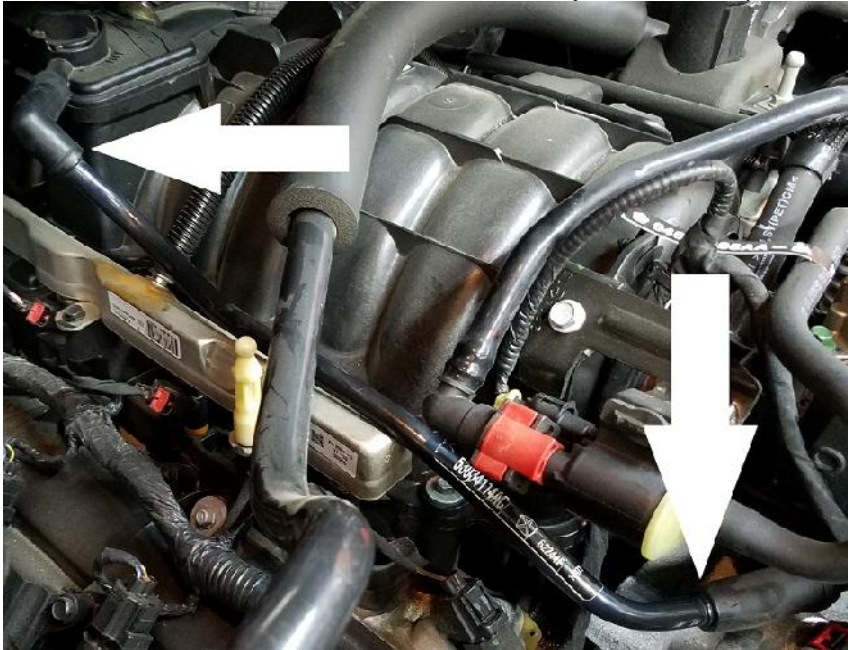

Installation Instructions #3067P
JLT 3.0 Oil Separator (2019Ram 1500 5.7 Hemi, Passenger Side)

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) JLT Oil Separator, (1) mounting bracket, (2) fine thread machine screws, (2) 1/2" Rubber hoses with fittings install on separator
2	Gather all of the following tools needed for the installation: 10mm socket and ratchet, Phillips screwdriver, pliers
3	Remove factory engine cover by removing the two 10mm bolts holding it down on each front corner, pull cover forward it is secured in the rear by two rubber grommets.
4	Remove plastic portion of the PCV line that runs from rear of engine to just under throttle body. The plastic hose is installed into two rubber ends. You may need to use pliers to loosen rubber on plastic hose. 
5	Install JLT Oil separator onto JLT mounting bracket with supplied screws. Logos on bracket and can should line up.
6	Back at the truck, install hose with 90 degree towards back of engine. Install hose with the straight fitting to the intake manifold. TIP: The fitting in the hose will rotate for adjustment if needed. 

The JLT bracket is going to sandwich between the engine cover and engine cover mounting stud. Reinstall engine cover into rear grommets. Feed bolt into engine cover and JLT Mounting bracket, if you look from the front of the engine you will be able to see the bolt location to help align it back into the mounting hole. Start bolt by hand and tighten with ratchet.



7

Reinstall engine cover bolt and you are done!

8



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.