
Wiring - Back Panel: GPS ANT-POWER RADIO ANT-SUBWOOFER OUTPUT Steering Wheel Key 1 (Green/White) Amplifier Remote Trigger 12V+ (Blue/White) Illumination Control 12V+ (Orange) GND (Black) Rear Right Speaker + (Purple) Ignition Accessory (Red) Rear Left Speaker + (Green) Front Left Speaker + (White) Battery Memory 12V+ (Yellow) Front Right Speaker + (Gray) Canbus TXD Interface (Orange) 0000000000000 00000000000 Canbus RXD/R (Brown) Front Right Speaker - (Gray/Black) Front Left Speaker - (White/Black) Reverse Camera Trigger 12V+ (Brown) Rear Left Speaker - (Green/Black) Rear Right Speaker - (Purple/Black) Parking Brake 12 Volt - Ground Trigger (Pink) Power Antenna Trigger 12V+ (Blue) Steering Wheel Key 1 (Gray/White) Rearview/Backup Camera RCA Input A. Video Input B. Video Output 1 C. Video Output 2 D. Left Audio Input E. Front Left Audio Output

F. Rear Left Audio Output

H. Front Right Audio Output

I. Rear Right Audio Output

G. Right Audio Input

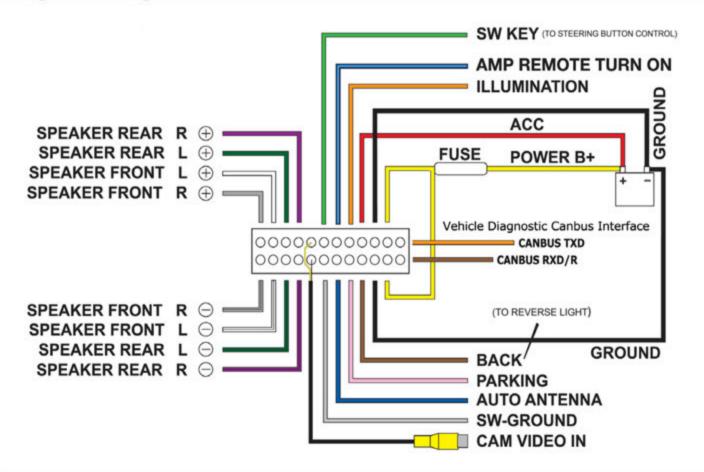

Wiring		
	Radio Antenna	Radio antenna receptacle
	Subwoofer Output	Pre amp subwoofer output (5V)
ō.	Audio / Video Input	Auxiliary input for external hardware
	Audio / Video Output 1	Connect to headrest display (Optional)
	Audio / Video Output 2	Connect to headrest display (Optional)
Green/White	SW KEY	Steering wheel control Key 1 interface wire
Blue/White	AMP REMOTE TURN ON	DC 12 + Volt Remote turn on trigger for external amplifier
Orange	ILLUMINATION	12 volt + trigger dash board illumination
Brown	BACK	12 volt + trigger from reverse lights
Pink	PARKING	Connect to parking brake ground. Disables video play unless grounded
Blue	AUTO ANTENNA	12 volt + trigger output
Gray/White	SW-GROUND	Steering wheel control Key 2 interface wire
Black (RCA)	CAM VIDEO IN	Camera RCA video input for use with rearview camera
Red	ACC	Ignition Accessory 12V+
Yellow	FUSE/ POWER B+	Connect to (+) side of car battery
Black	GROUND	Connect to (-) side of car battery
Orange	CANBUS INTERFACE	TXD - Vehicle Diagnostic CANBUS Interface
Brown	CANBUS INTERFACE	RXD/R - Vehicle Diagnostic CANBUS Interface
Purple	Speaker Rear R	Rear right speaker Purple (+) Purple/Black (-)
Green	Speaker Rear L	Rear left speaker Green (+) Green/Black (-)
Gray	Speaker Front R	Front right speaker Gray (+) Gray/Black (-)
White	Speaker Front L	Front left speaker White (+) White/Black (-)

^{*}Brown wire tells the monitor when to activate and display rearview camera on the display (optional)