
## **DK302 Rhino-Rack** VA, Aero, Euro & HD <u>crossbar</u> instruction











/A crossbar

AERO crossbar

EURO crossbar

		=				VA cros	sbar	AERO	crossba	<u>ar</u> l	EURO cros	sbar	HD cross	<u>bar</u>
					FRONT CROSSBAR					REAR CROSSBAR				
					VA	AERO EURO	HD				(III) VA	AERO EURO	<b>ID</b>	
Vehicle	Date	Crossbar	Front Right Pad/ Clamp	Front Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance ( x )	Foot plate arrow direction	Rear Right Pad/ Clamp	Rear Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance ( x )	Foot plate arrow direction
Jaguar XF 4dr sedan	2008-	1260mm		142625FL SUB0148	169mm	56mm	986mm / 38,13/16"	OUT	142625RR SUB0148	142625RL SUB0148	178mm	65mm	1004mm / 39,17/32"	OUT
			Arrow OUT				·		Arro					





## DK302 Rhino-Rack VA, Aero, Euro & HD crossbar instruction


Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.


**Measurement B**: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

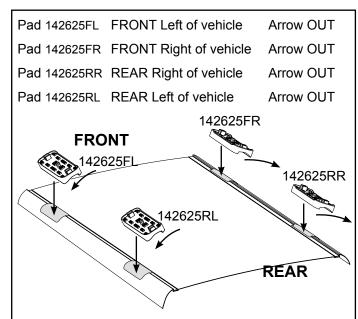

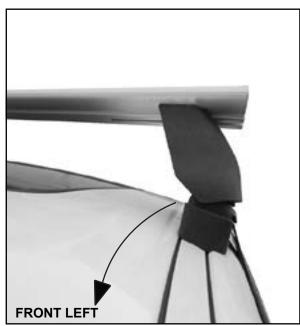

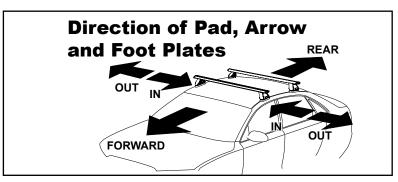

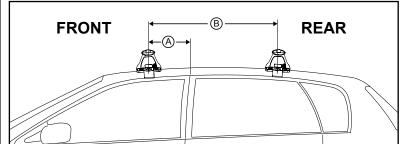

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Jaguar XF 4dr sedan	2008-	270mm / 10,5/8"	700mm / 27,9/16"	75kg / 165lbs