DK151 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

			IDENTIFICATION CHART			VA crossbar				EURO crossbar		HD crossbar		
				FRONT		R I HD	A CONTRACT OF			REAR		F HD	A CONTRACTION	
Vehicle	Date	Crossbar	Front Right Pad/ Clamp	Front Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction	Rear Right Pad/ Clamp	Rear Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction
Honda Accord 2dr Coupe	2008 on	1260mm / 49,19/32"	M366 SUB0145 Arr FORV		184mm	71mm	1016mm / 40"	OUT	M366 SUB0174 Arr FORV		197mm	84mm	1083mm / 42,41/64"	OUT

RHINO-RACK




DK151 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.


Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

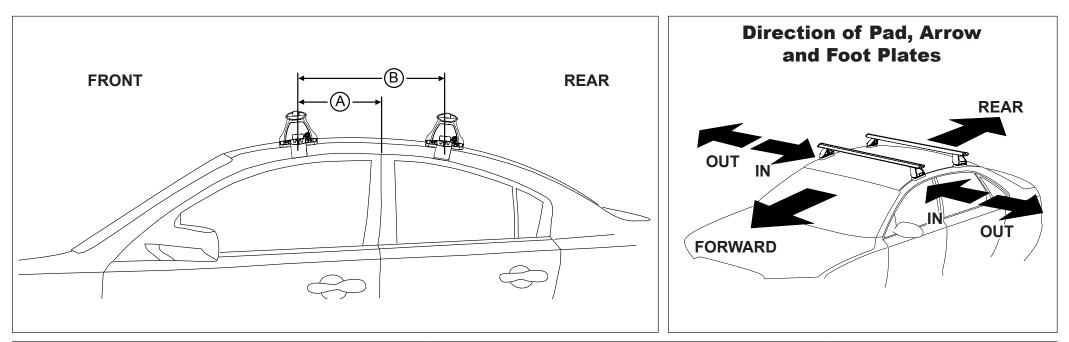

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)
Honda Accord 2dr Coupe	2008 on	570mm / 22,7/16"	625mm / 24,39/64"	40kg / 88lbs

DK151 Rhino-Rack VA, Aero, Euro & HD crossbar instruction

Supplement Fitting Instruction - Honda Accord 2dr Coupe

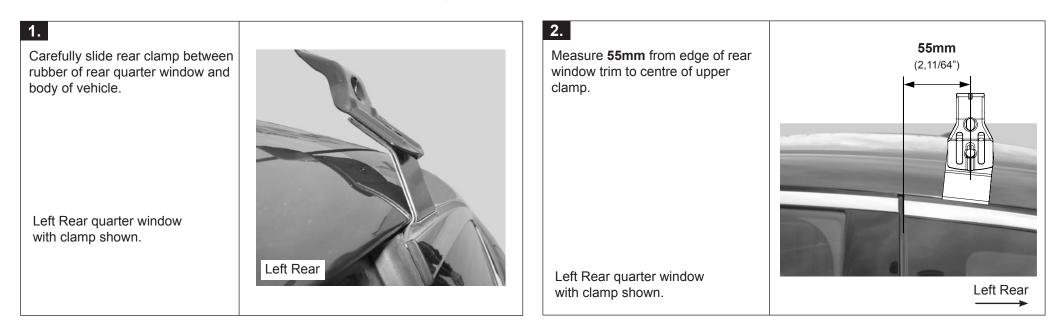

3.

Adjust distance between legs according to Bar Measurement Strip Length. Carefully manoeuvre and locate the cross bar/leg assembly without dislodging the clamp. Tighten M8 bolts to 12-14 Nm.



