


Rhino Rack 2500 Series - DK416 instruction

IDENTIFICATION CHART







VA crossbar

DA crossbar

EURO crossbar

HD crossbar

		FR				NT CROSSBAR			REAR CROSSBAR					
					VA	DA EURO	HD				VA	DA EURO	HD	
Vehicle	Date	Crossbar	Front Right Pad/ Clamp	Front Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction	Rear Right Pad/ Clamp	Rear Left Pad/ Clamp	Measurement strip length per side	Measurement strip length per side	Measurement Distance (x)	Foot plate arrow direction
Subaru Legacy 4dr sedan	15-	1260mm	142697 SUB0374 Pad A OL	rrow	. 185mm	72mm	1018mm / 40,5/64"	OUT	142696 SUB0374 Pad A OL	ırrow	173mm	60mm	994mm / 39,1/8"	OUT
Subaru Liberty 4dr sedan	1/15-	1260mm	142697 SUB0374 Pad A OU	rrow	. 185mm	72mm	1018mm / 40,5/64"	OUT	142696 SUB0374 Pad A OL	ırrow	173mm	60mm	994mm / 39,1/8"	OUT




Rhino Rack 2500 Series - DK416 instruction


Measurement A: CENTRE of door jamb to CENTRE arrow of leg foot plate.

Measurement B: CENTRE of Front leg foot plate arrow to CENTRE of Rear leg foot plate arrow.

Carrying capacity: Roof rack is rated to 75kg. Please refer to manufacturers handbook for your vehicles maximum roof load capacity. Always use the lower of the two figures.

If your vehicle is not listed on this fitting instruction please refer to your countries Rhino-Rack web site for the latest information.

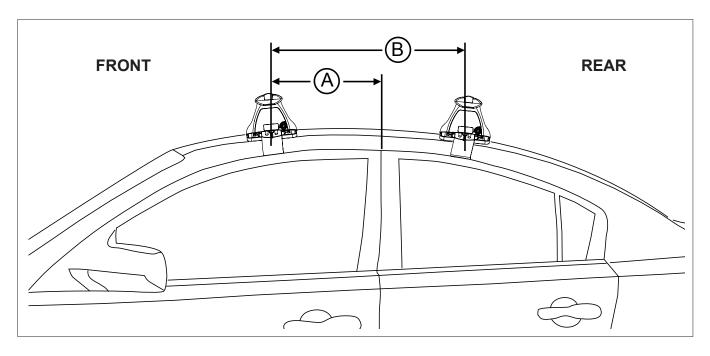

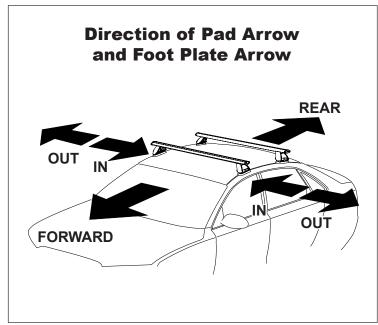

VEHICLE	Date	Measurement A	Measurement B	Load Rating (includes racks 5kg/ 11lbs)		
Subaru Legacy 4dr sedan	15-	250mm / 9,27/32"	650mm / 25,19/32"	75kg / 165lbs		
Subaru Liberty 4dr sedan	1/15-	250mm / 9,27/32"	650mm / 25,19/32"	75kg / 165lbs		