


SNOW PERFORMANCE LEVEL SWITCH UPGRADE (Part #40035)



- Locate desired level switch mounting position. Suggest placement is 1/3 of max reservoir height.
- Carefully drill side of reservoir using 13/16" bit. A step bit is recommended for best drilling results. Hole must be free of nicks or shavings for proper sealing.
- Remove rubber seal from level switch. Insert seal into reservoir until fully seated.
- Lubricate exterior of level switch with water and insert into seal until fully seated. Position level switch so **GT** symbol is at six o'clock position.
- With fluid level above level switch, float should be angled up. With fluid level below level switch, float should be in horizontal position.
- Connect one black wire from level switch to ground (both wires on level switch are interchangeable and does not matter which one connects to ground/LED).
- Connect other black wire from level switch to white wire from LED.
- Connect red wire from LED to +12 volt key on power source.

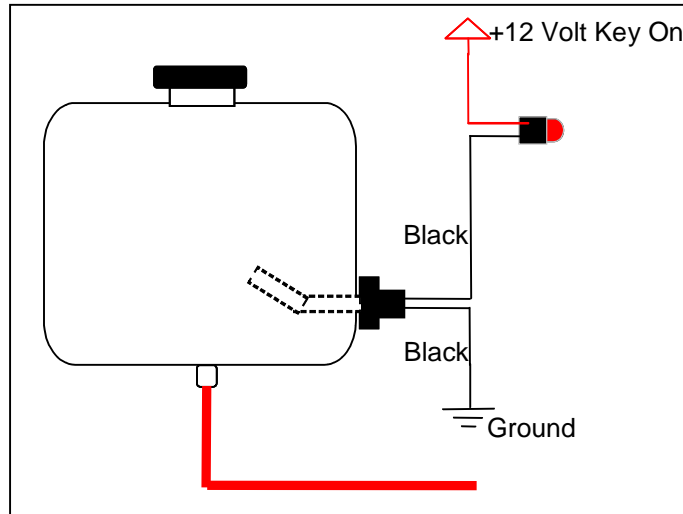