

INSTALLATION & CARE

SPEC-D
Tuning

INNOVATE PROFESSIONAL SERVICE

2018-2021 HONDA ACCORD SEDAN LED TAIL LIGHT INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	8 mm Socket	Plastic Pry Bar	Phillips Screwdriver
			
Blade Cutter	Electrical Tape		
			

PRODUCT NUMBER

LT-ACD184RLED-SQ2-RS
LT-ACD184GLED-SQ2-RS


LET'S START THE INSTALLATION




Remove the tail light finisher




Remove the two 8mm outer tail light mounting bolts

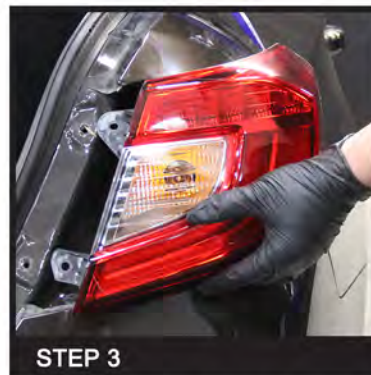


Unseat the factory outer tail light housing

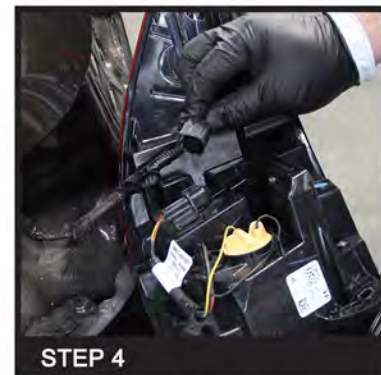

Disconnect the tail light harness and remove the factory outer tail light housing

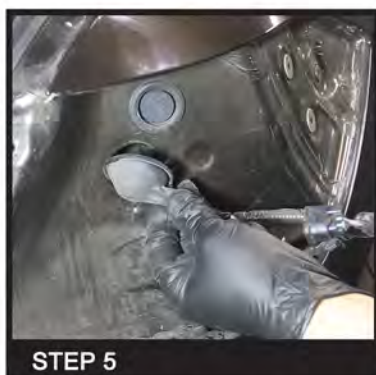

Loosen the tail light wire rubber grommet

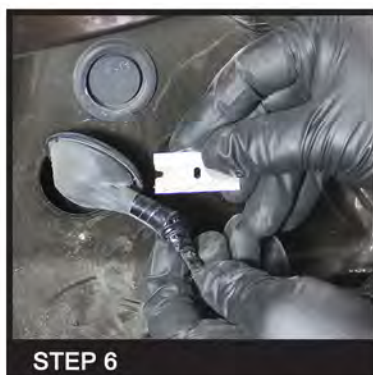

Use the blade to cut open the electrical tape to run the tail light extension wire



This is the outer tail light extension wire connector



Run the extension wire through to the rubber grommet



STEP 8B

Run the extension wire through to the rubber grommet



STEP 9

Use the electrical tape to rewrap the wire




STEP 10

Run the extension wire through the trunk




STEP 11

Reinstall the wire rubber grommet

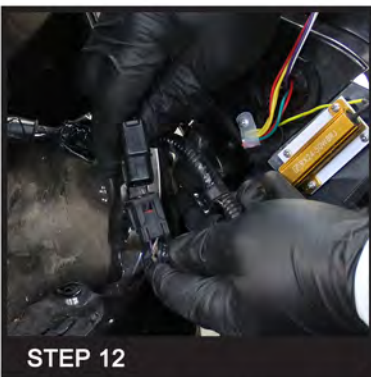


STEP 12

Connect the outer tail light harness

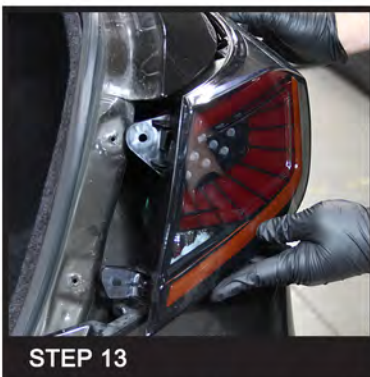


STEP 13

Seat the new outer tail light assembly in place

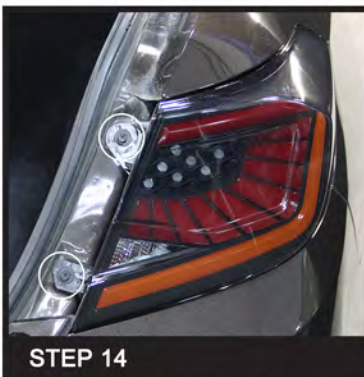

STEP 14

Reinstall the two 8mm outer tail light mounting bolts

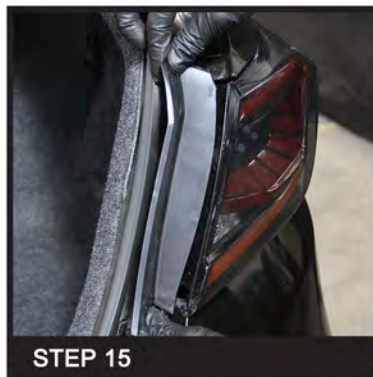


STEP 15

Reinstall the tail light finisher




STEP 16

Please repeat the steps from 1 to 15 for the opposite side

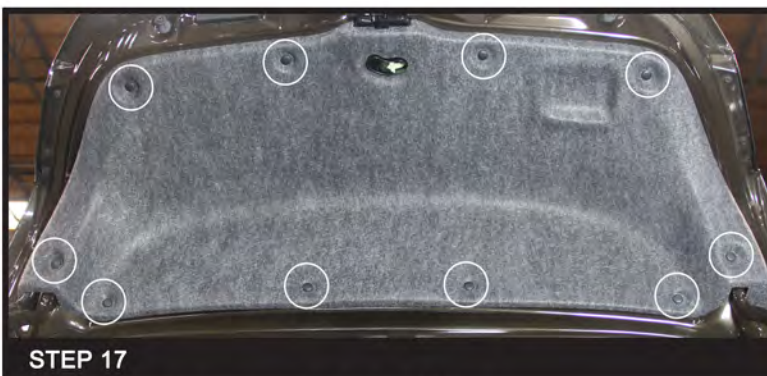

STEP 17

Remove the ten plastic retainers on the trunk lid lining

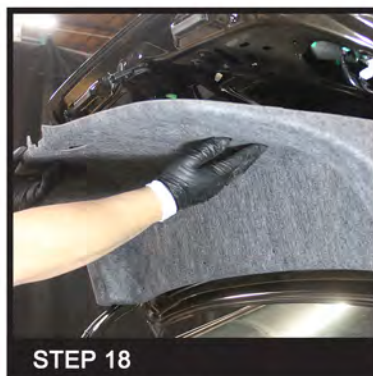


STEP 18

Remove the trunk lid lining




STEP 19

Remove the four 8mm bolts and one phillips screw on the trunk lid

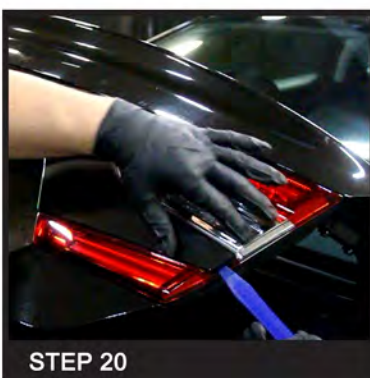


STEP 20

Unclip the tailgate hatch license molding from the edge

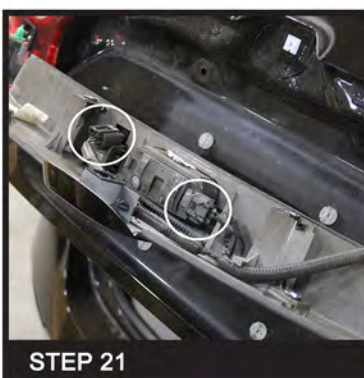

STEP 21

Disconnect the license plate lamp and the back up camera harness

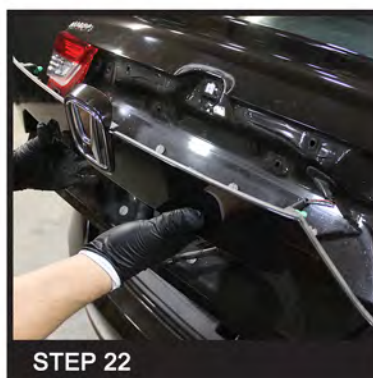

STEP 22

Remove the tailgate hatch license molding



STEP 23

Disconnect the inner tail light harness



STEP 24

Remove the reverse light bulb from the socket



STEP 25

Remove the two inner tail light 8mm mounting bolts and the two 8mm mounting nuts



STEP 26

Unseat and remove the inner tail light housing



STEP 27

Seat the new inner tail light assembly in place



STEP 28

Tighten the two inner tail light 8mm mounting bolts and the two 8mm mounting nuts



STEP 29

Insert the T10 plug to the reverse light socket, make sure the wire is (+) to (+)



STEP 30

Connect the inner tail light harness and install the reverse light socket




STEP 31

Connect the extension wire harness to the inner tail light harness




STEP 32A

Zip tie the extension wire on the trunk hinge, **BE VERY CAREFUL TO MAKE SURE THE WIRE HAVE ENOUGH LENGTH TO CLOSE THE TRUNK**

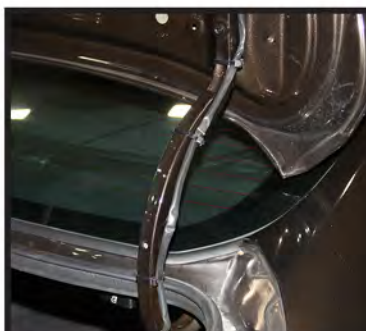


STEP 32B

Zip tie the extension wire on the trunk hinge, **BE VERY CAREFUL TO MAKE SURE THE WIRE HAVE ENOUGH LENGTH TO CLOSE THE TRUNK**

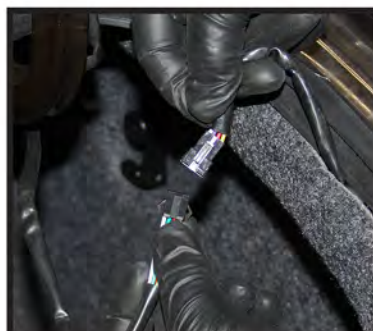

STEP 33

Connect the other end of extension wire harness to the outer tail light harness

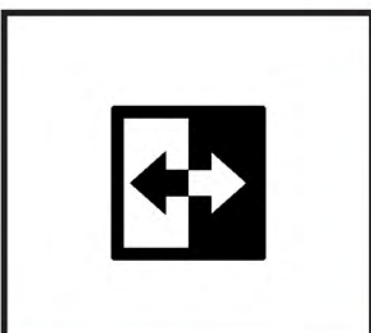

STEP 34

Please repeat the steps from 23 to 33 for the opposite side



STEP 35

Reconnect the license plate lamp and reverse camera harness



STEP 36

Reinstall the tail gate hatch license molding




STEP 37

Reinstall the four 8mm bolts and one phillips screw on the trunk lid




STEP 38

Reinstall the trunk lid lining

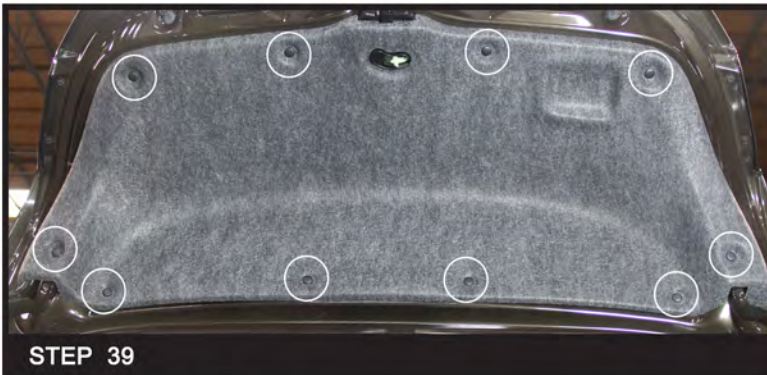

STEP 39

Reinstall the ten plastic retainers

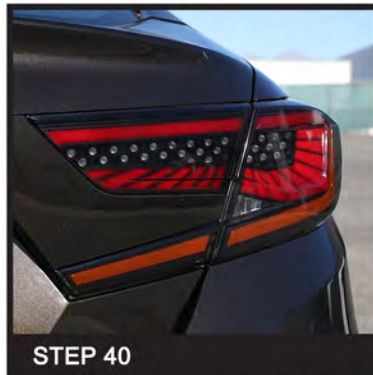

STEP 40

Close the trunk to complete the installation

