

Installation Guide for 99-09 Honda S2000 Headlights

NOTE: *Some vehicle require the DRL harness installed for the headlight to function properly.*

Do NOT use dielectric or any type of weather sealing grease on connectors or sockets.
Doing so will result in connection problems and will not be covered under warranty. Please click HERE for further explanation.

Table of Contents

- INSTALLATION TOOLS
- PART I - Remove Headlights
- PART II - Install Headlights

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.

INSTALLATION TOOLS



1/4 Ratchet



Power Tool

NOTE: When using power tools, always ensure that you do not overtighten the screws.



Metal Panel Popper



Phillips Screwdriver



Flat Screwdriver



1/4 Extension

Socket	**SIZE NEEDED**	8 10

PART I - Remove Headlights

STEP 1 DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.

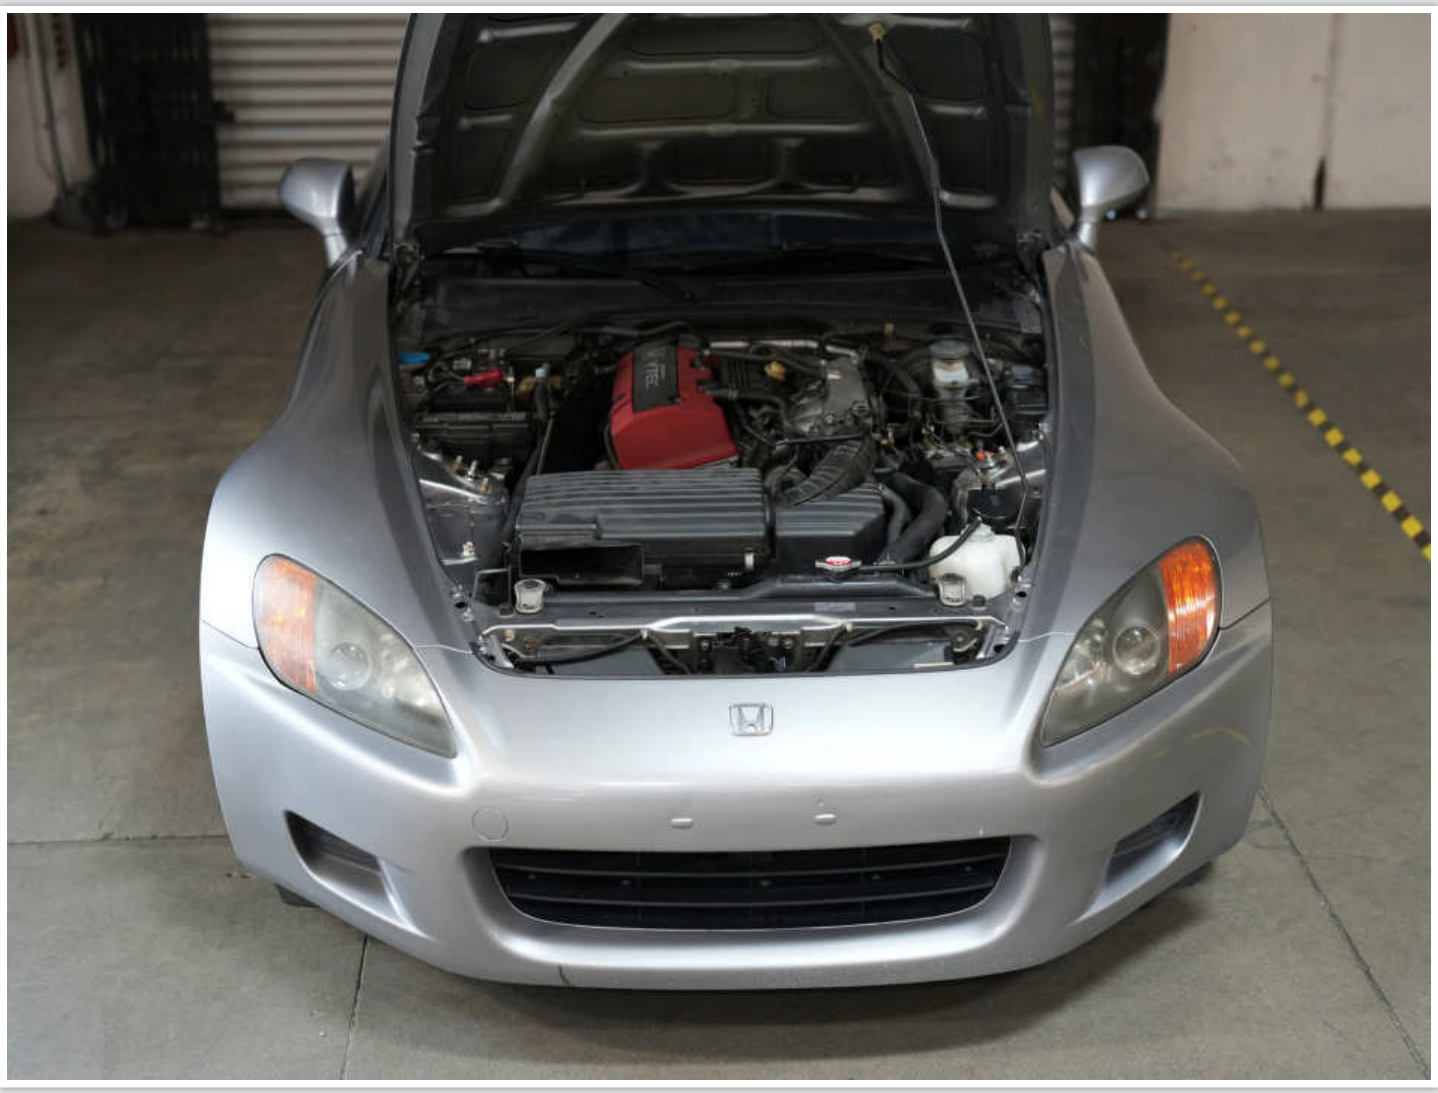

STEP 2 REMOVE THE FRONT BUMPER

Begin by removing the five PH3 screws from the plastic metal trim. Then, carefully remove the trim and set it aside for future reinstallation.

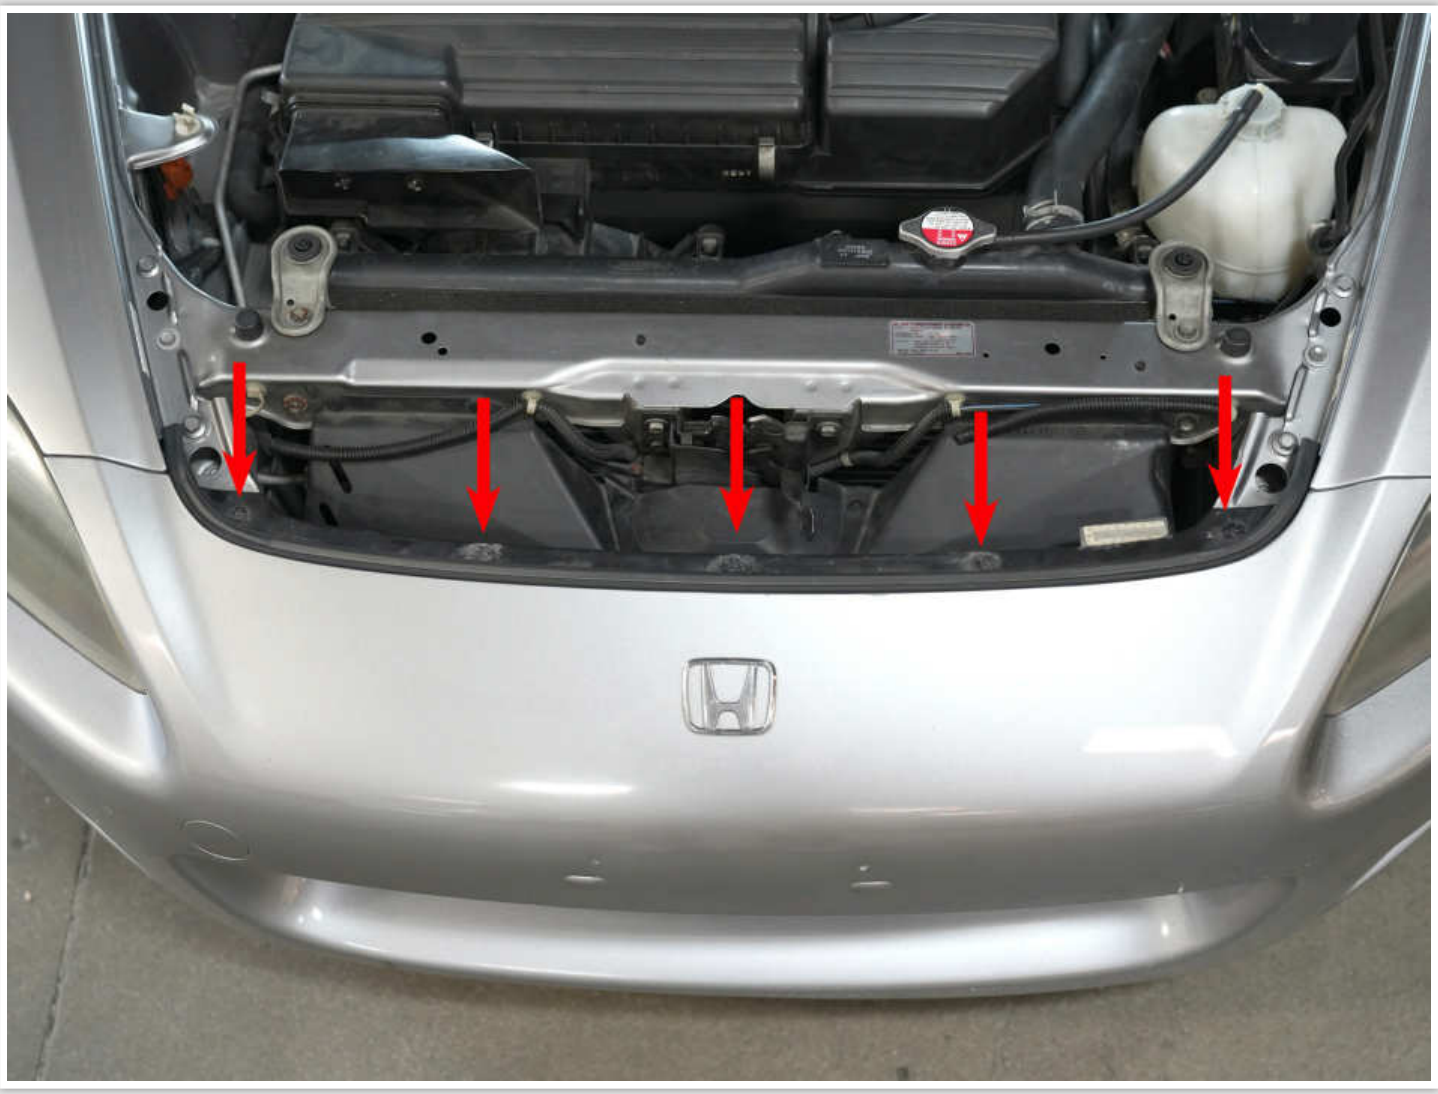

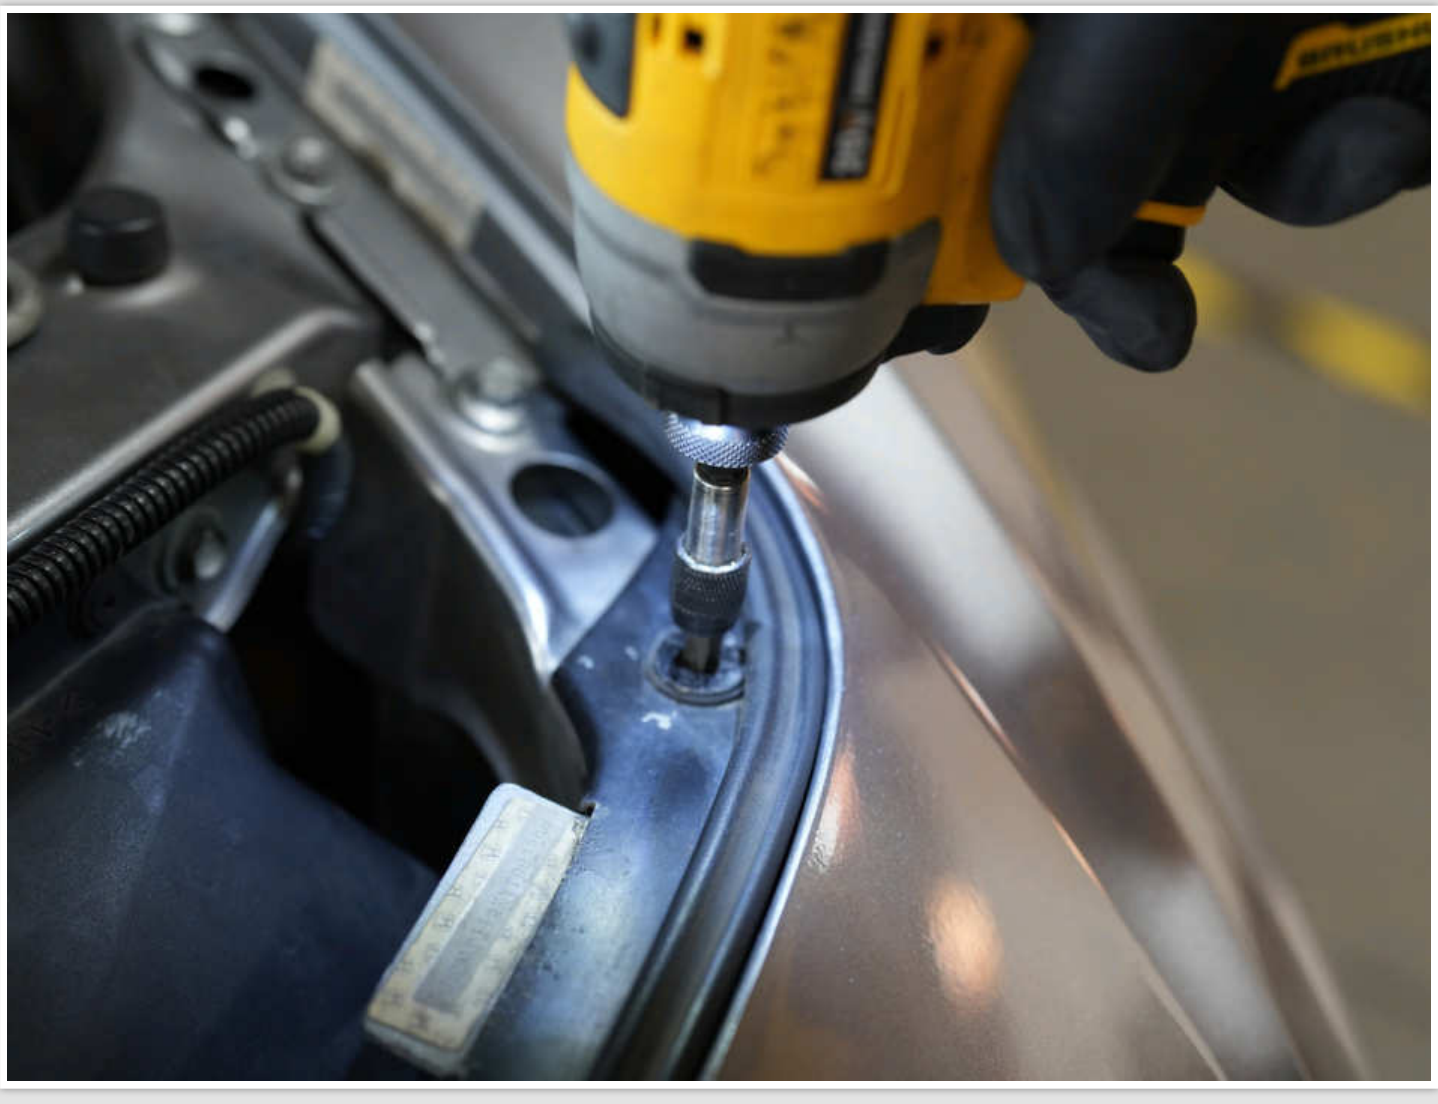

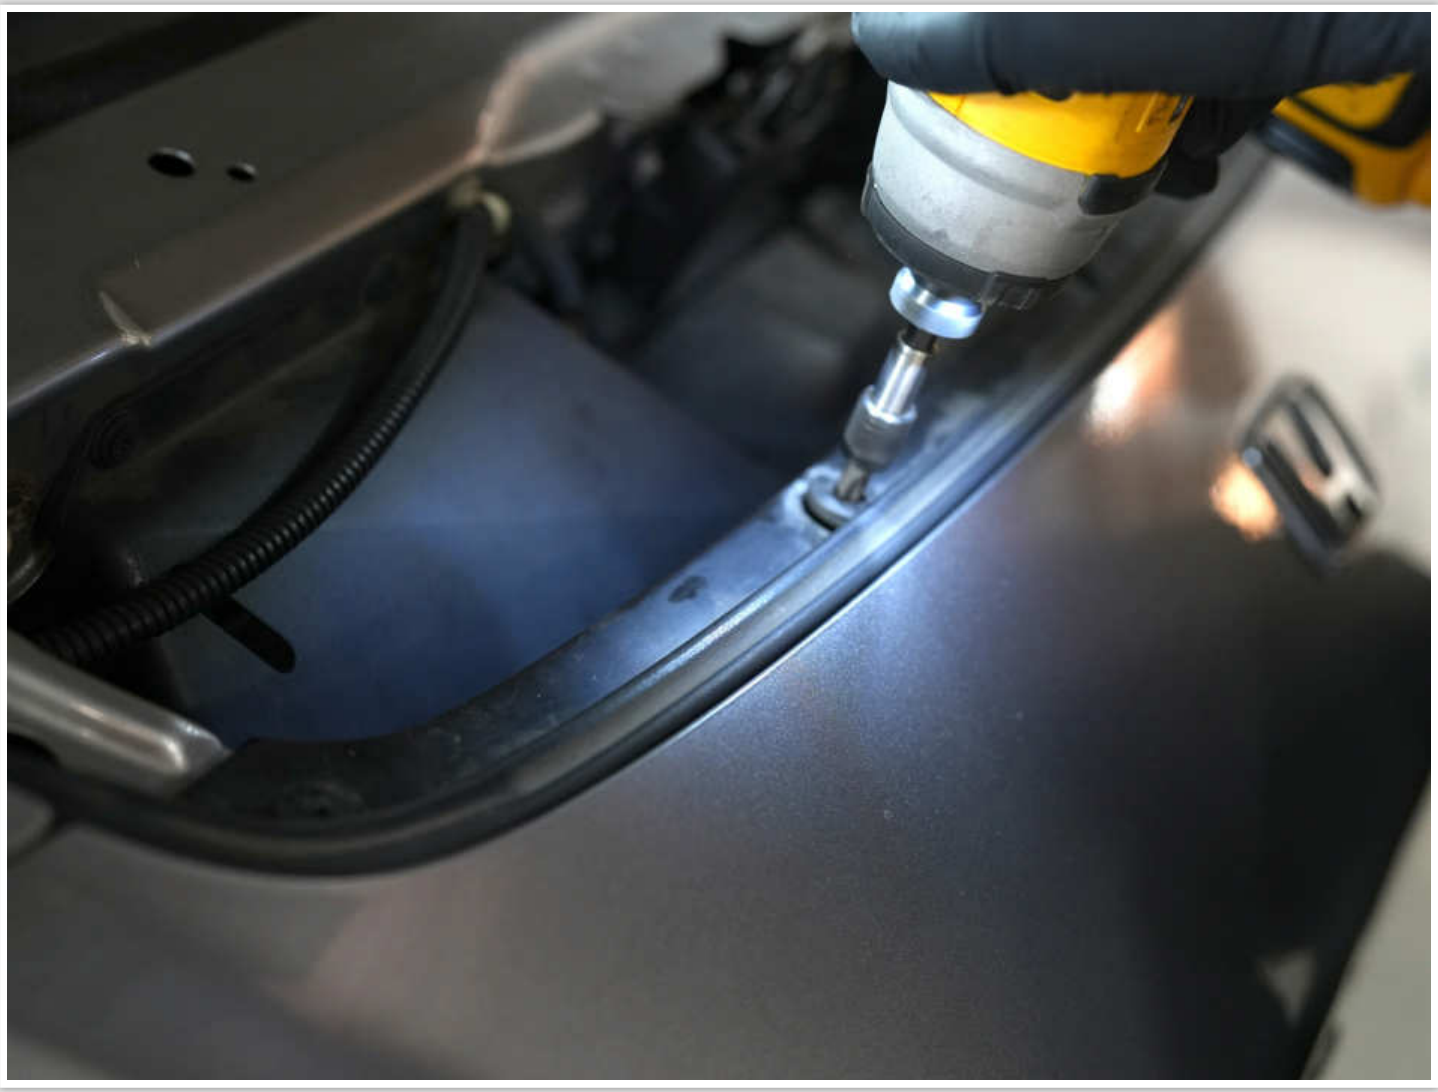

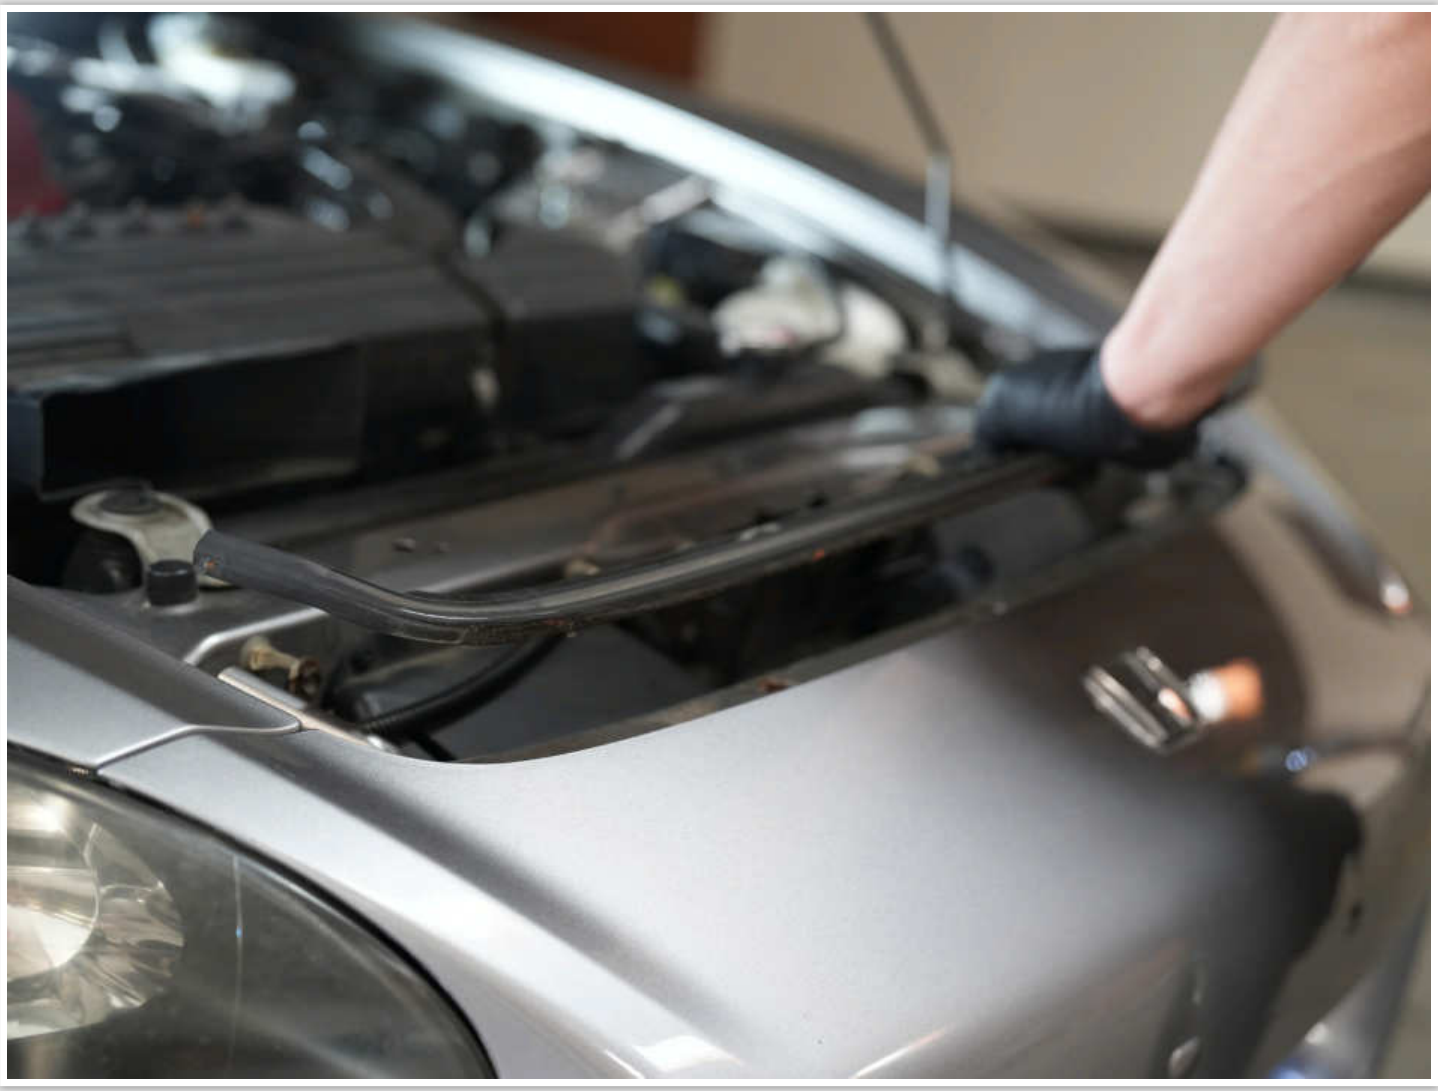

Remove the two 10mm bolts located inside the top of the front bumper on each side.

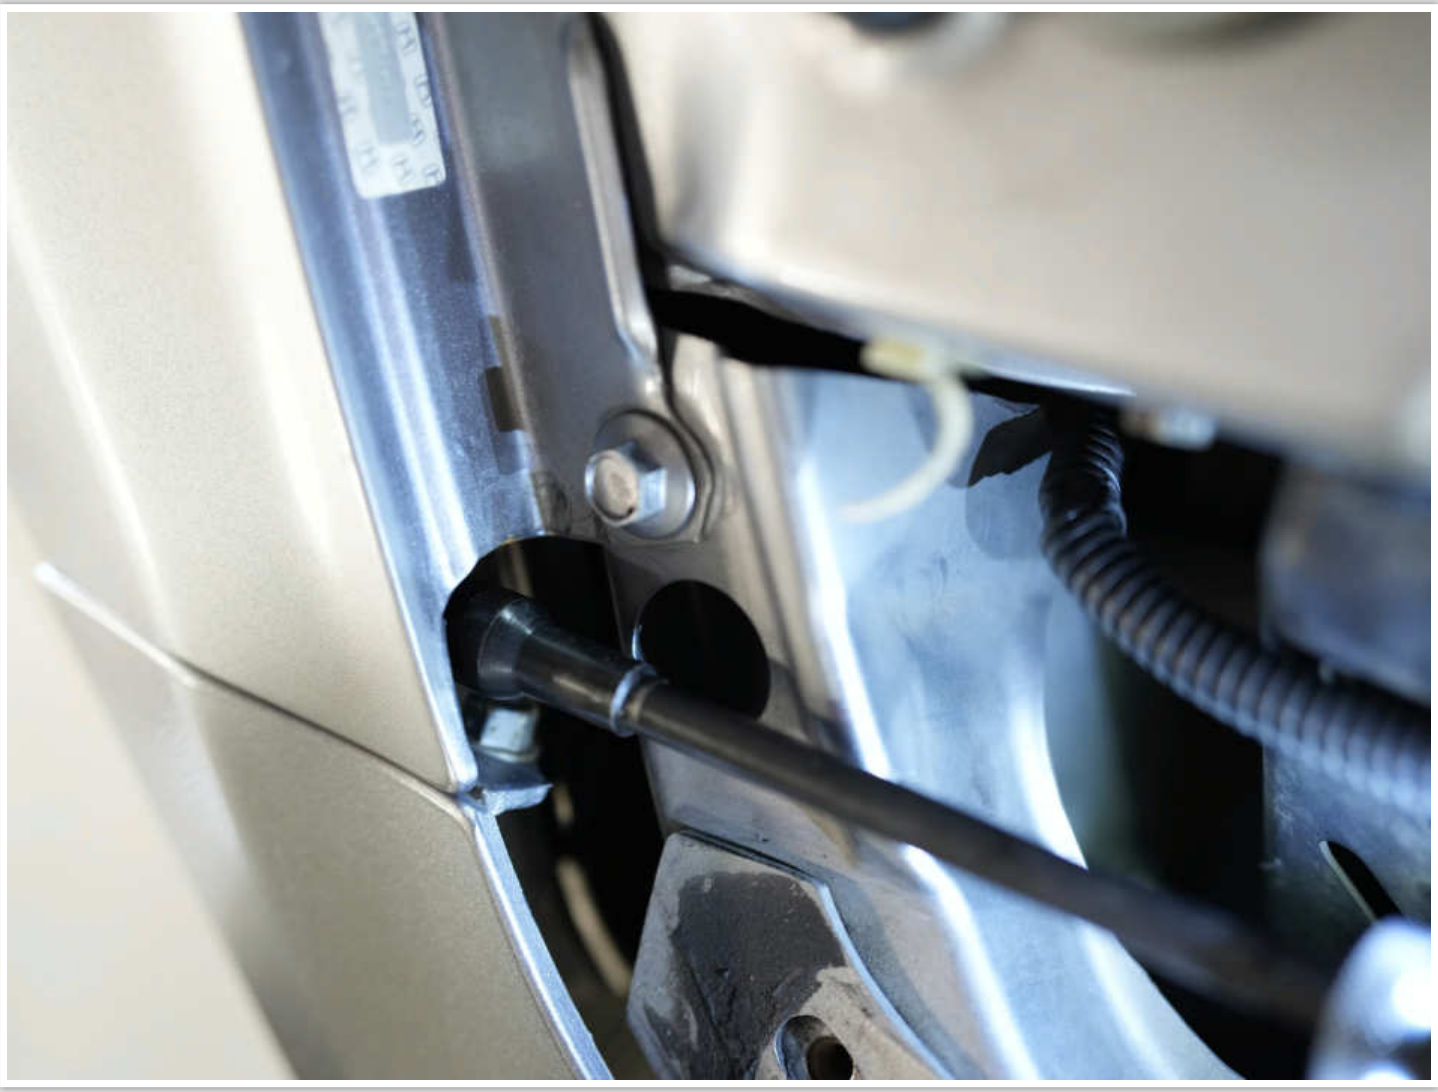

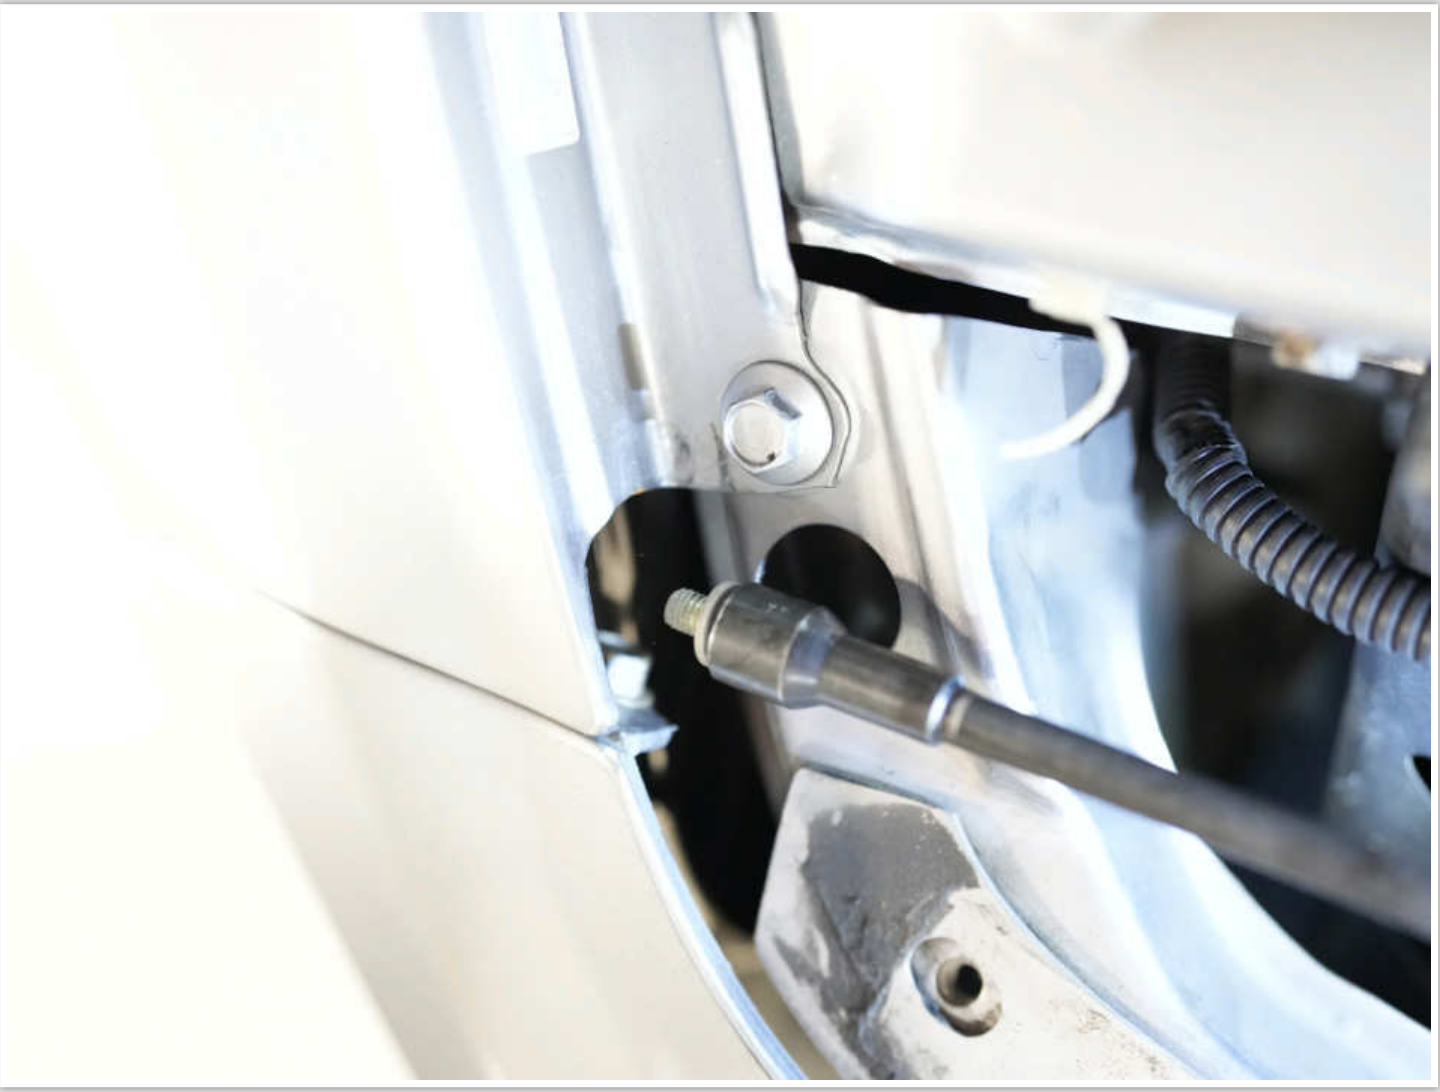

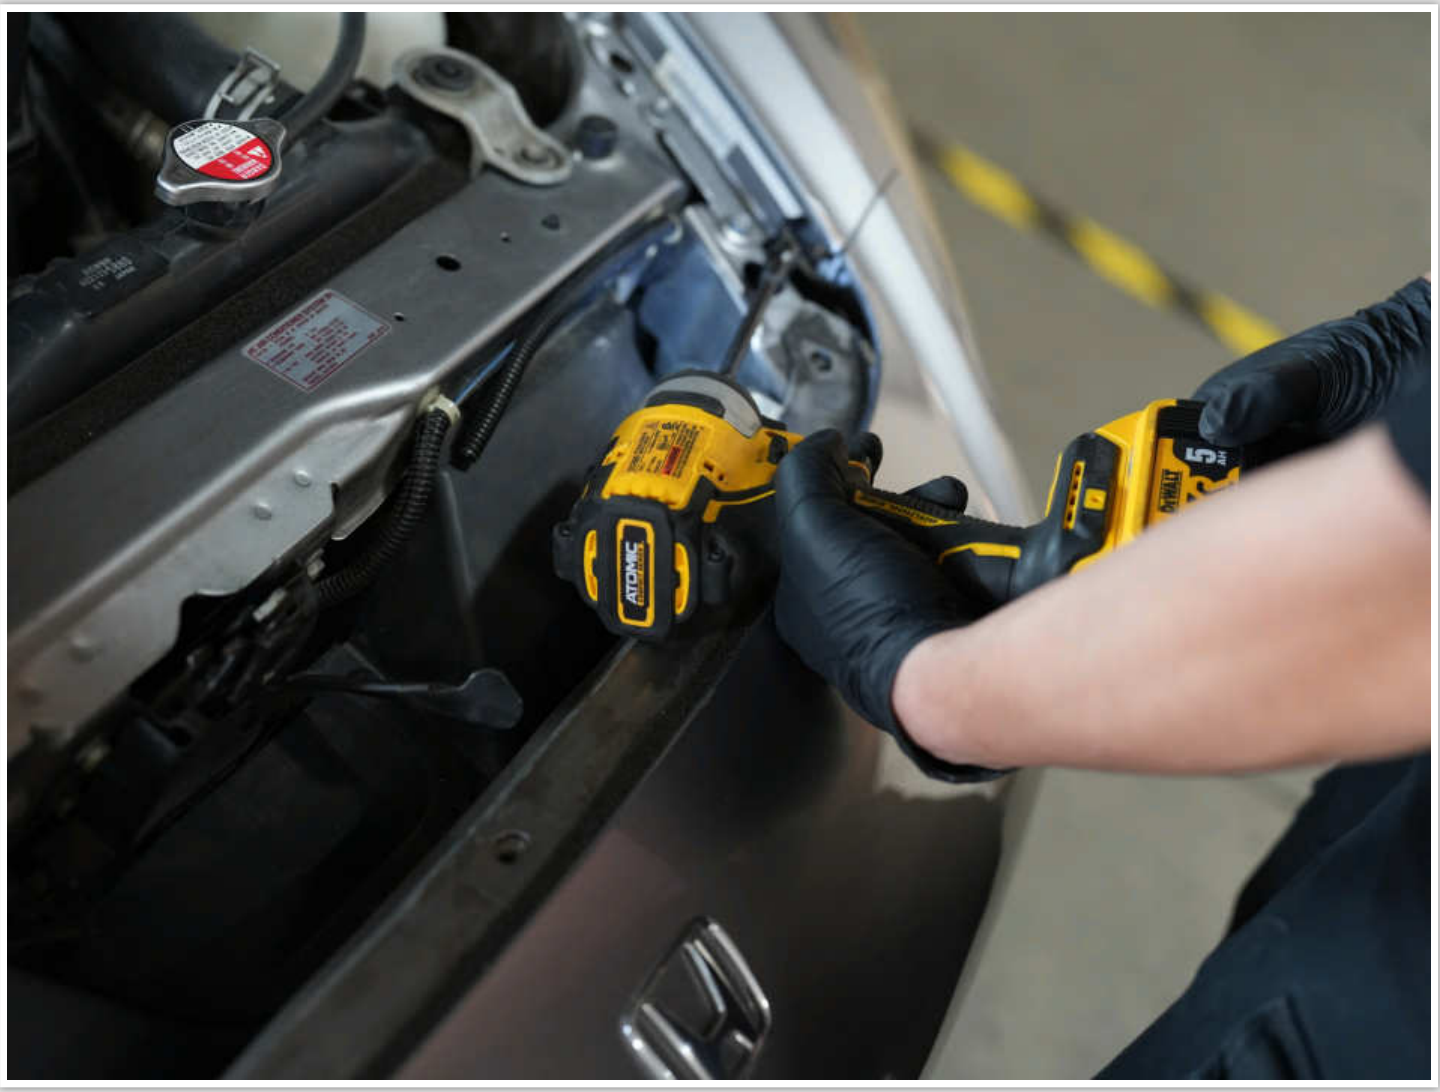

Detach the two 8mm screws from each side of the fender wheel well.

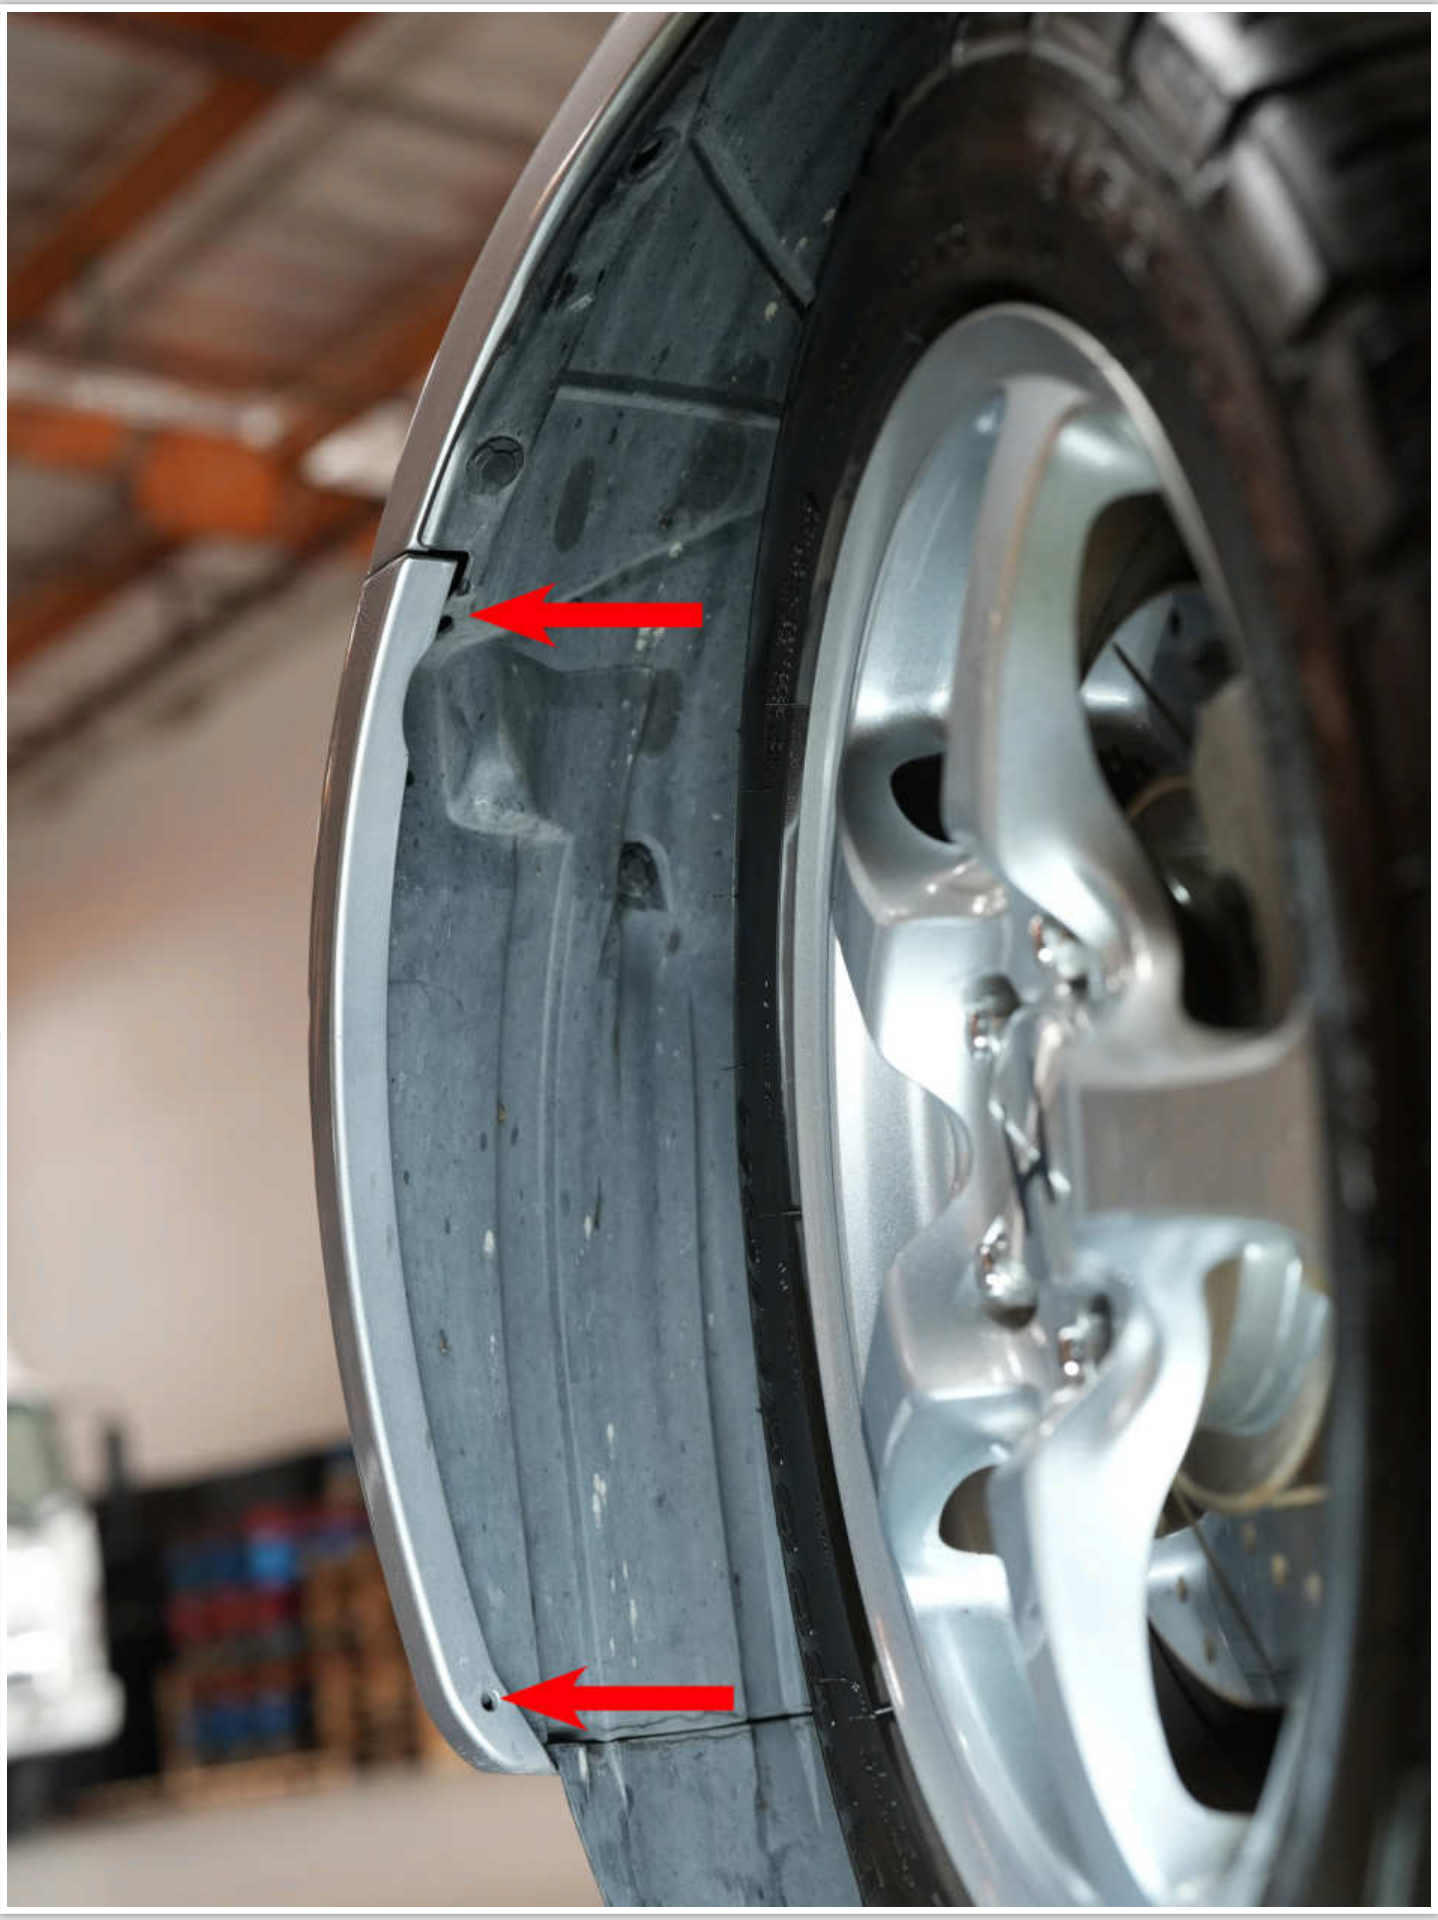

Gently detach the front bumper by pulling outward from the side, disengaging it from the mounting clips.

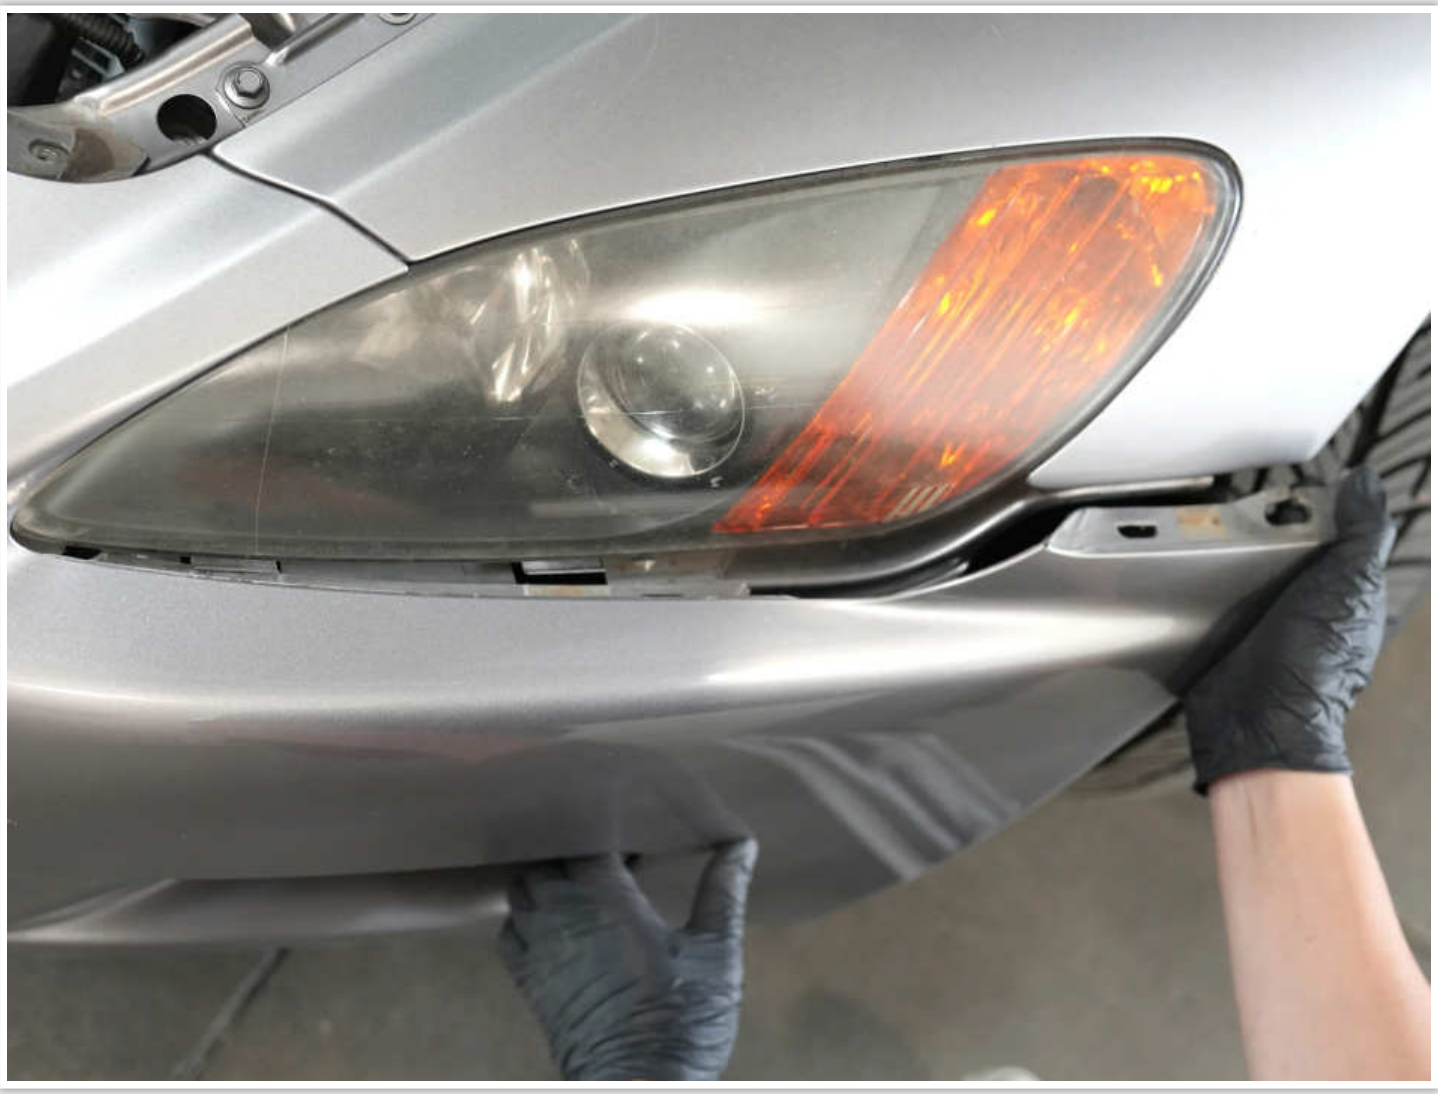

Repeat the same steps for the other side of the wheel well.

To detach the entire bumper, uninstall the nine 10mm bolts located beneath the front bumper securely.

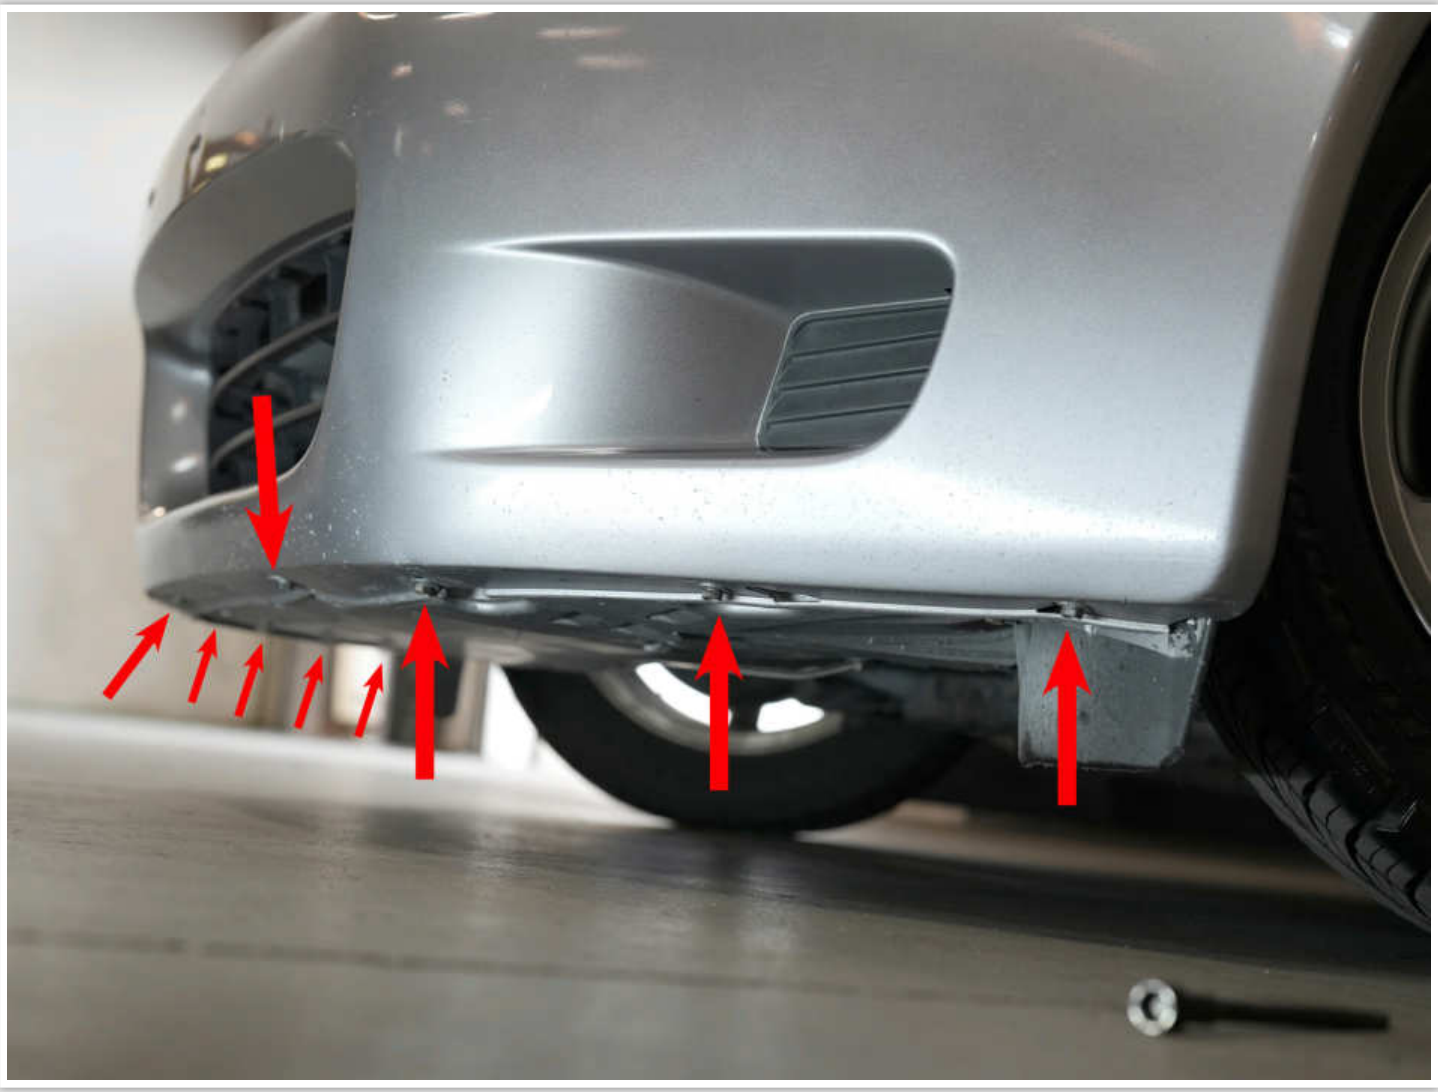

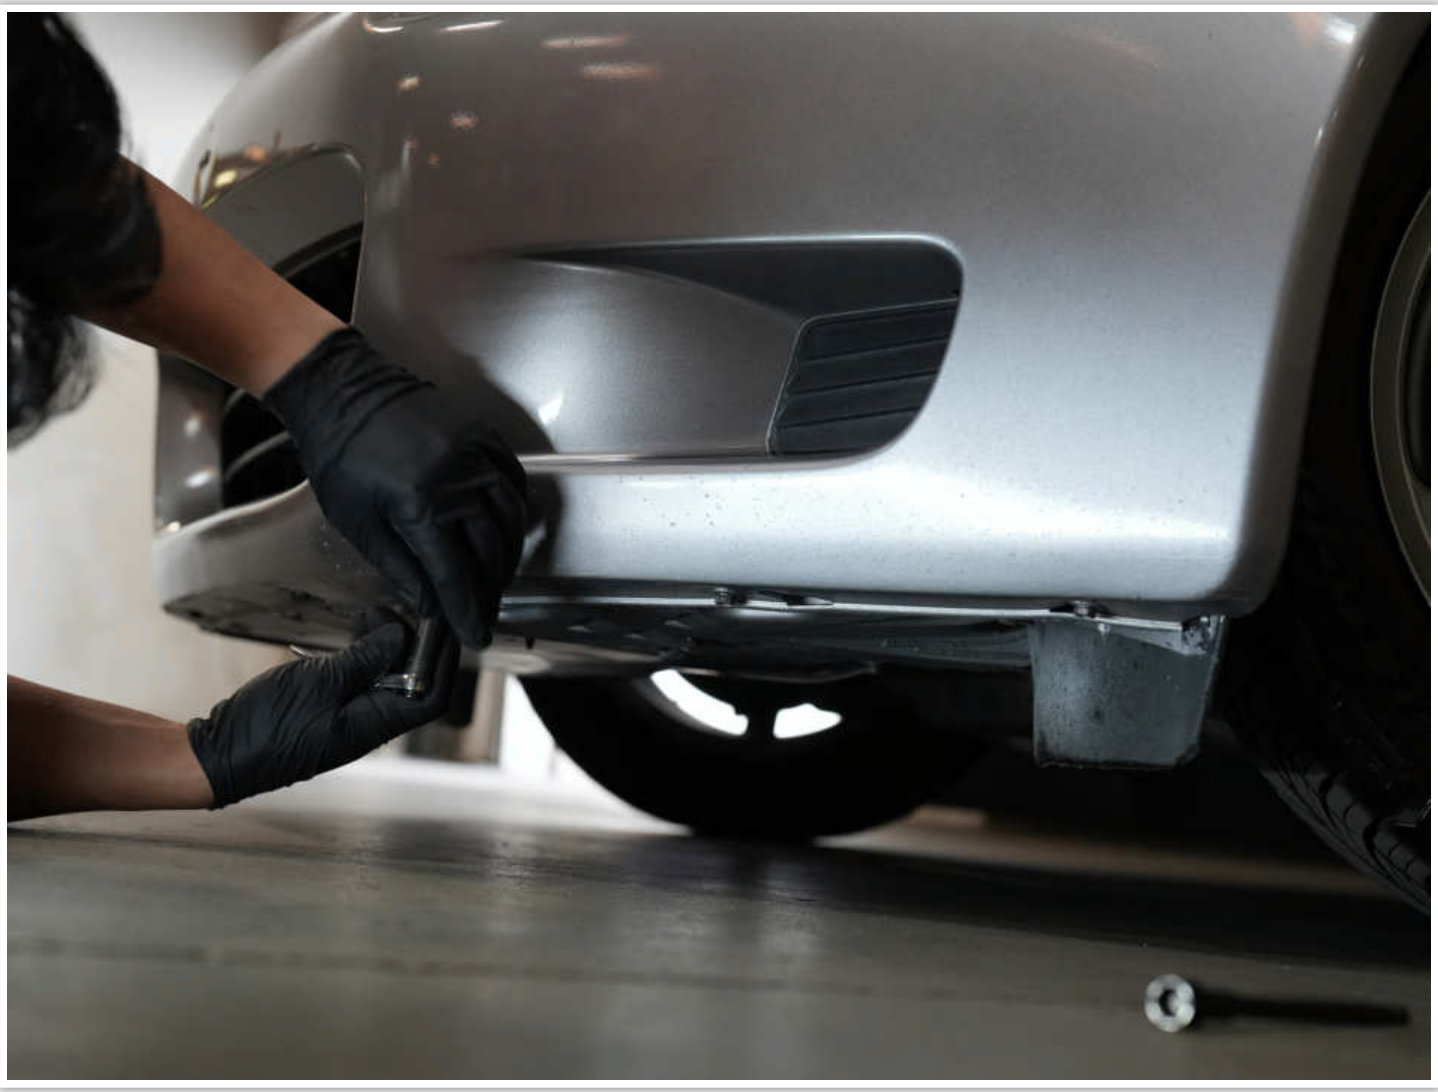

Proceed to remove the front bumper entirely. Set it aside for later reinstallation.

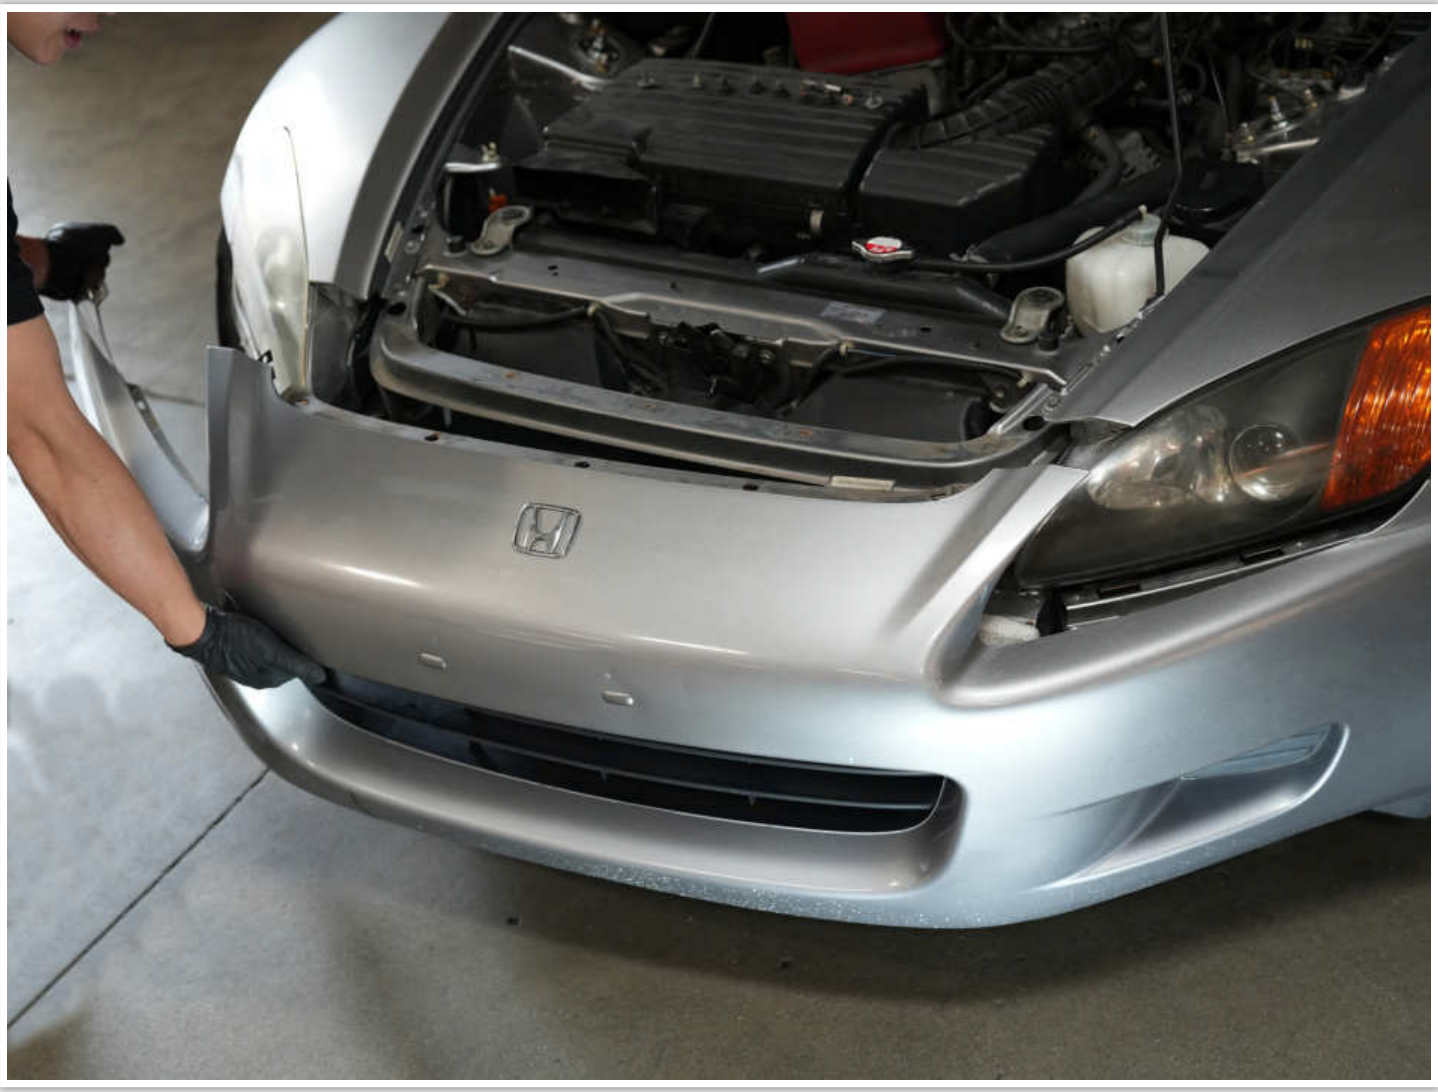

STEP 3 REMOVE THE HEADLIGHT BRACKETS

Remove the four 10mm bolts from the headlight brackets.

Repeat the same steps on the other side.

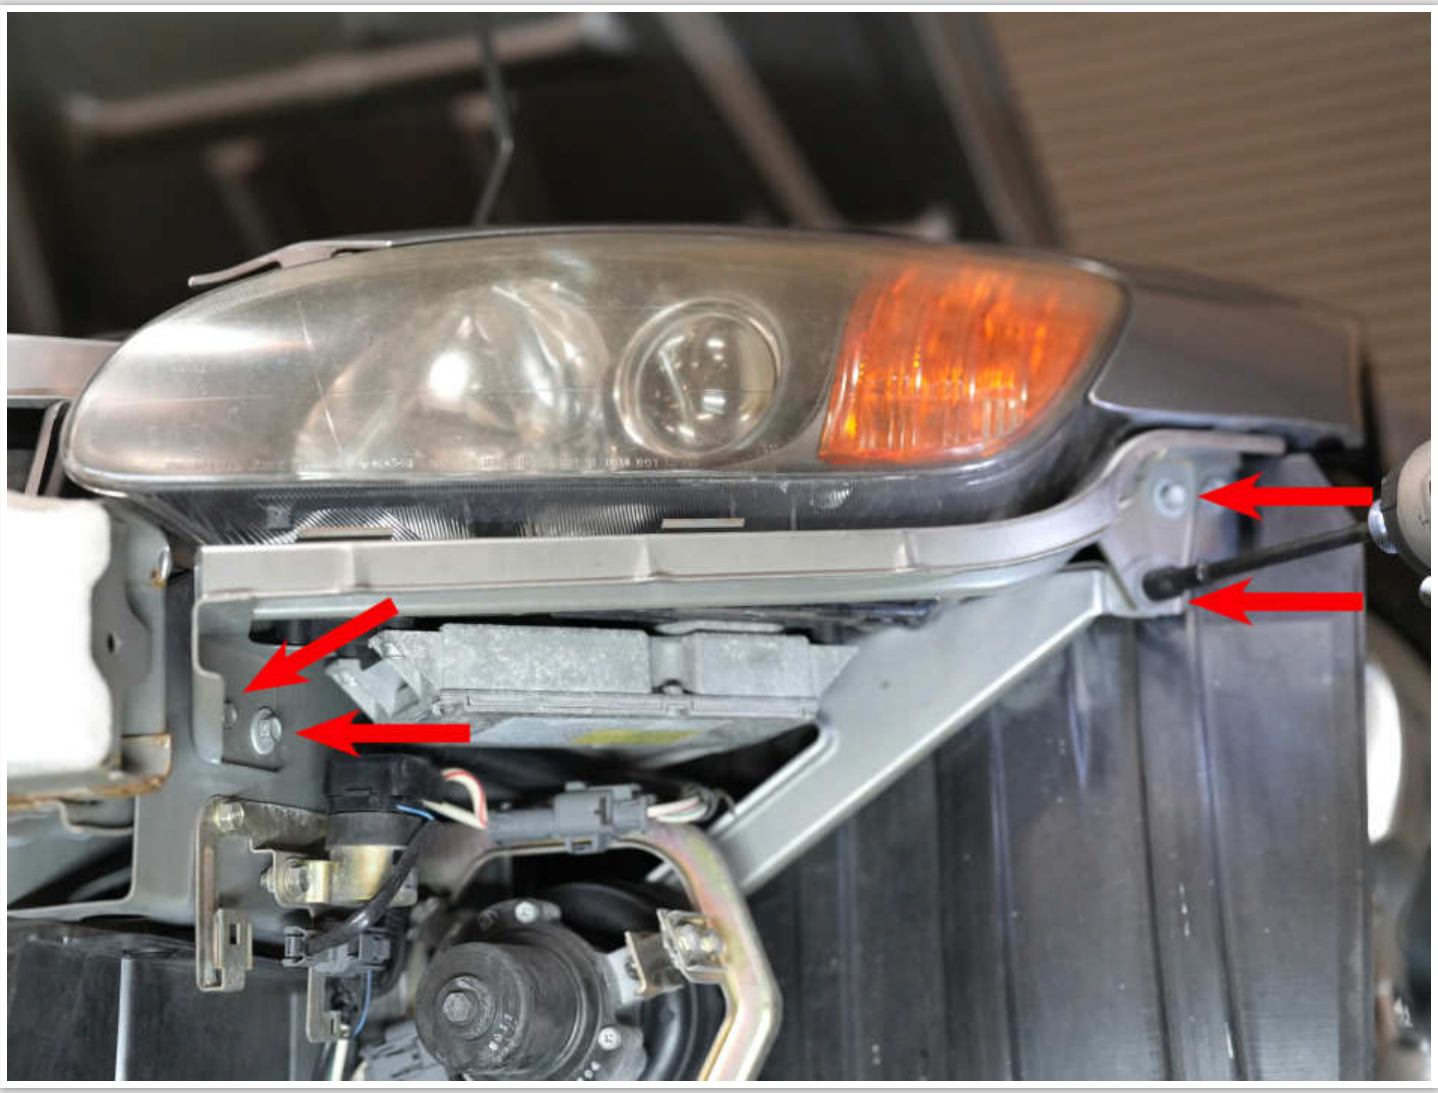

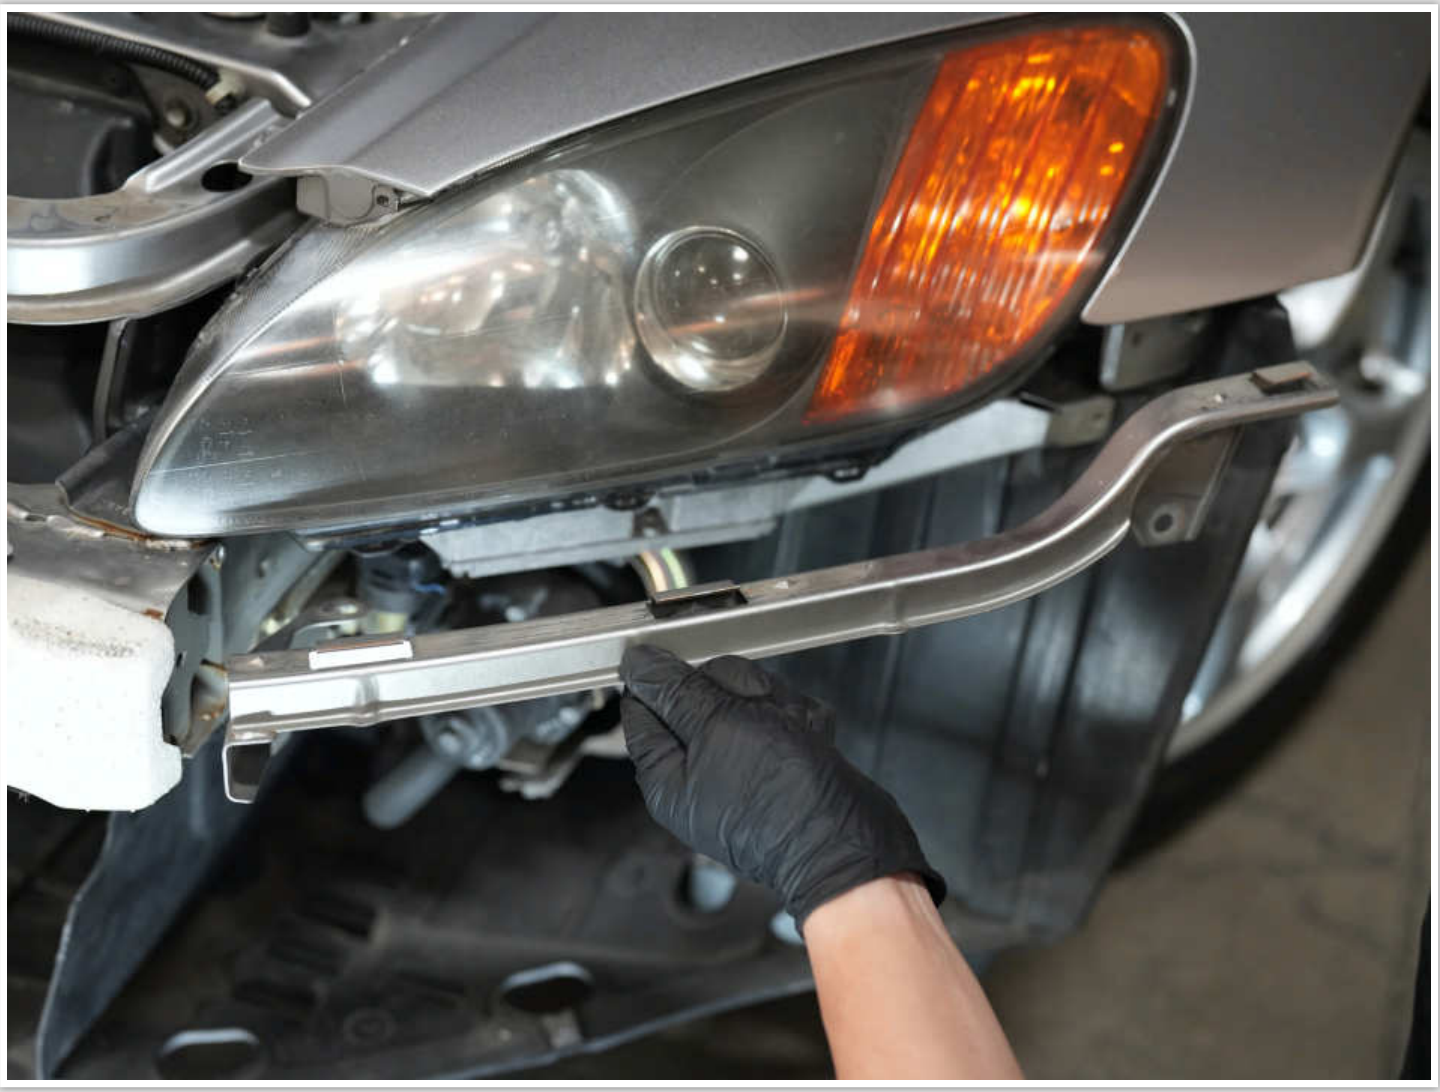

STEP 4 REMOVE THE HEADLIGHTS

First, remove the 10mm bolt from the side of the headlight assembly, then remove the 10mm bolt from the underside of the headlight.

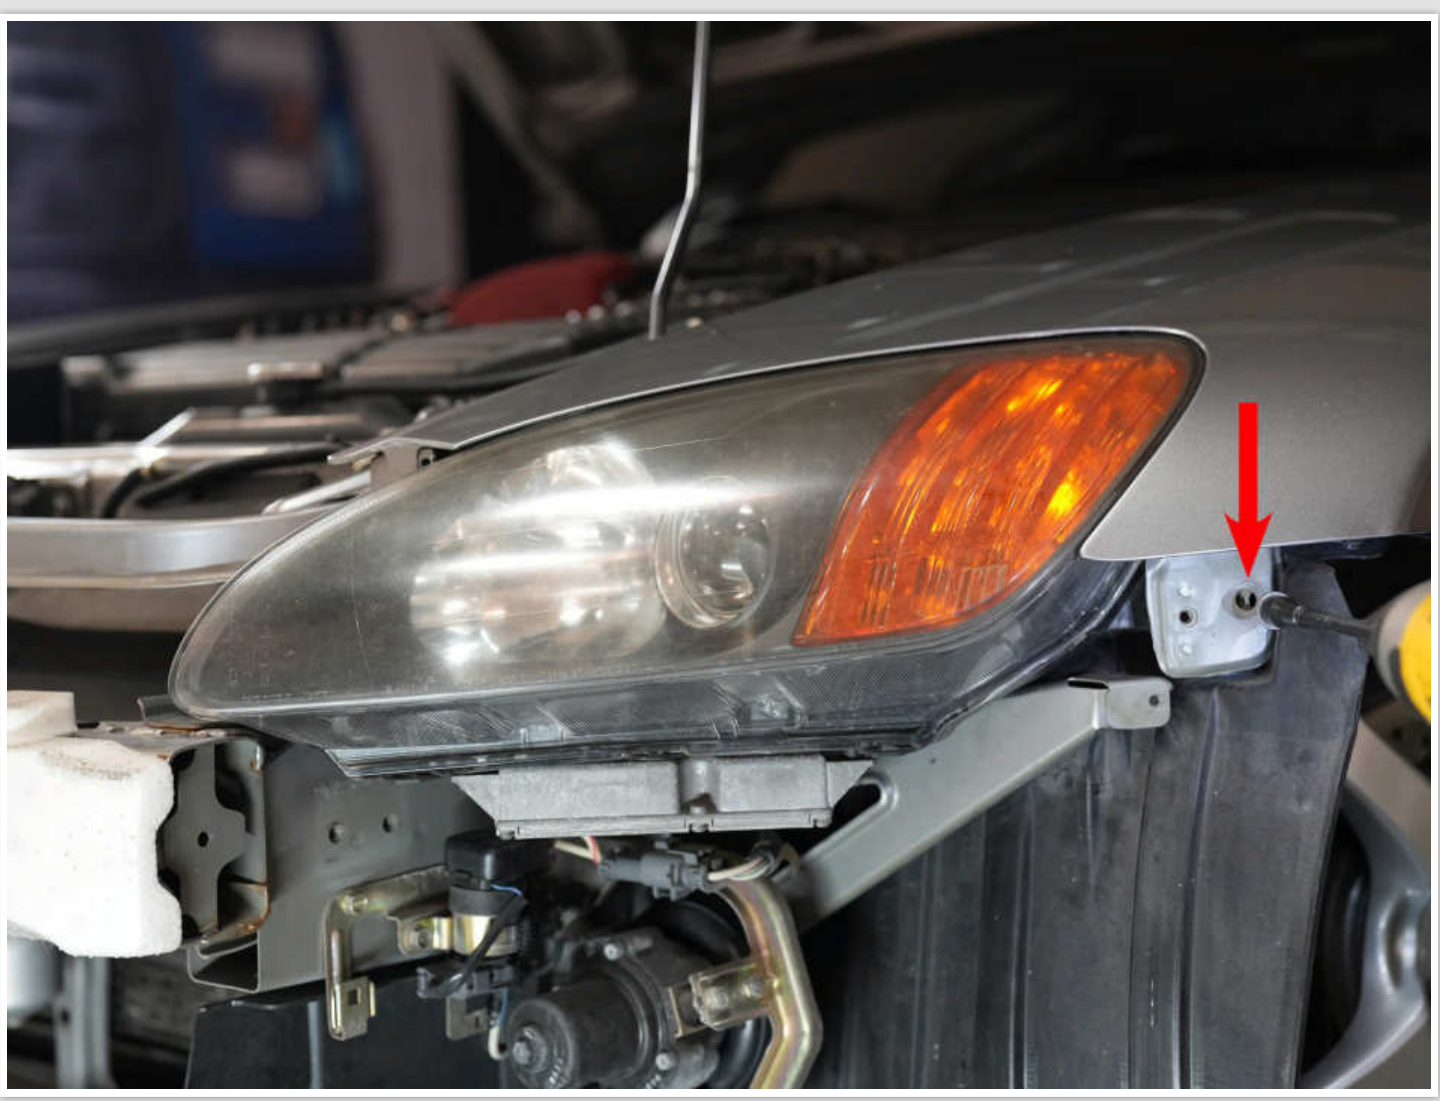

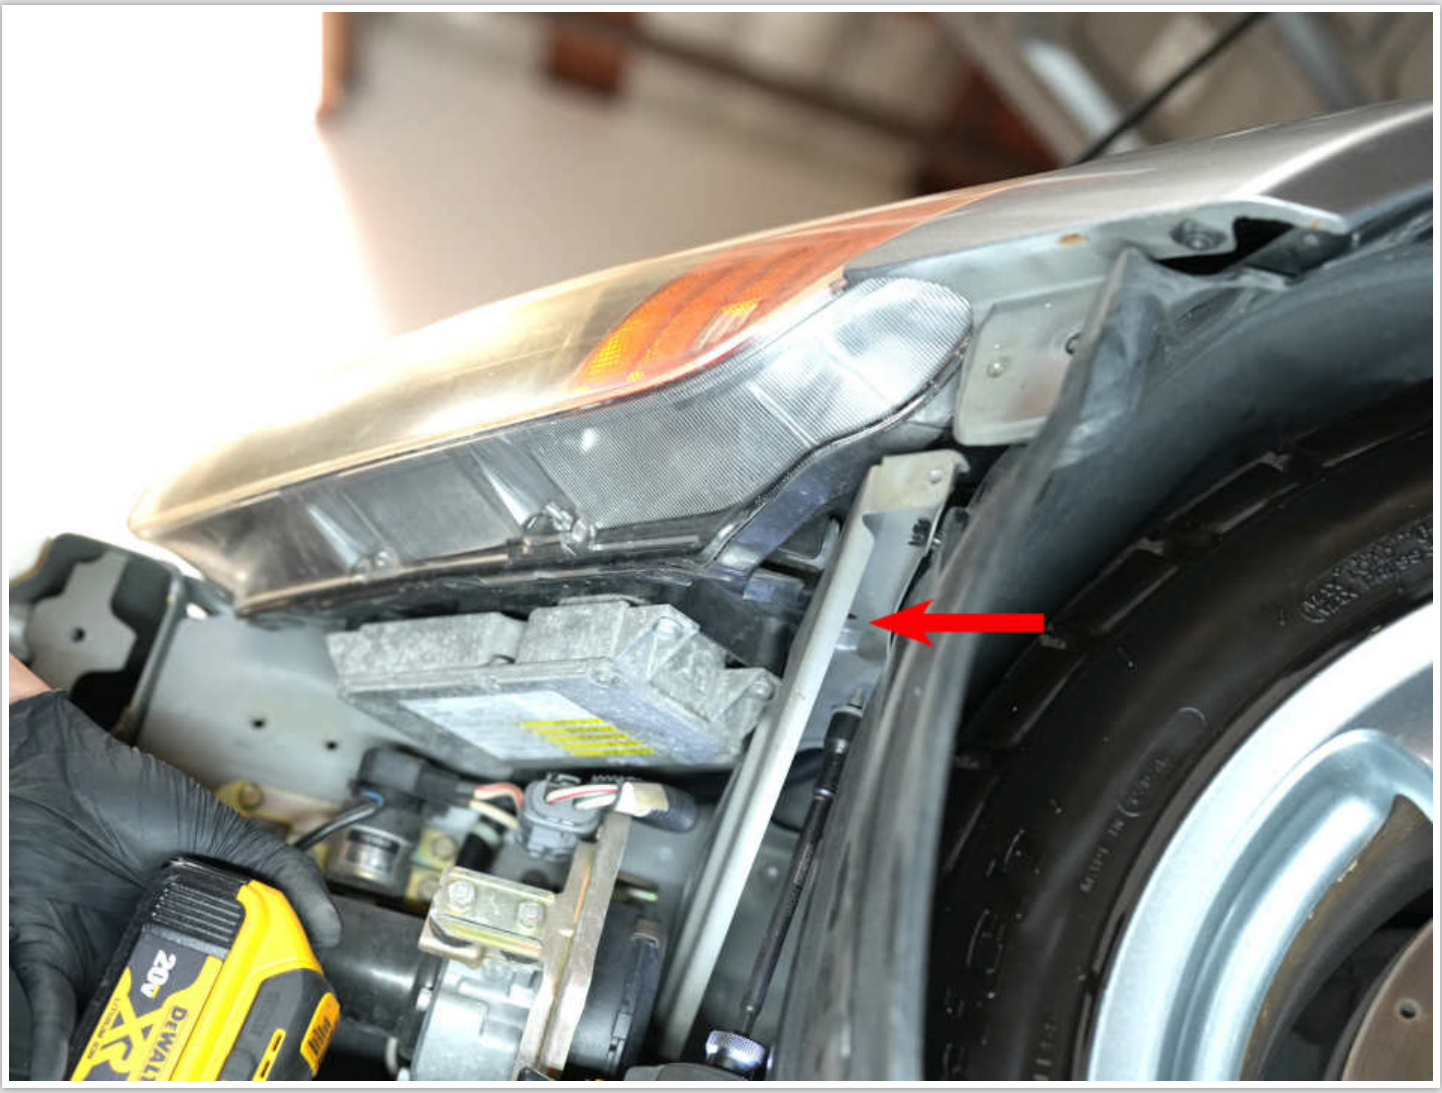

Next, remove the two 10mm bolts securing the top of the headlight.

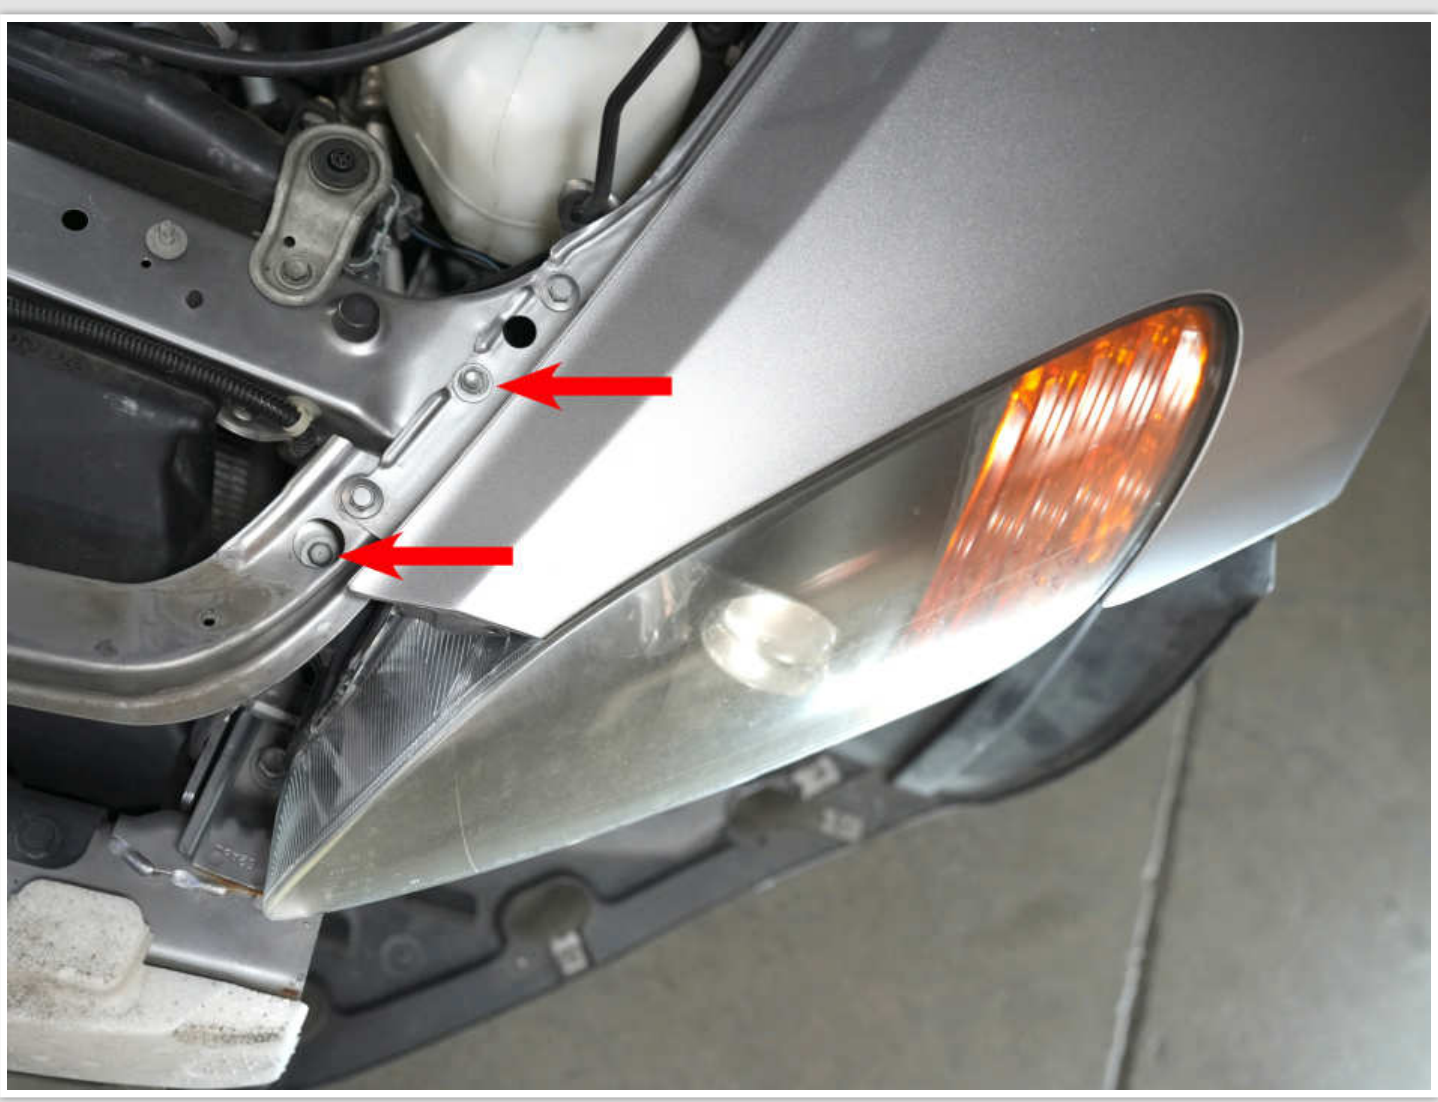

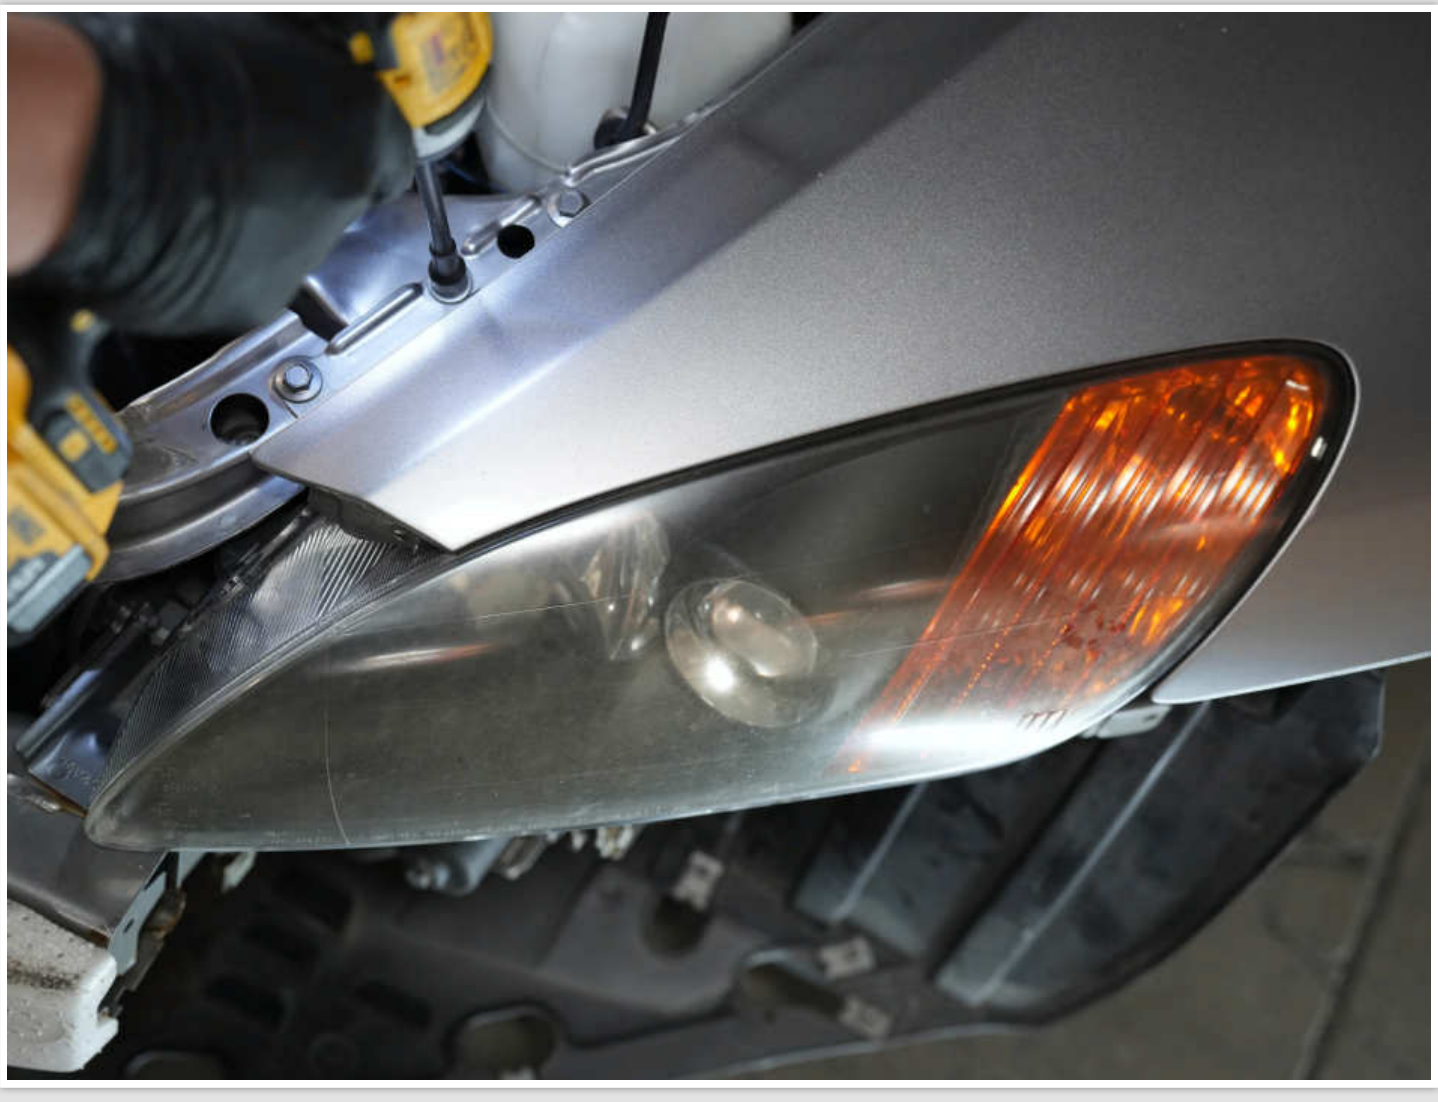

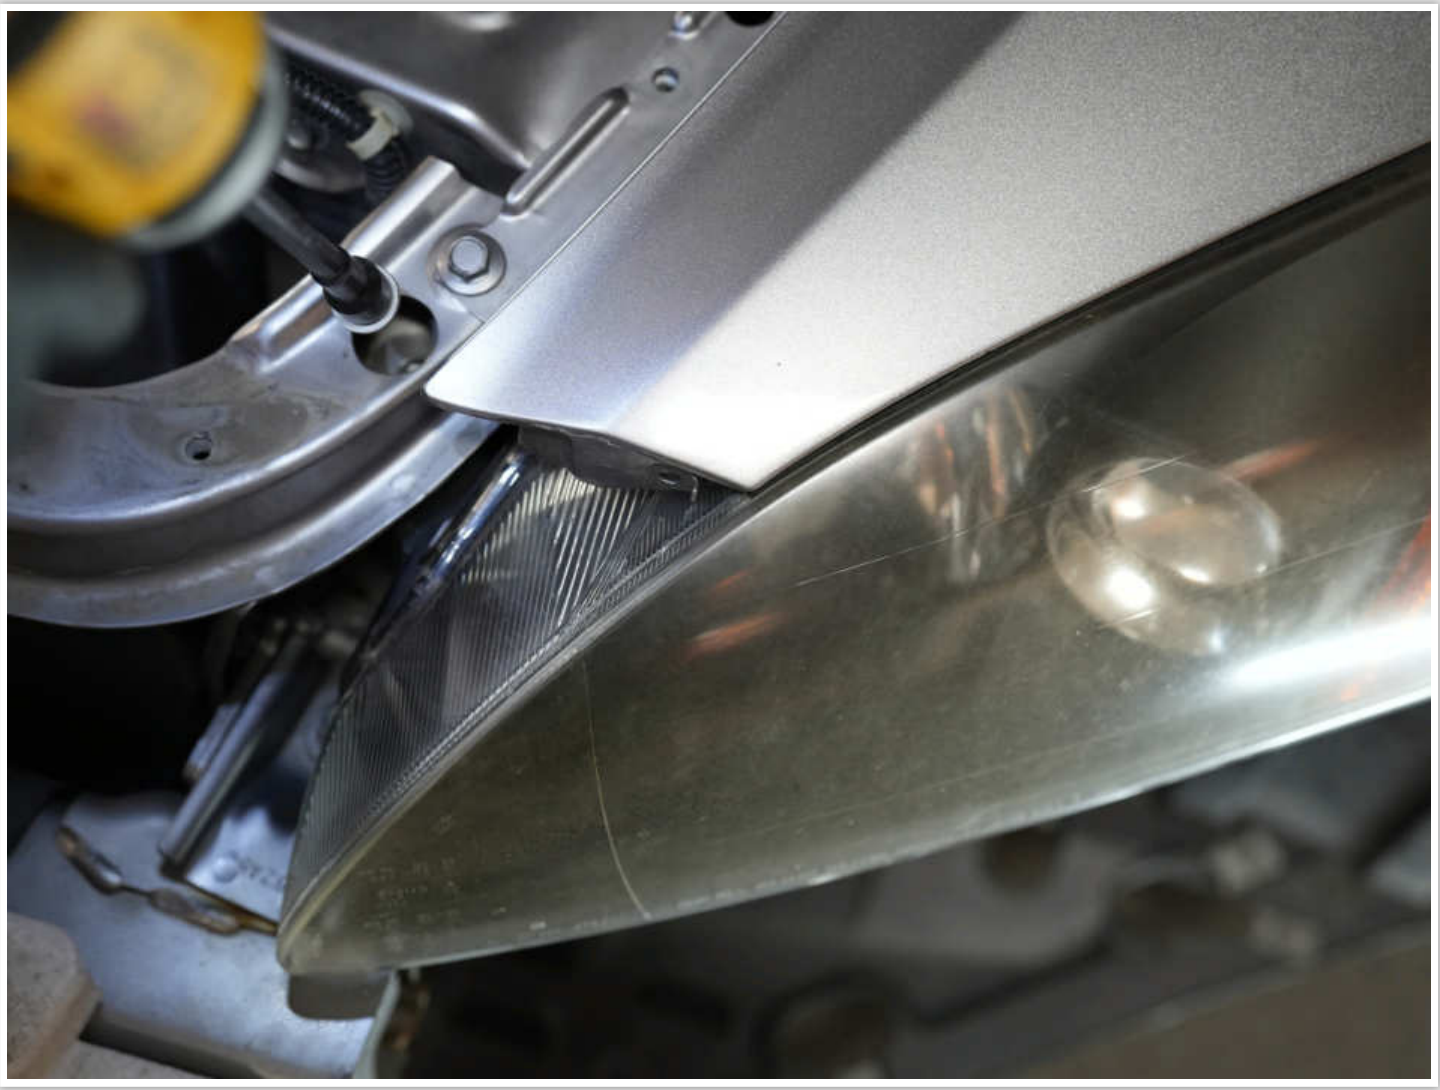

Gently pull the headlight assembly outward at a slight angle to disengage it. Unplug the headlight sockets to complete the removal.

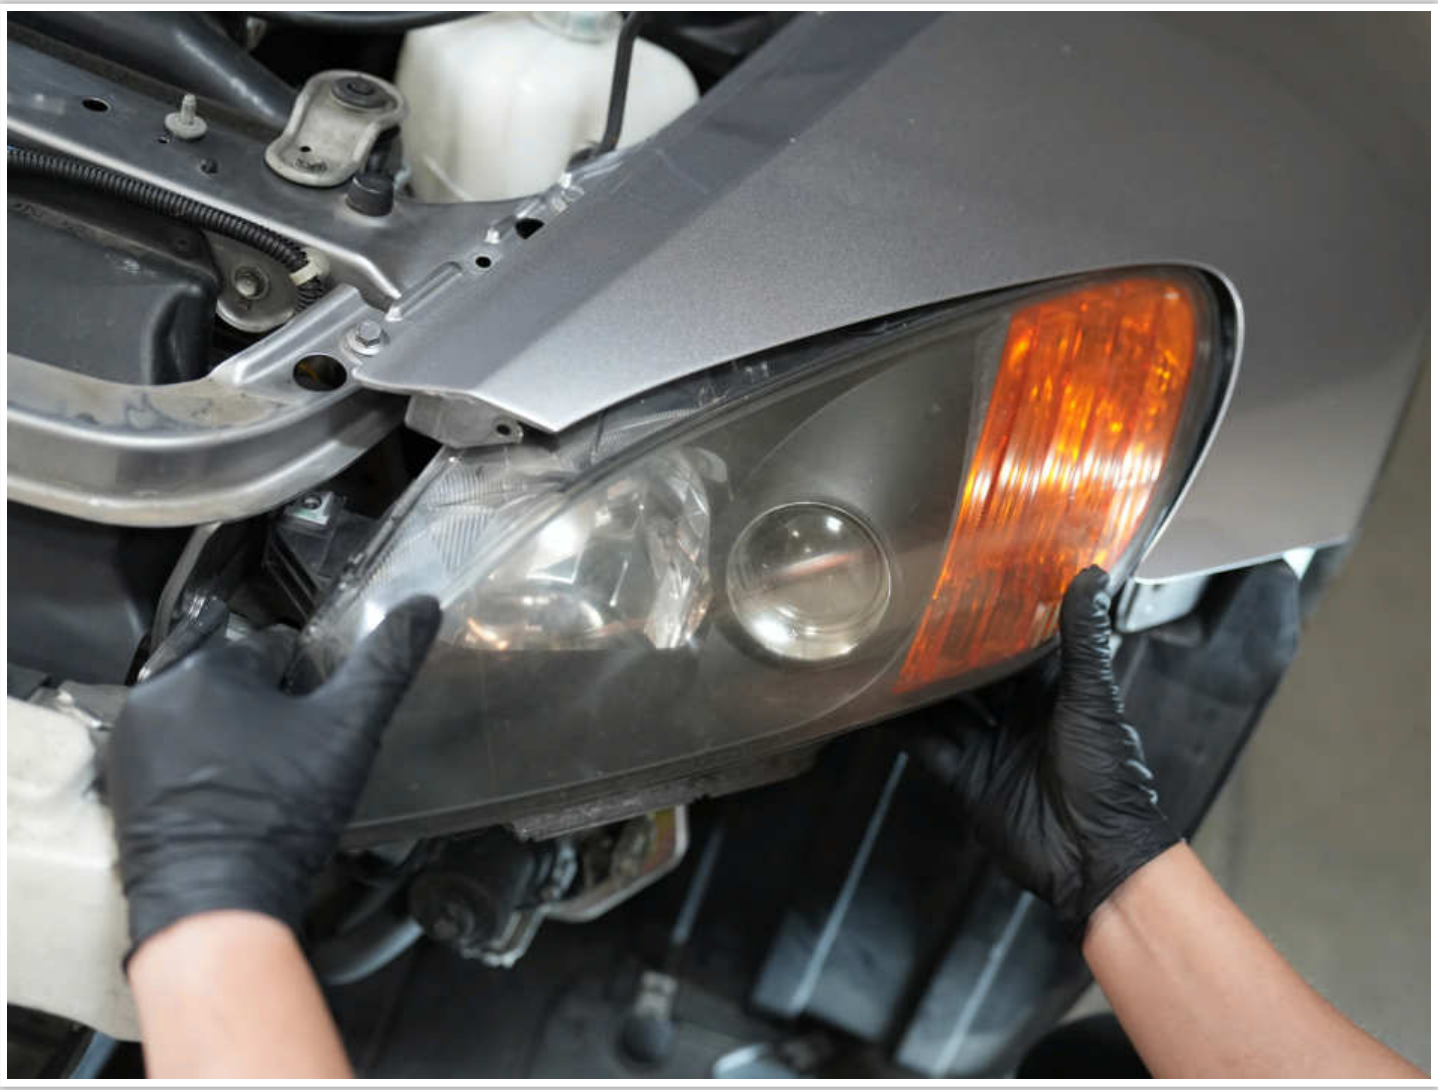

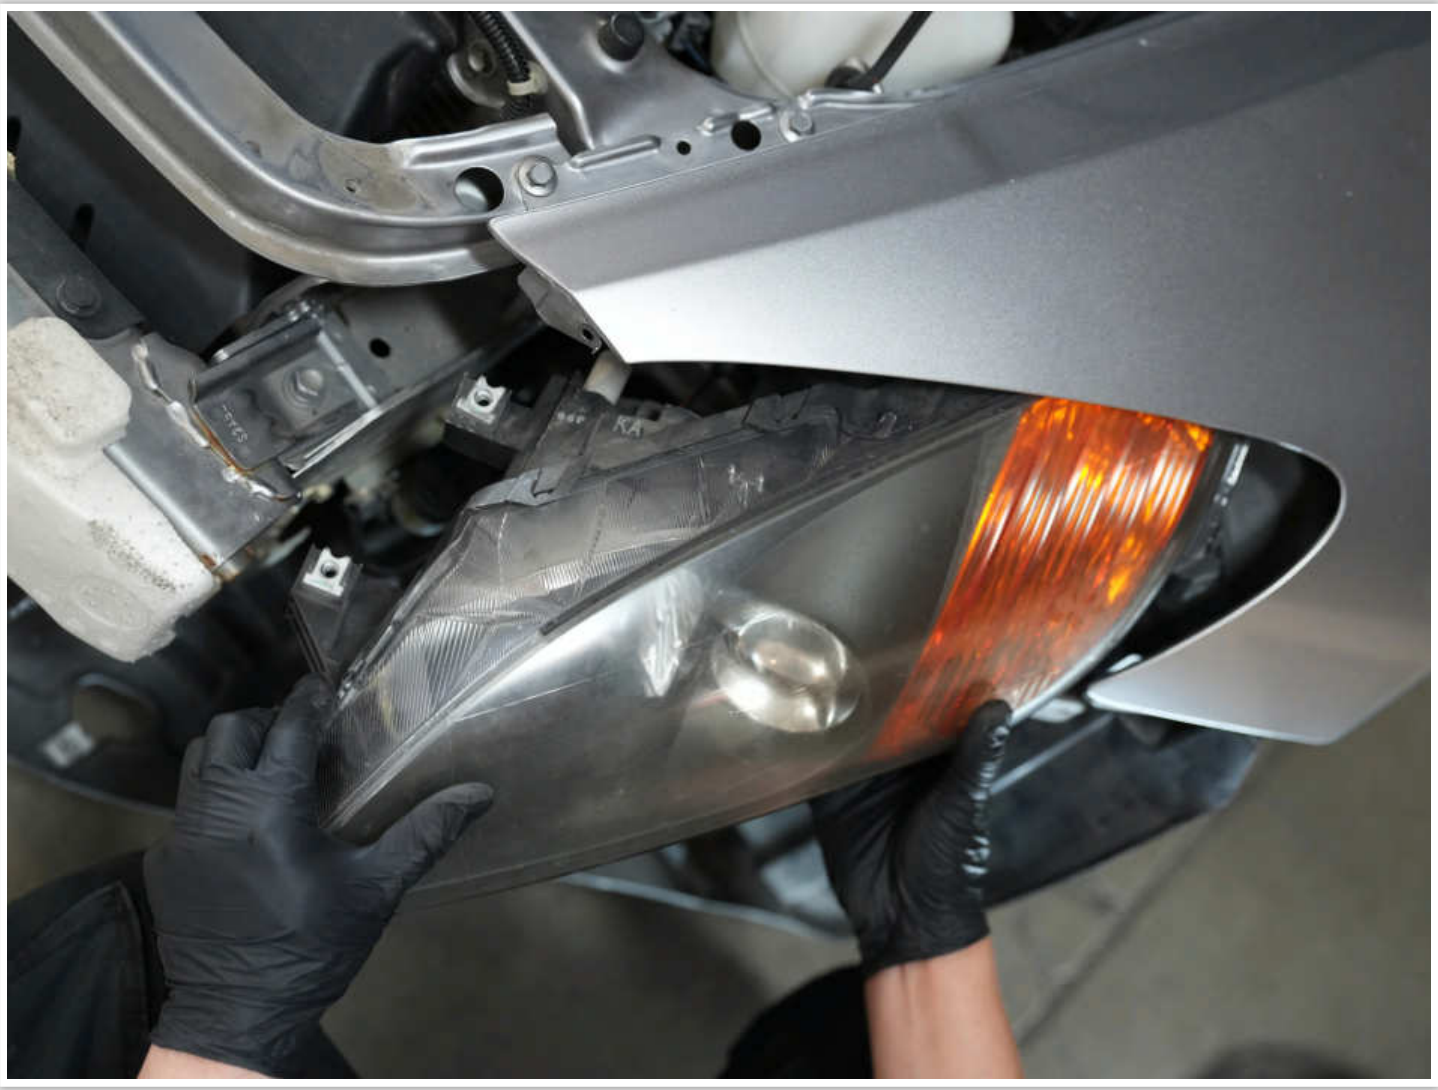

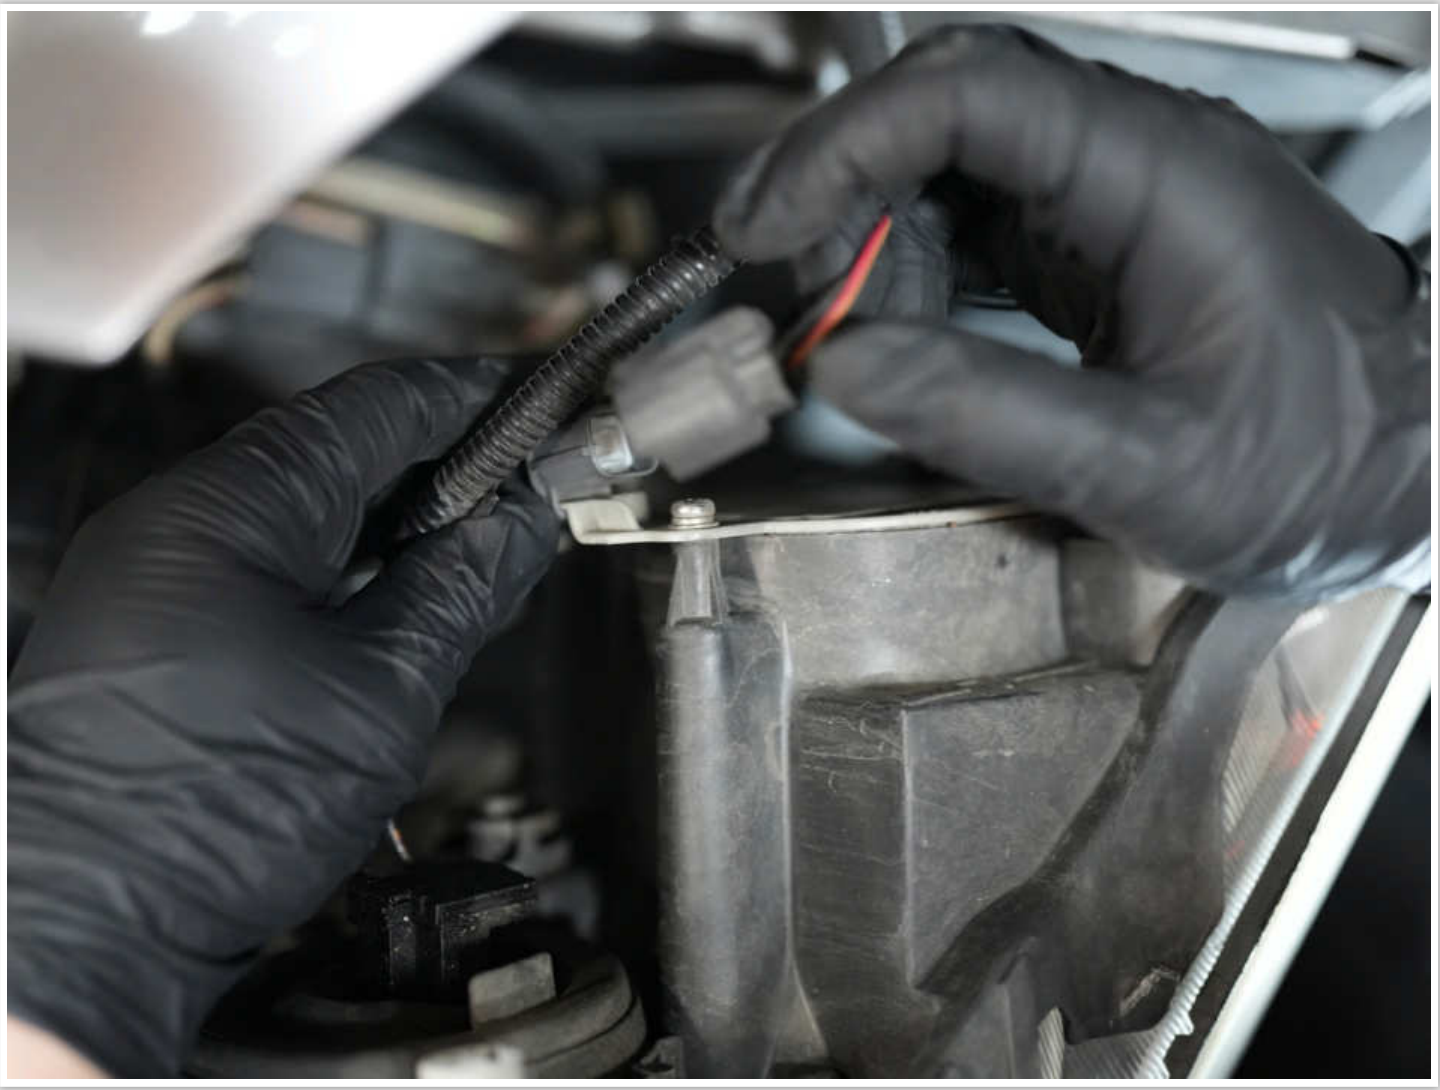

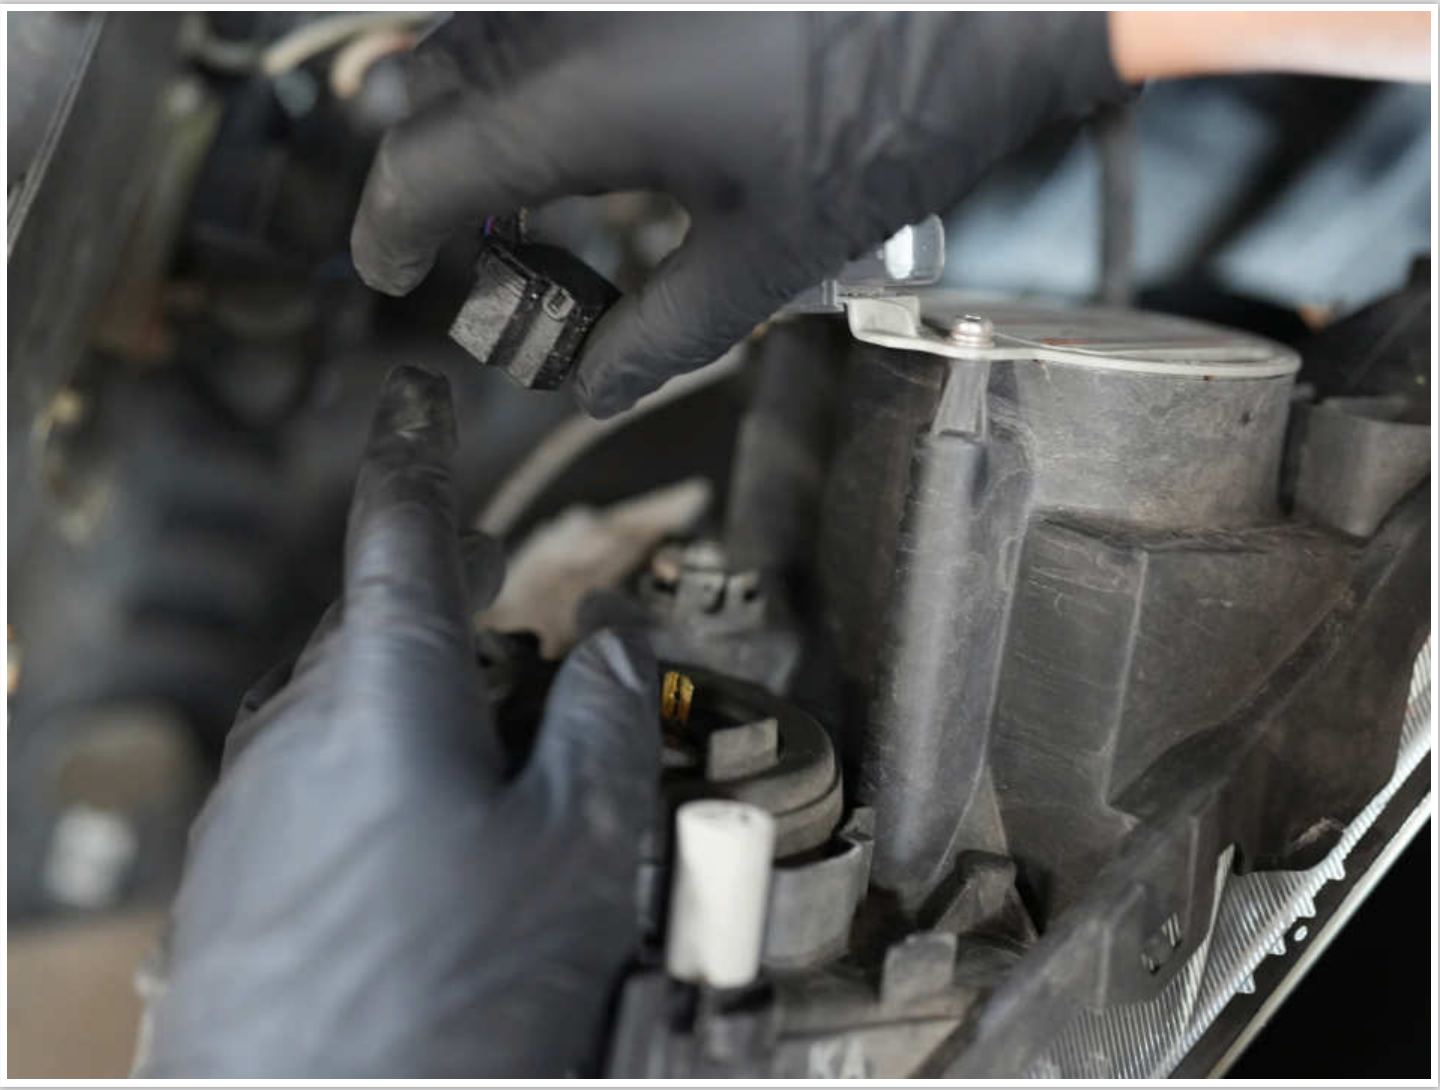

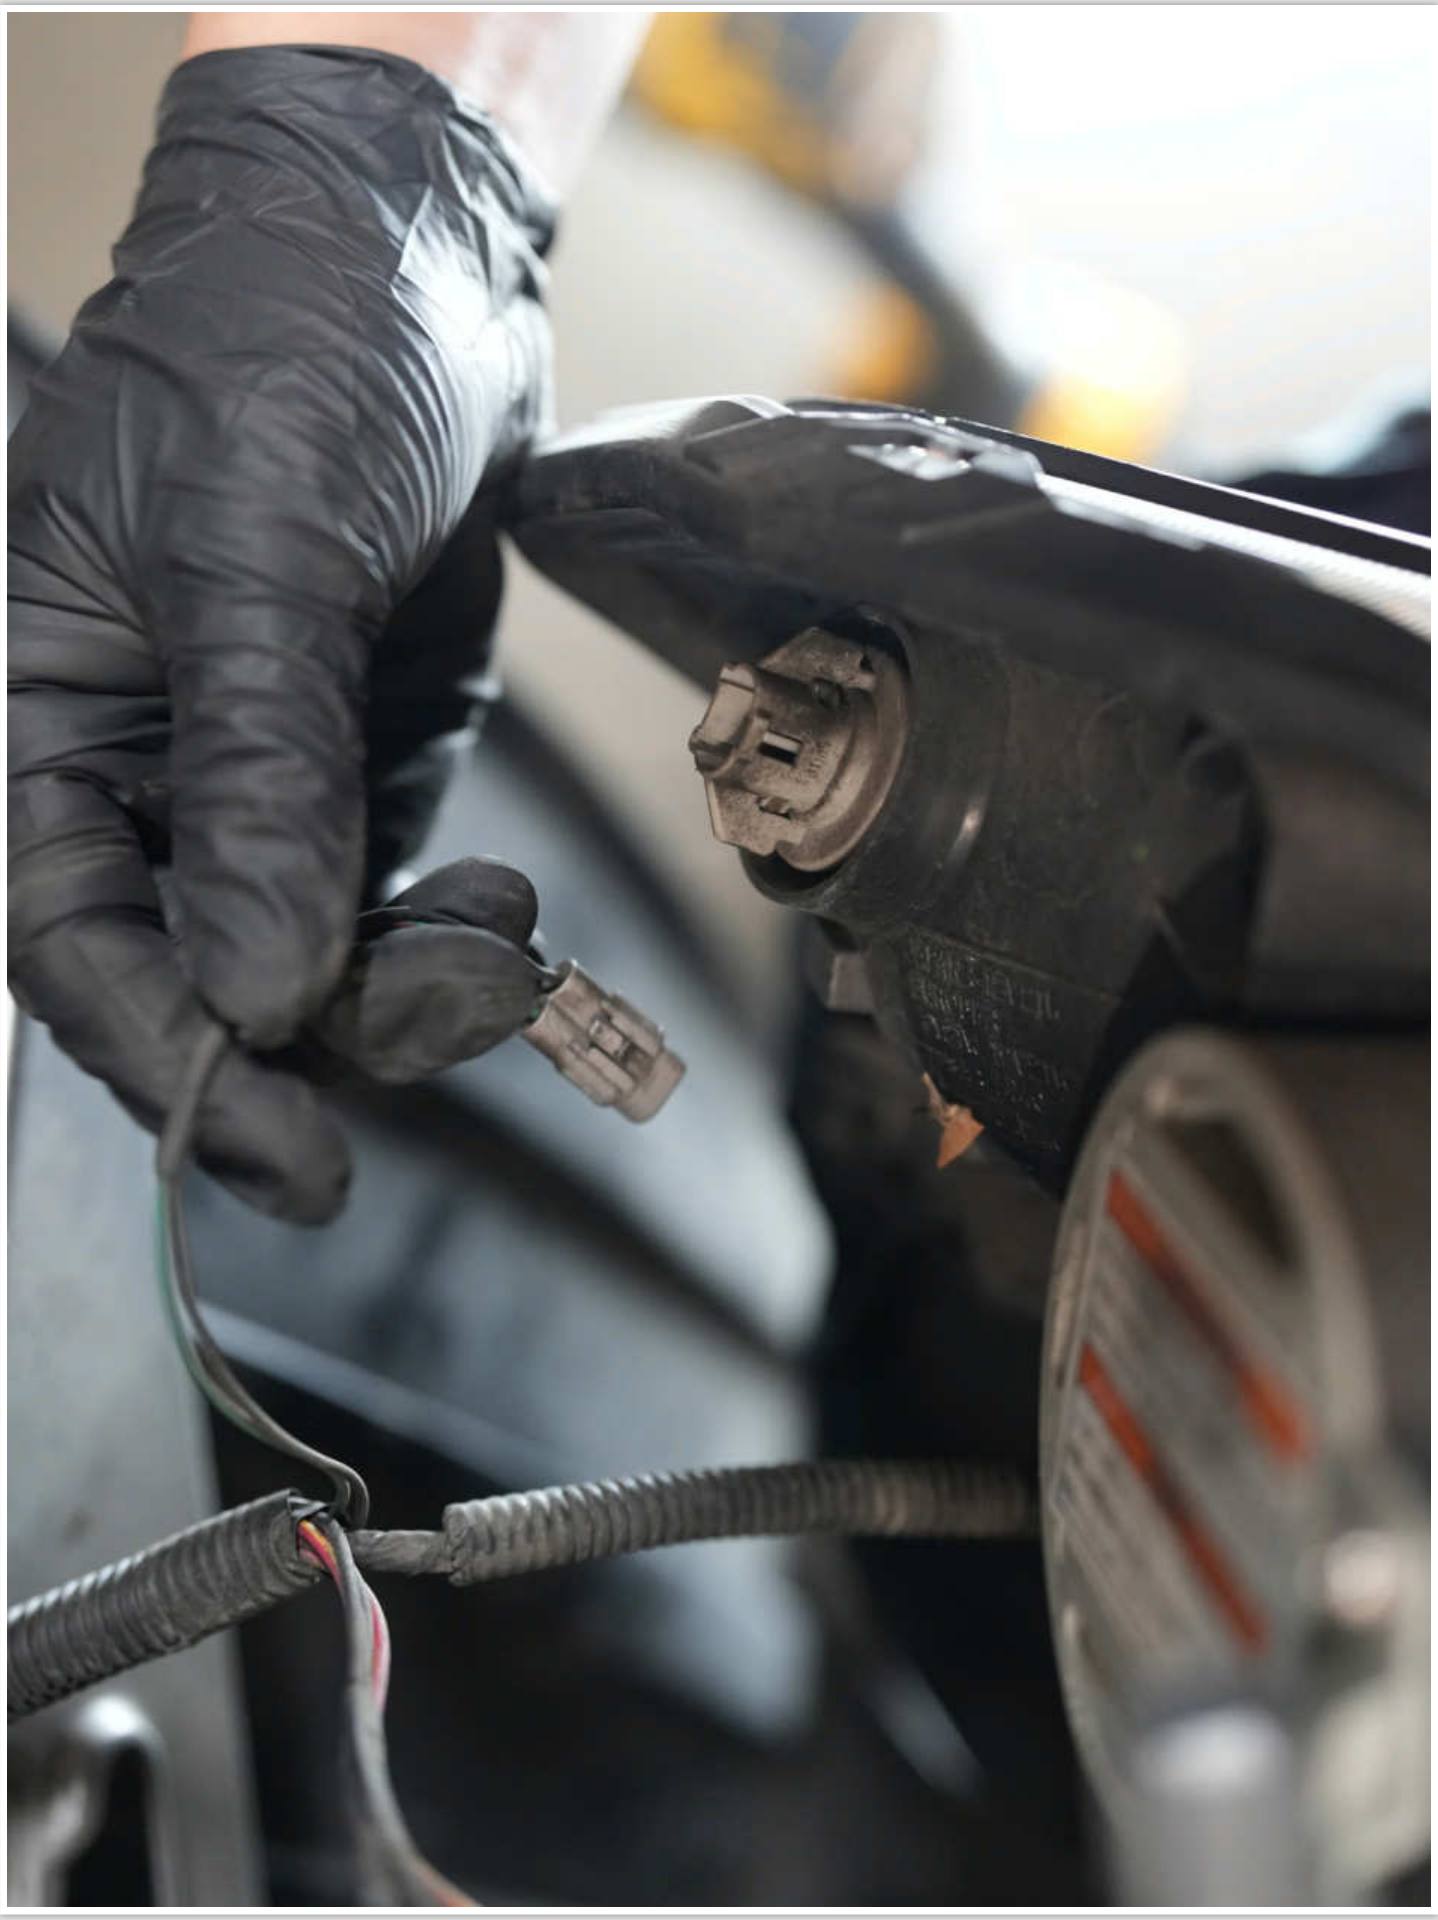

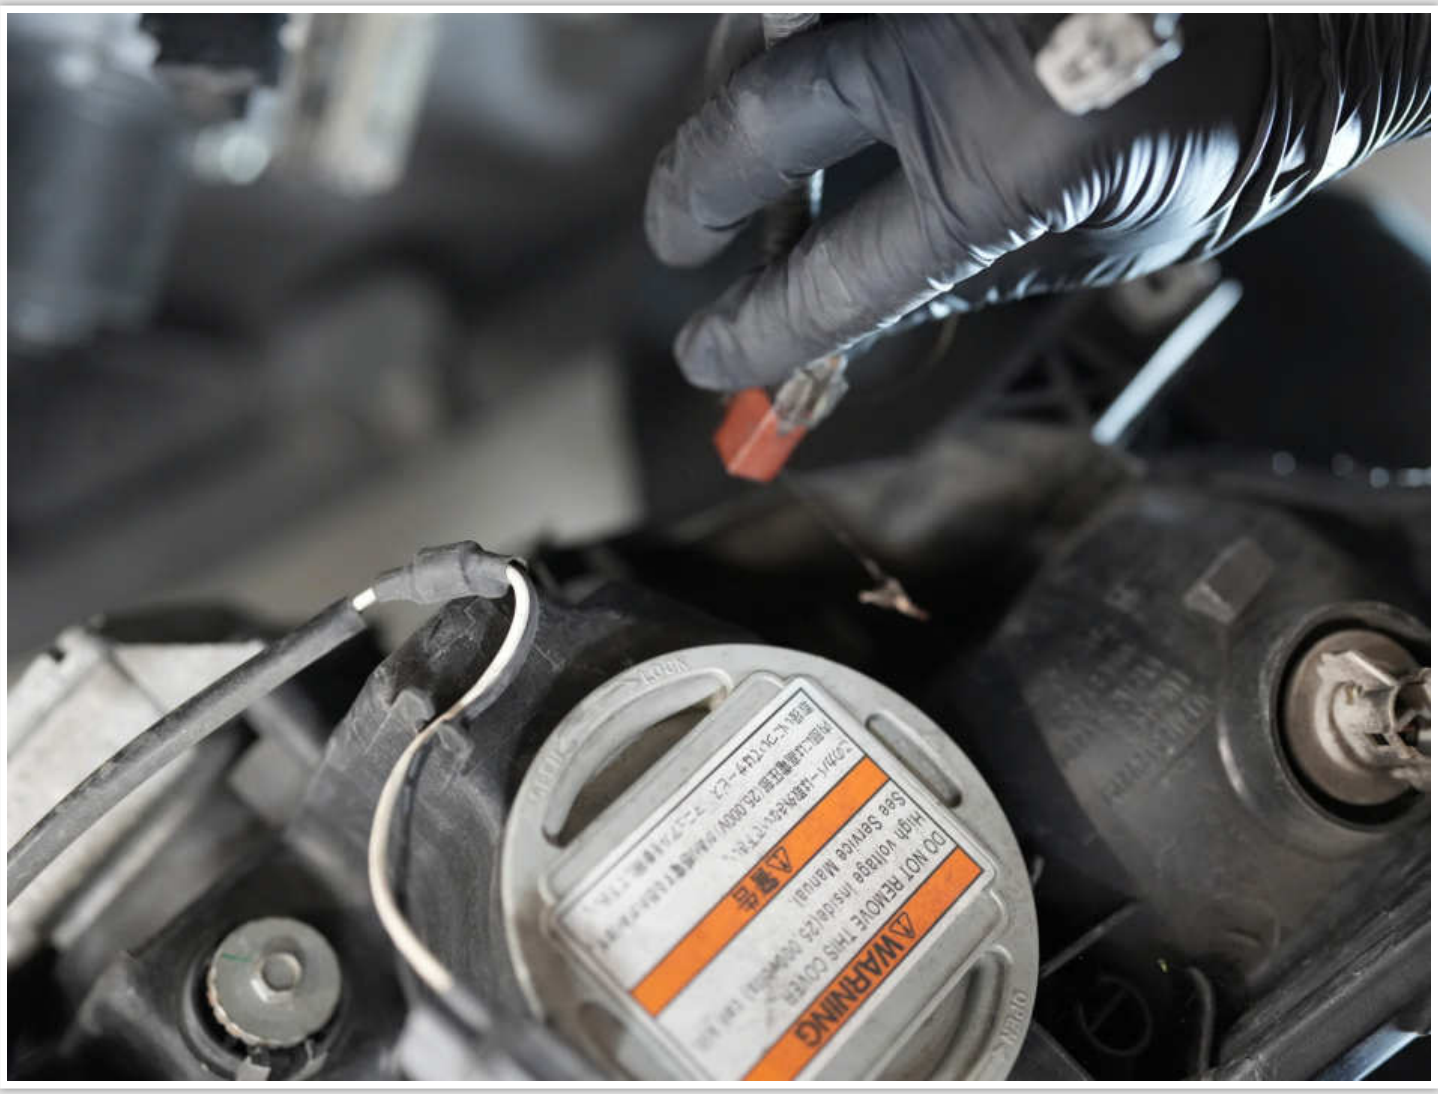

Follow the same steps to remove the other side of the headlight.

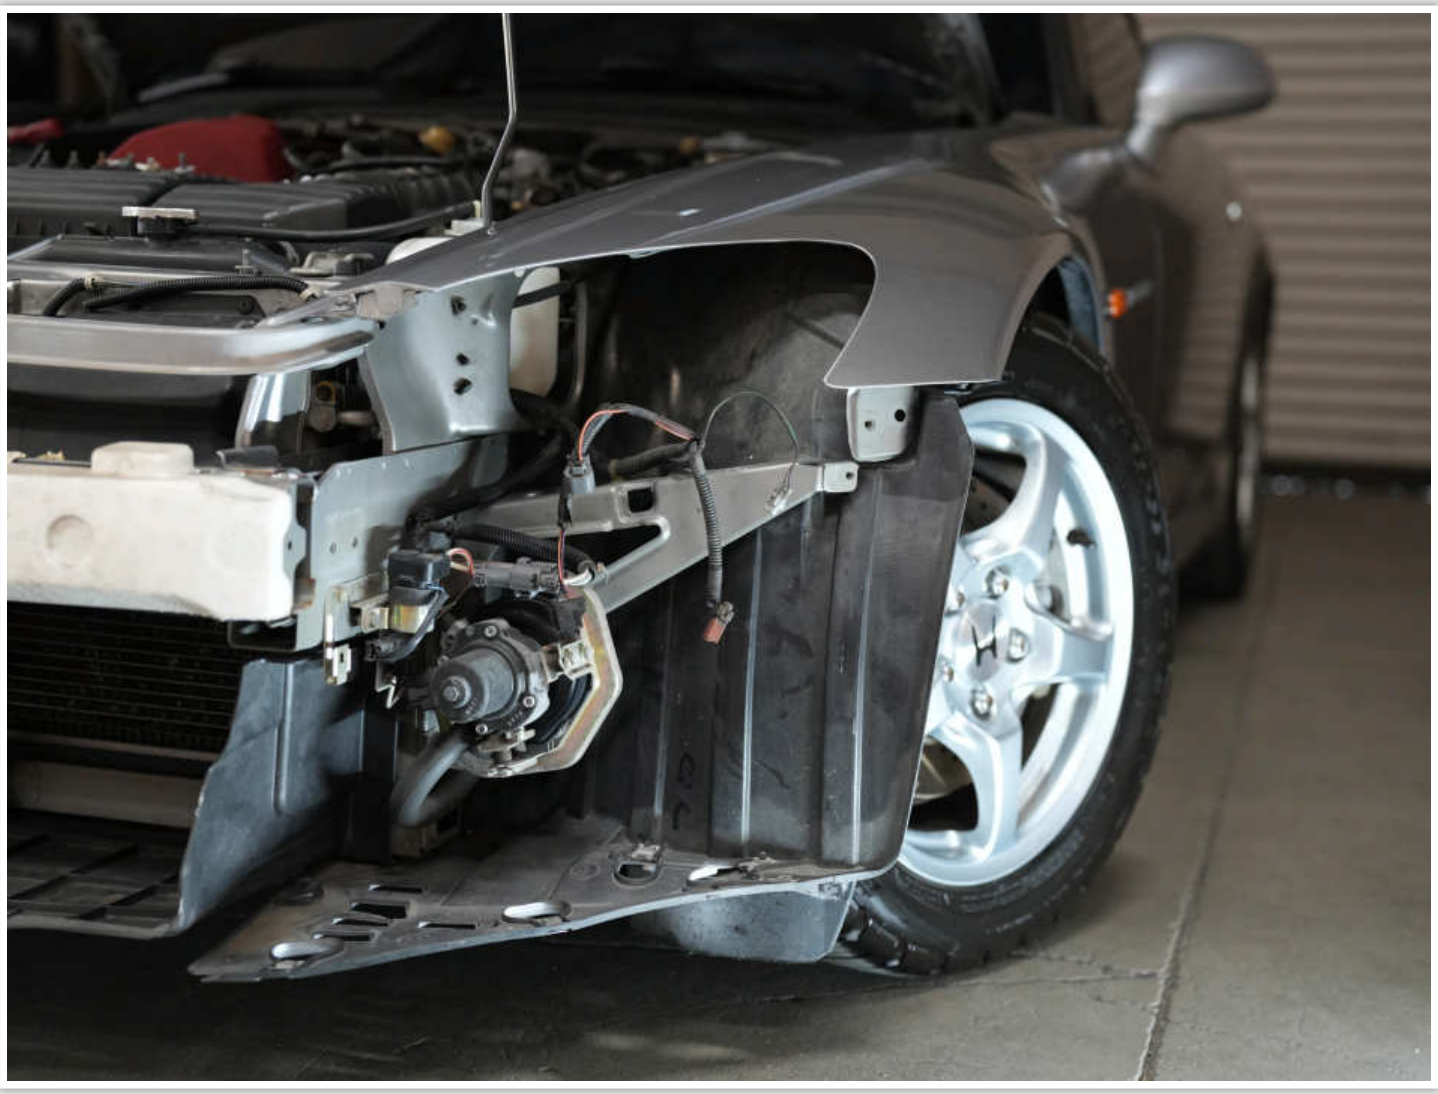

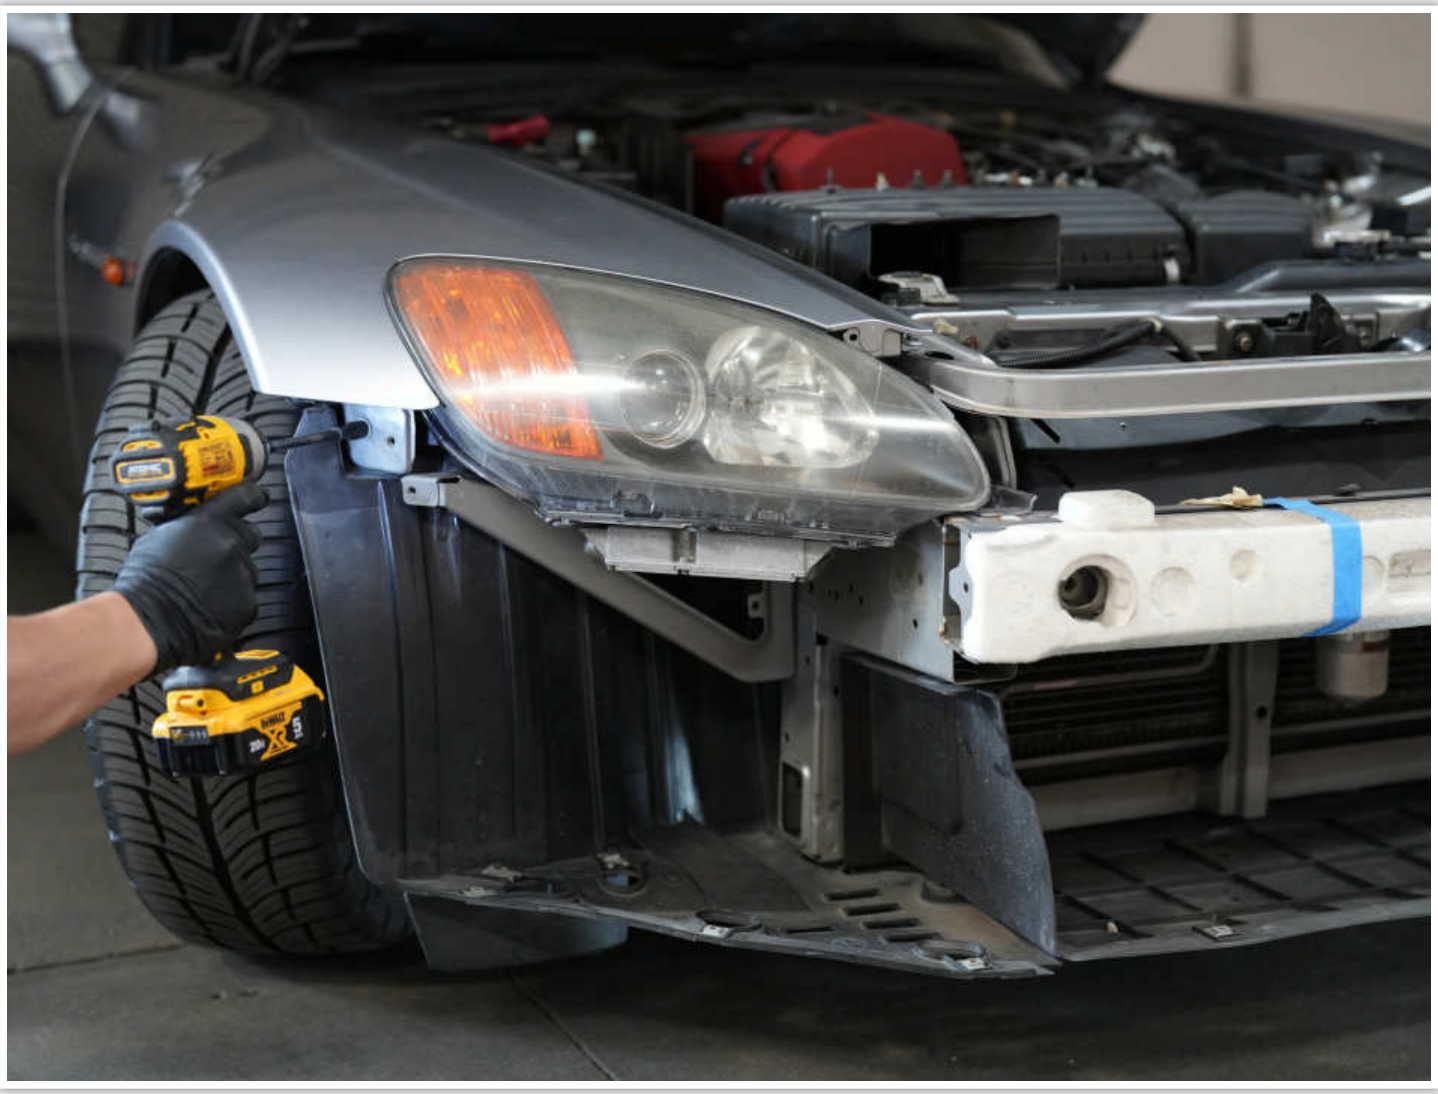

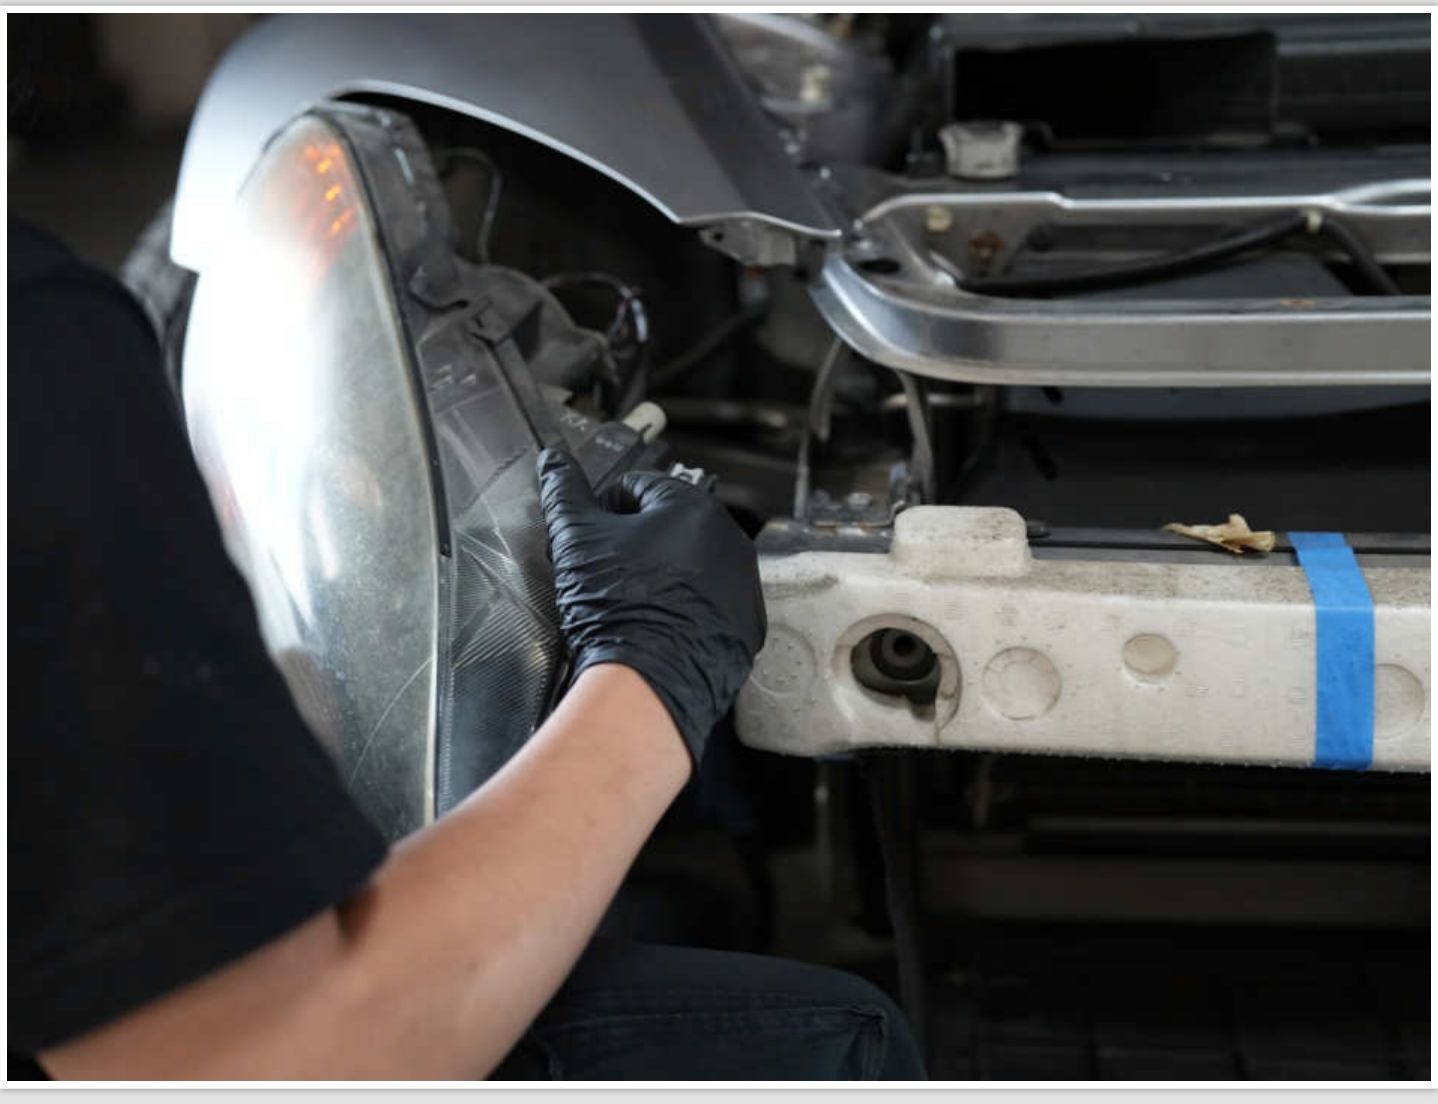

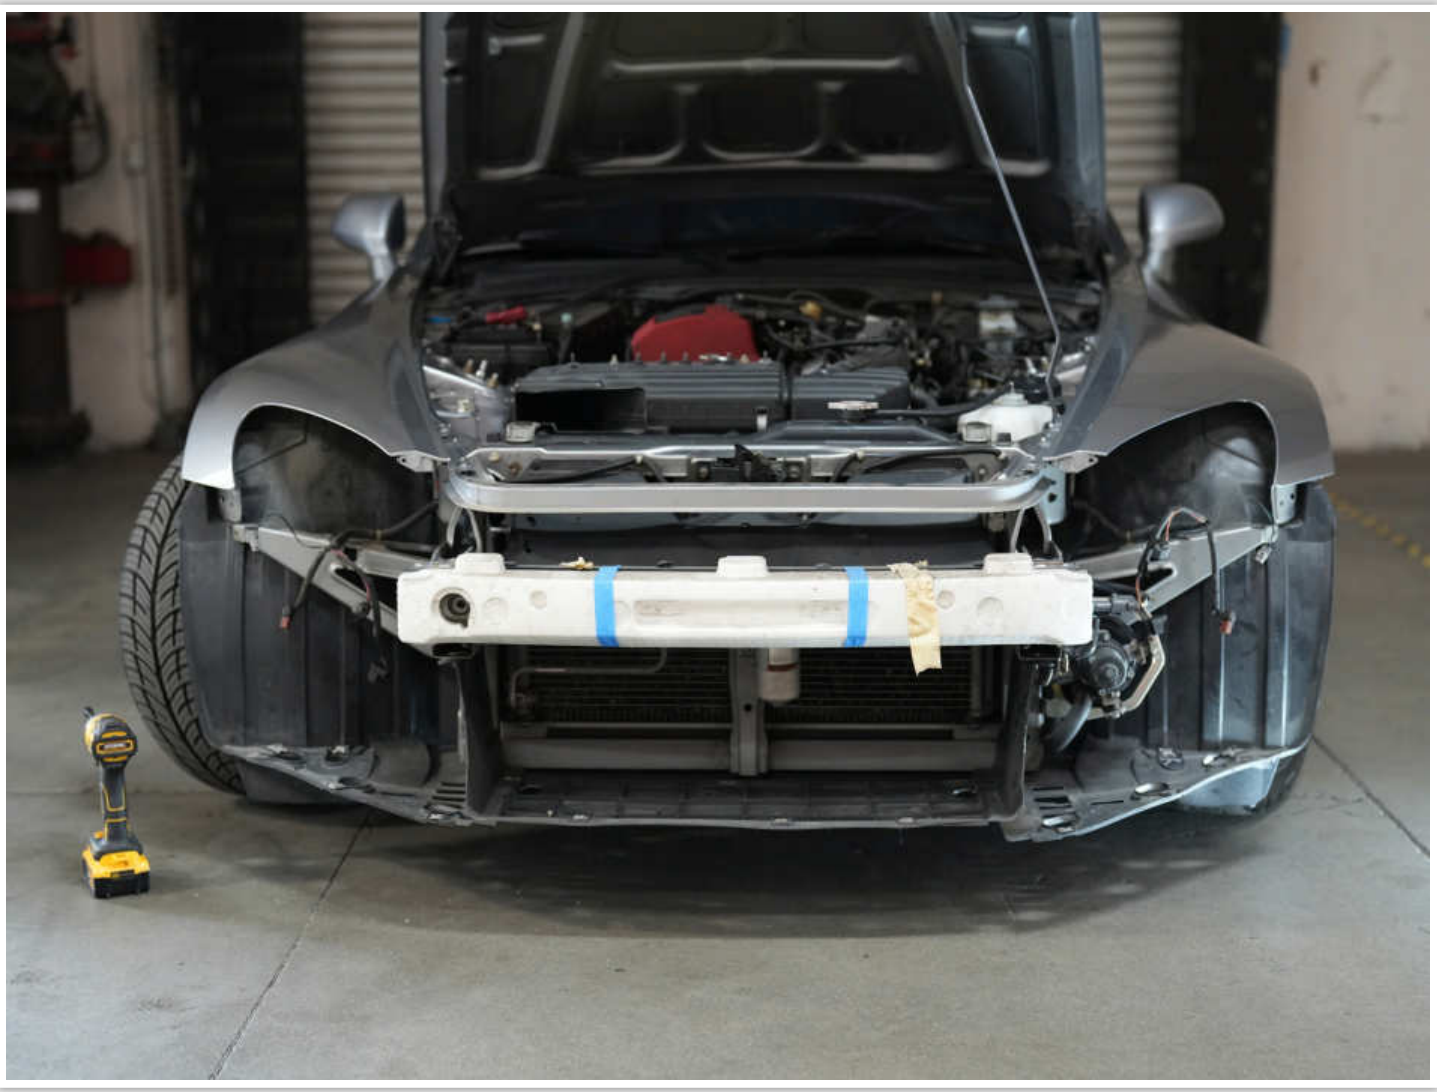

PART II - Install Headlights

STEP 5 TAP THE FUSE AND ROUTE THE DRL HARNESS

First, remove the fuse box cover and locate the DRL fuse plug connection. Unplug the connector from the vehicle. Next, use the included DRL fuse connector harness to connect the fuse to the vehicle's socket. DO NOT USE DIELECTRIC GREASE!

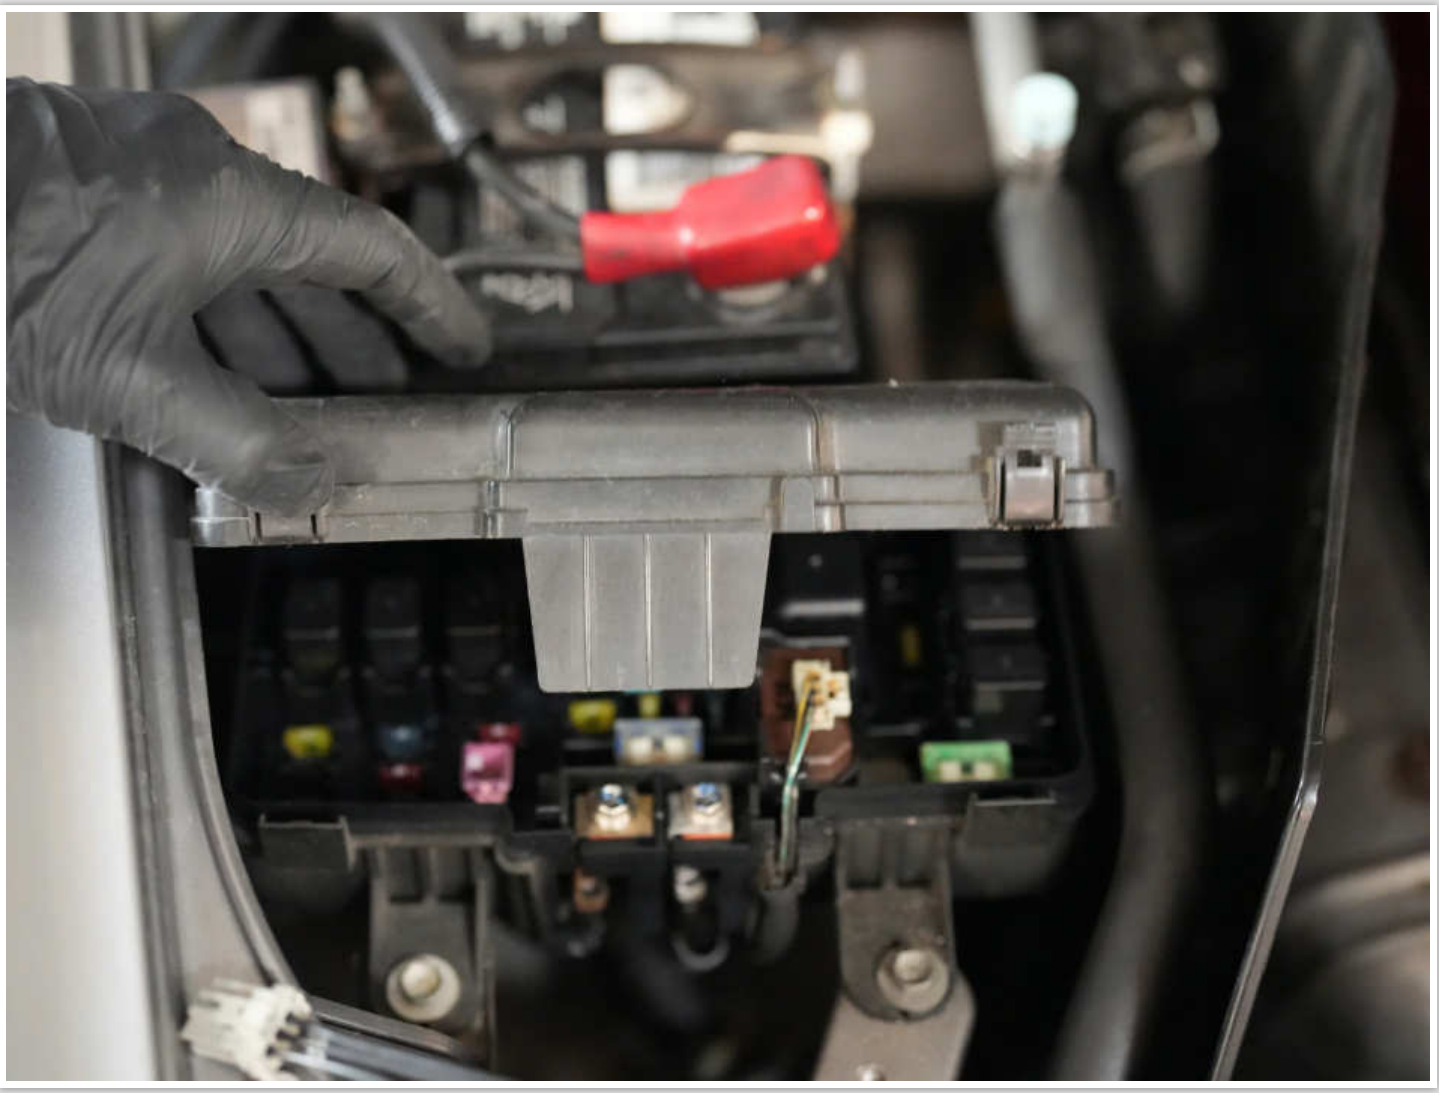

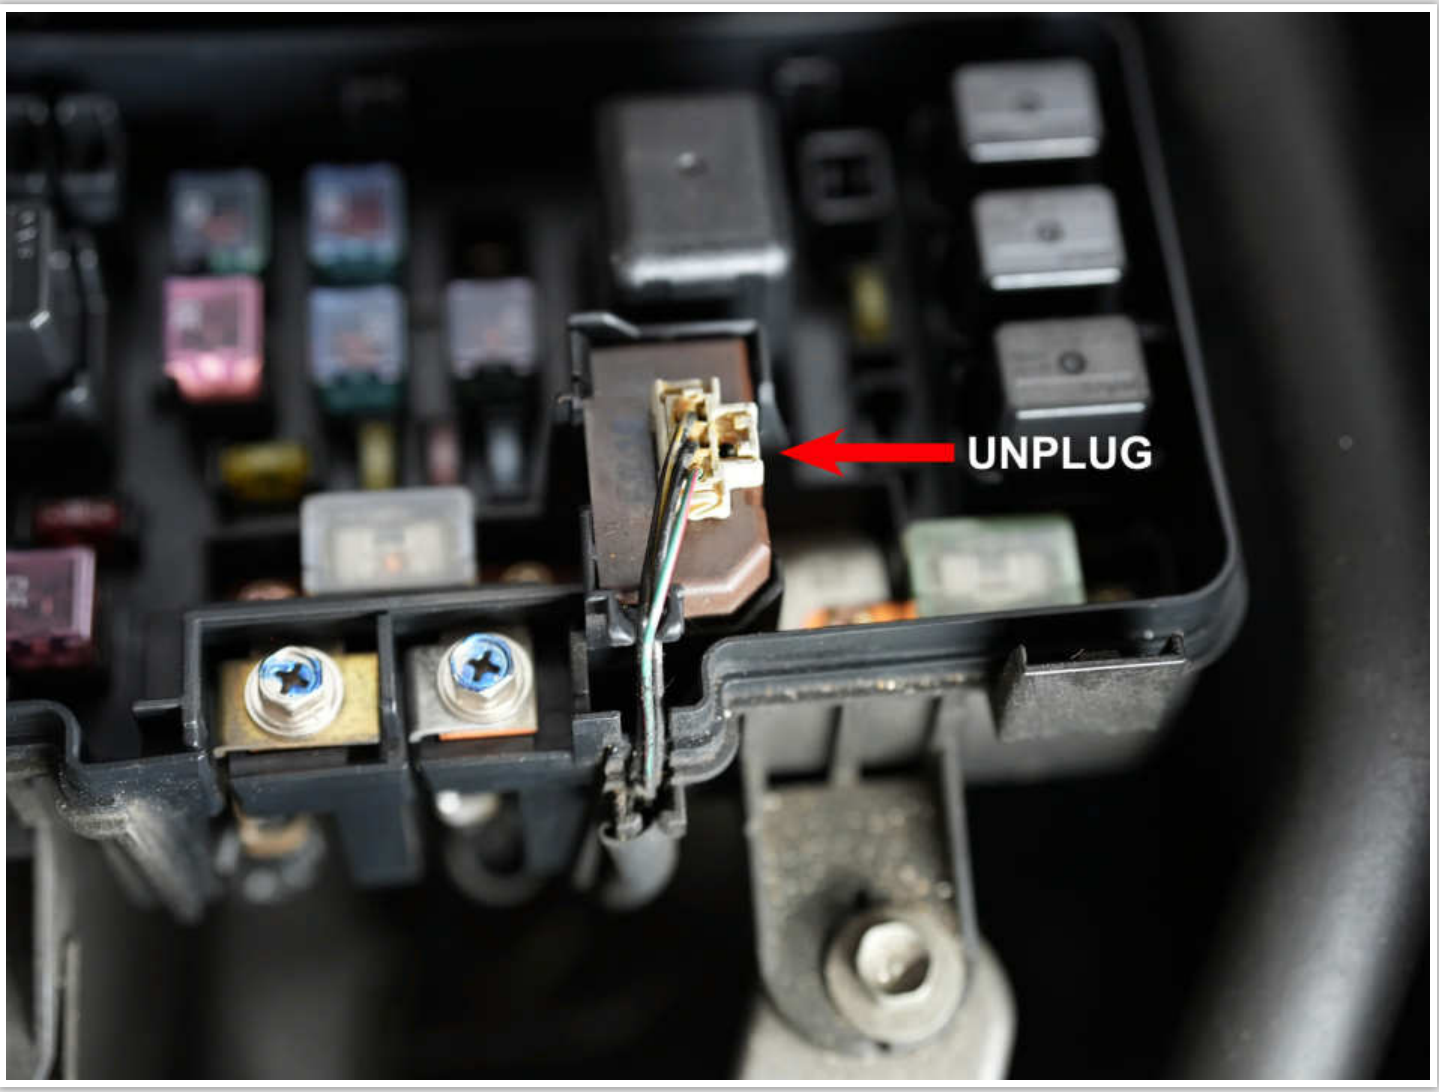

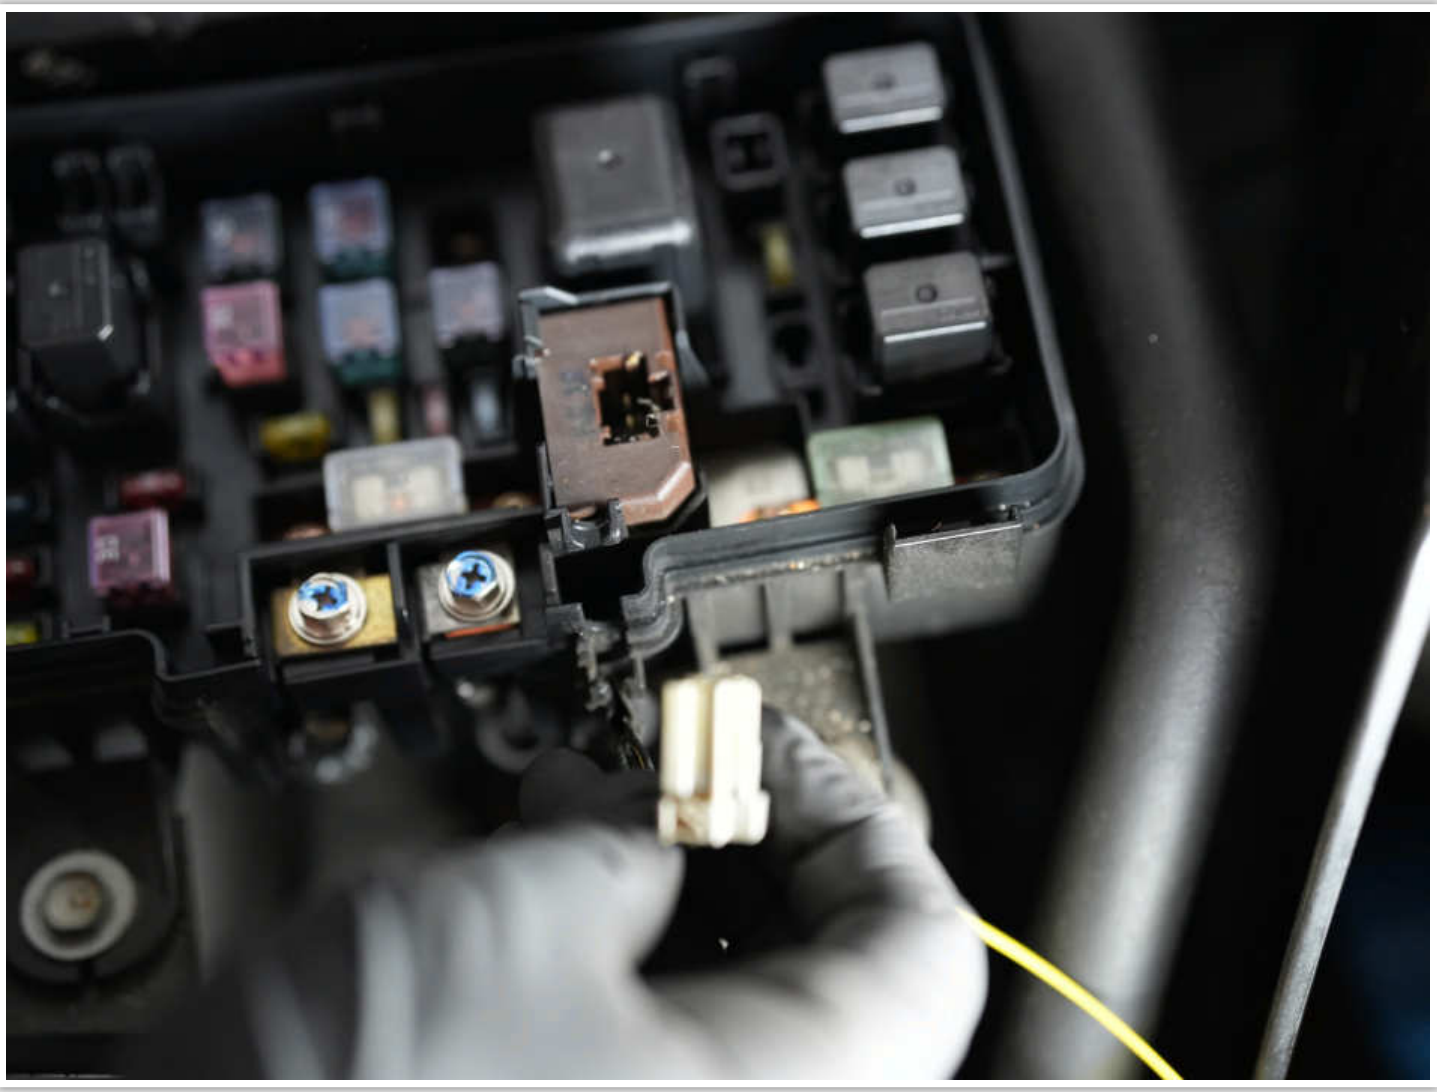

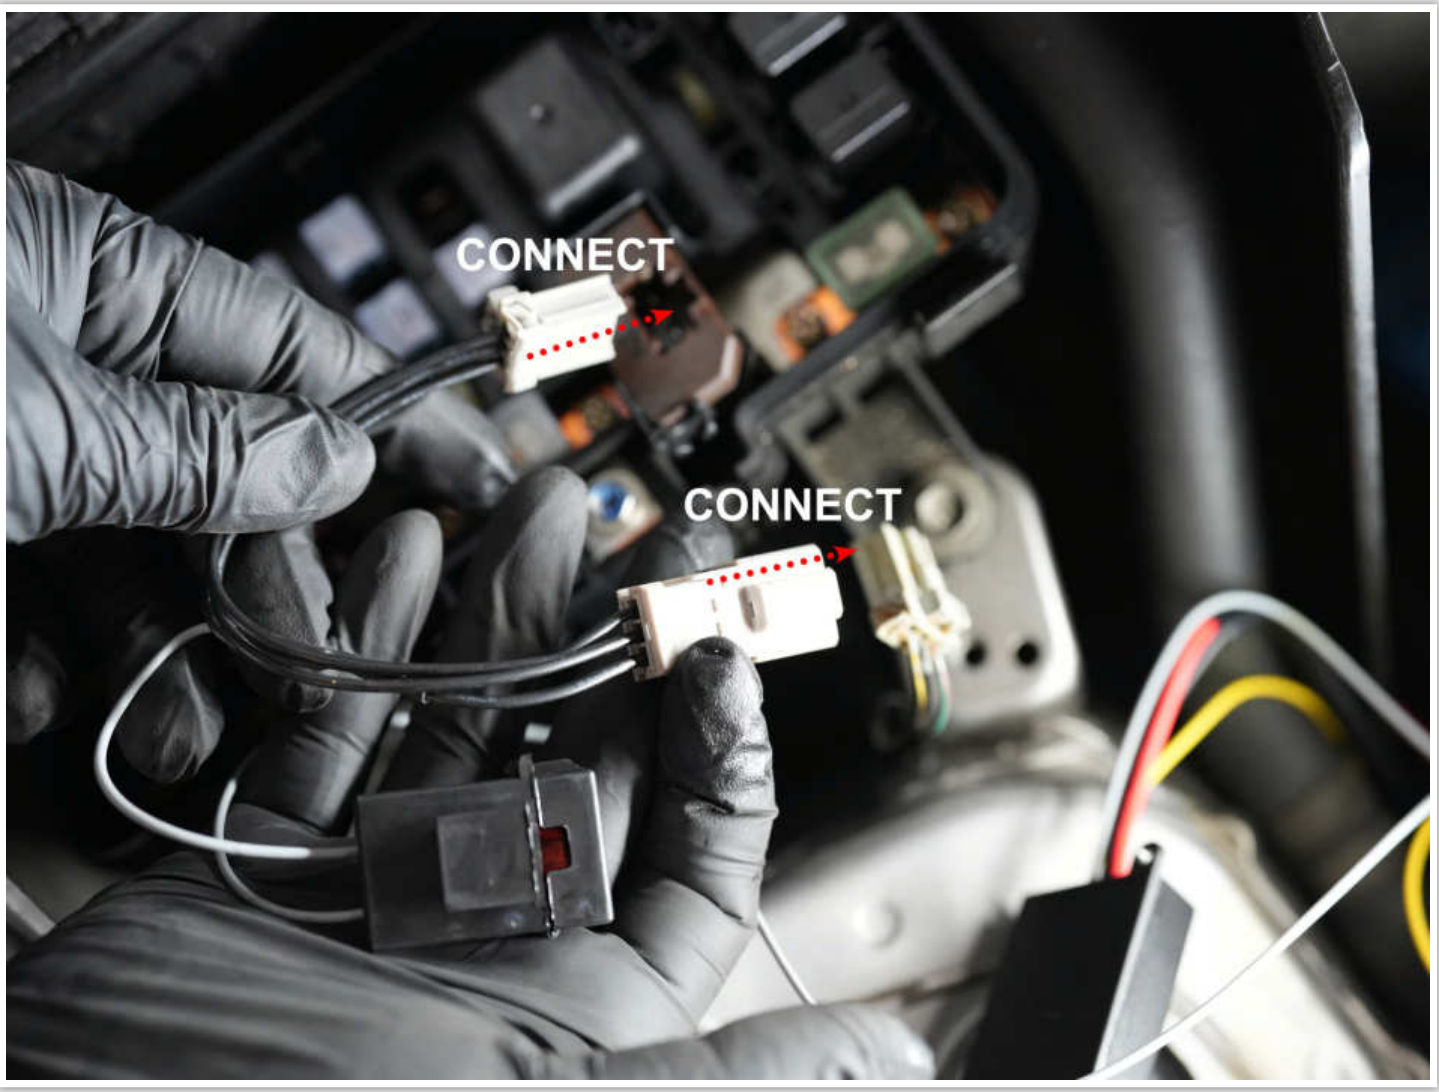

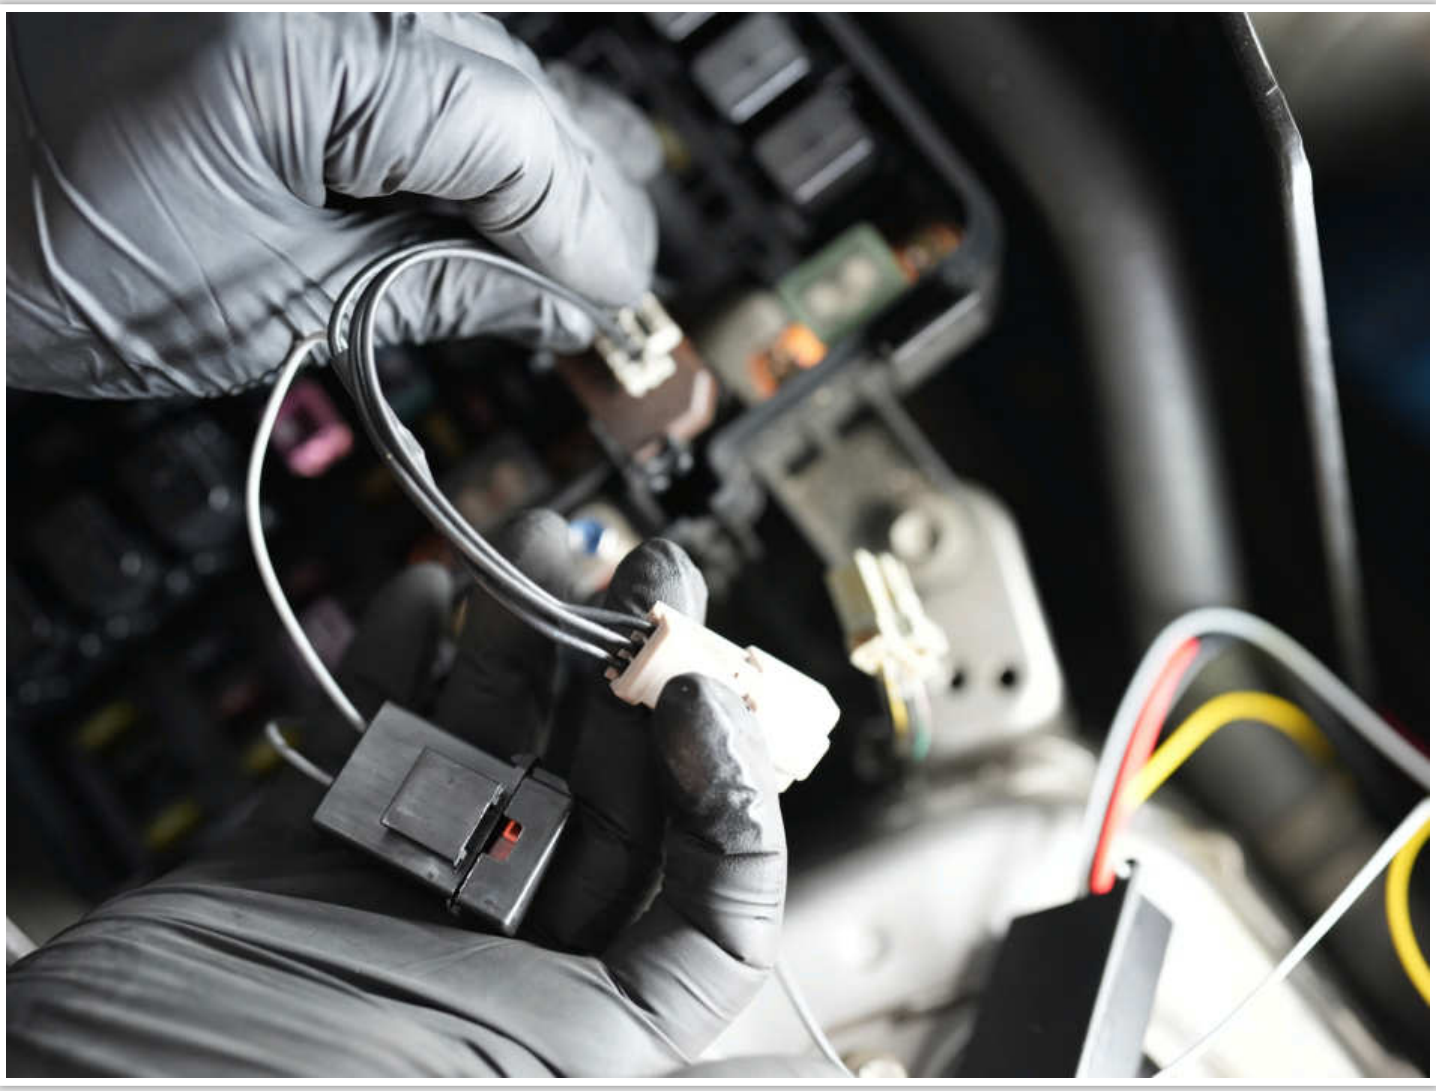

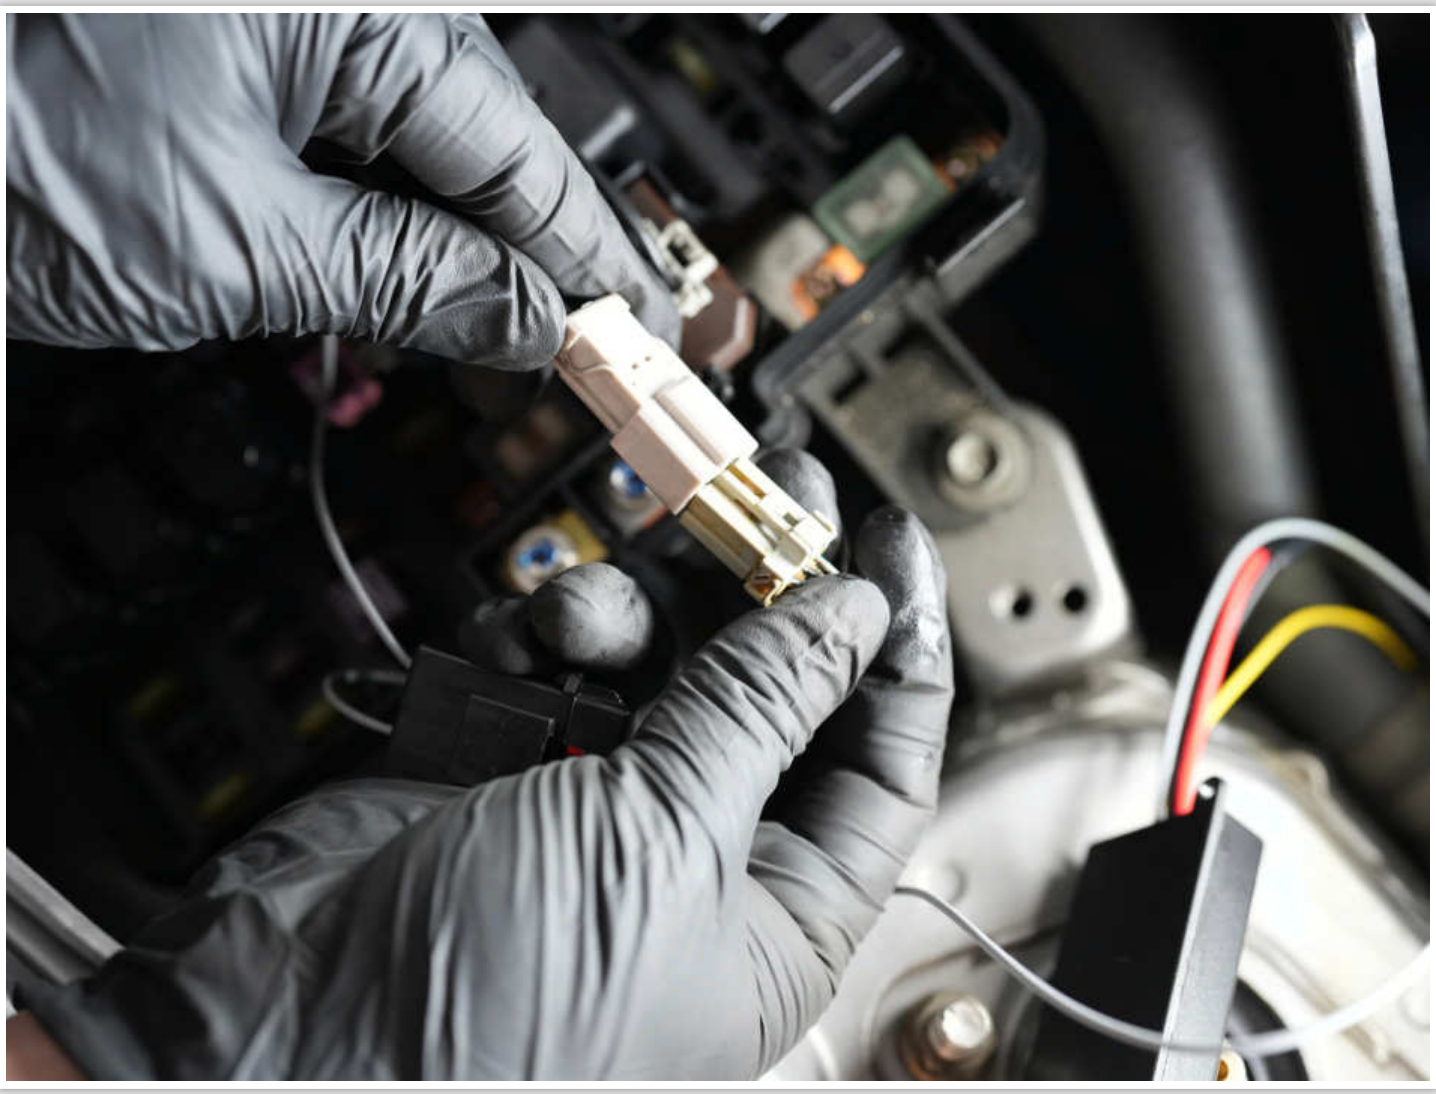

Start routing the DRL harness by first connecting the red wire to the positive terminal of the battery. Then, connect the black wire to either the negative terminal or a bolt on the firewall.

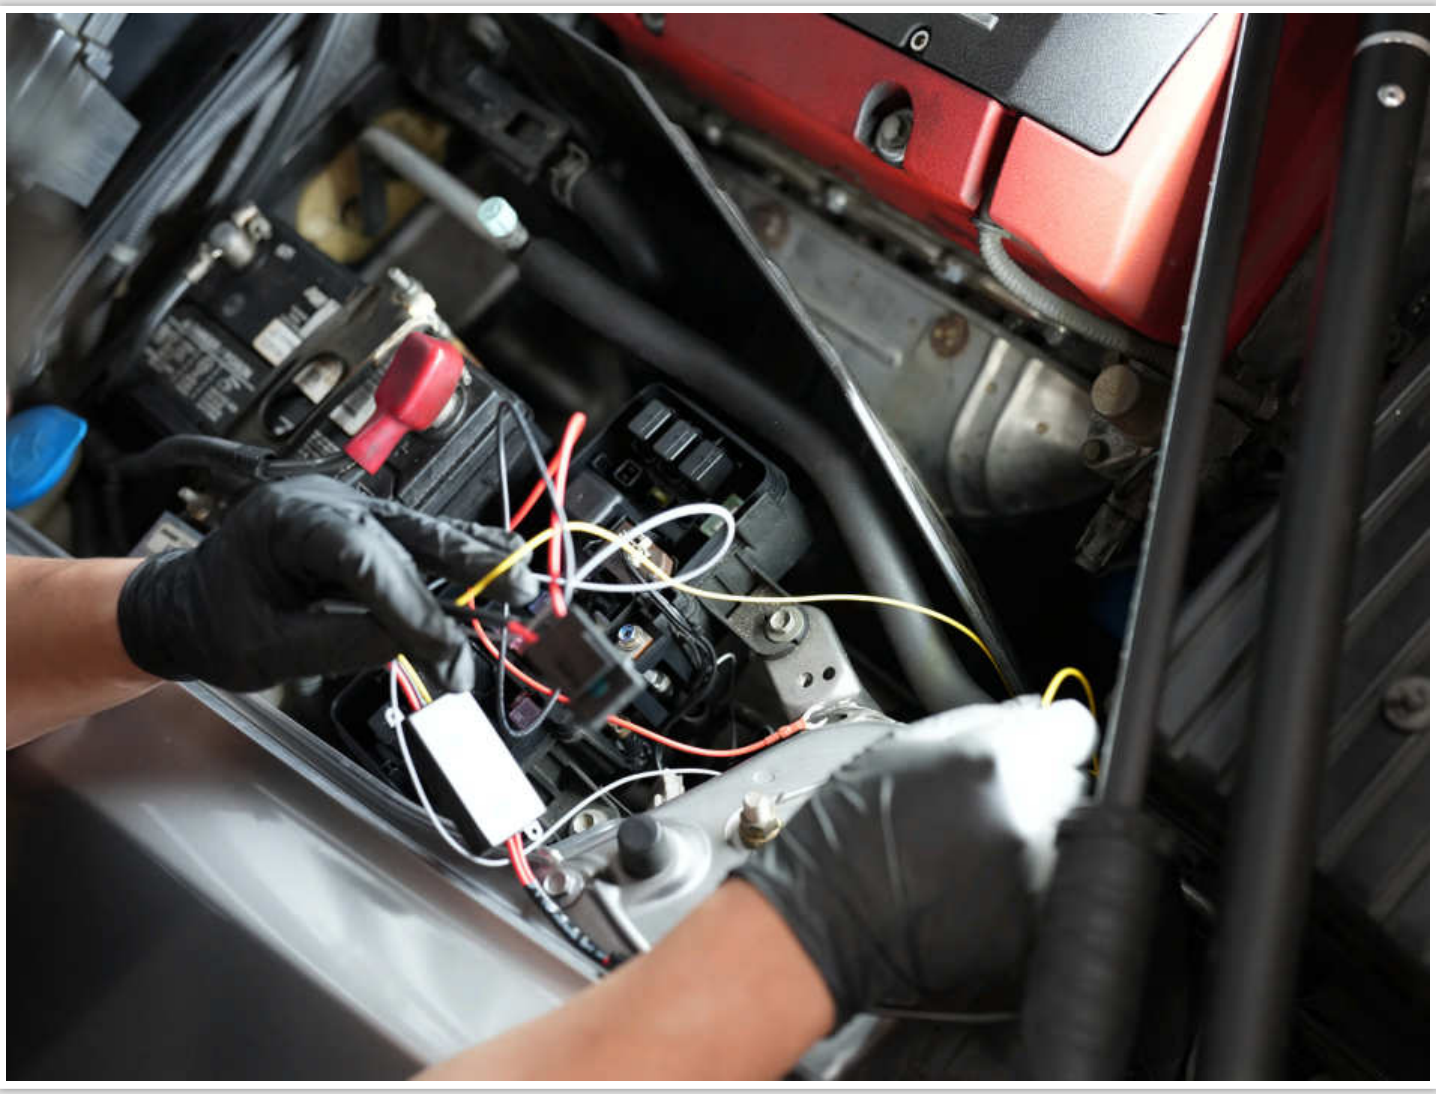

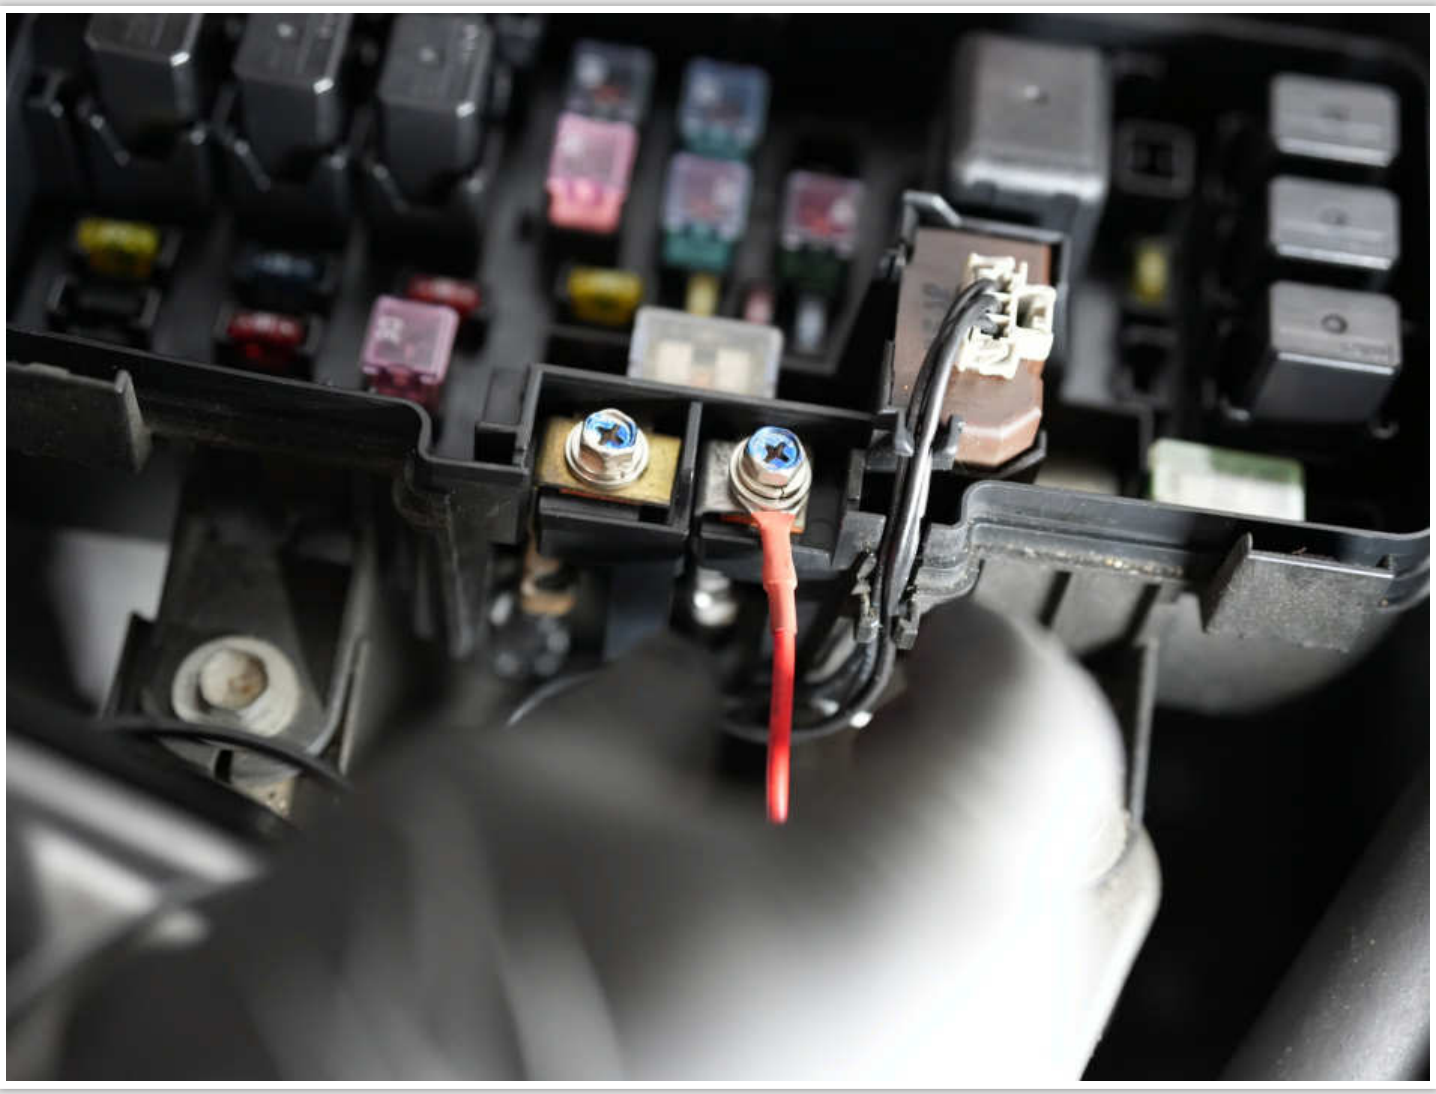

Close the fuse box cover, tidy up the wires, and begin routing the DRL plugs towards the headlights.

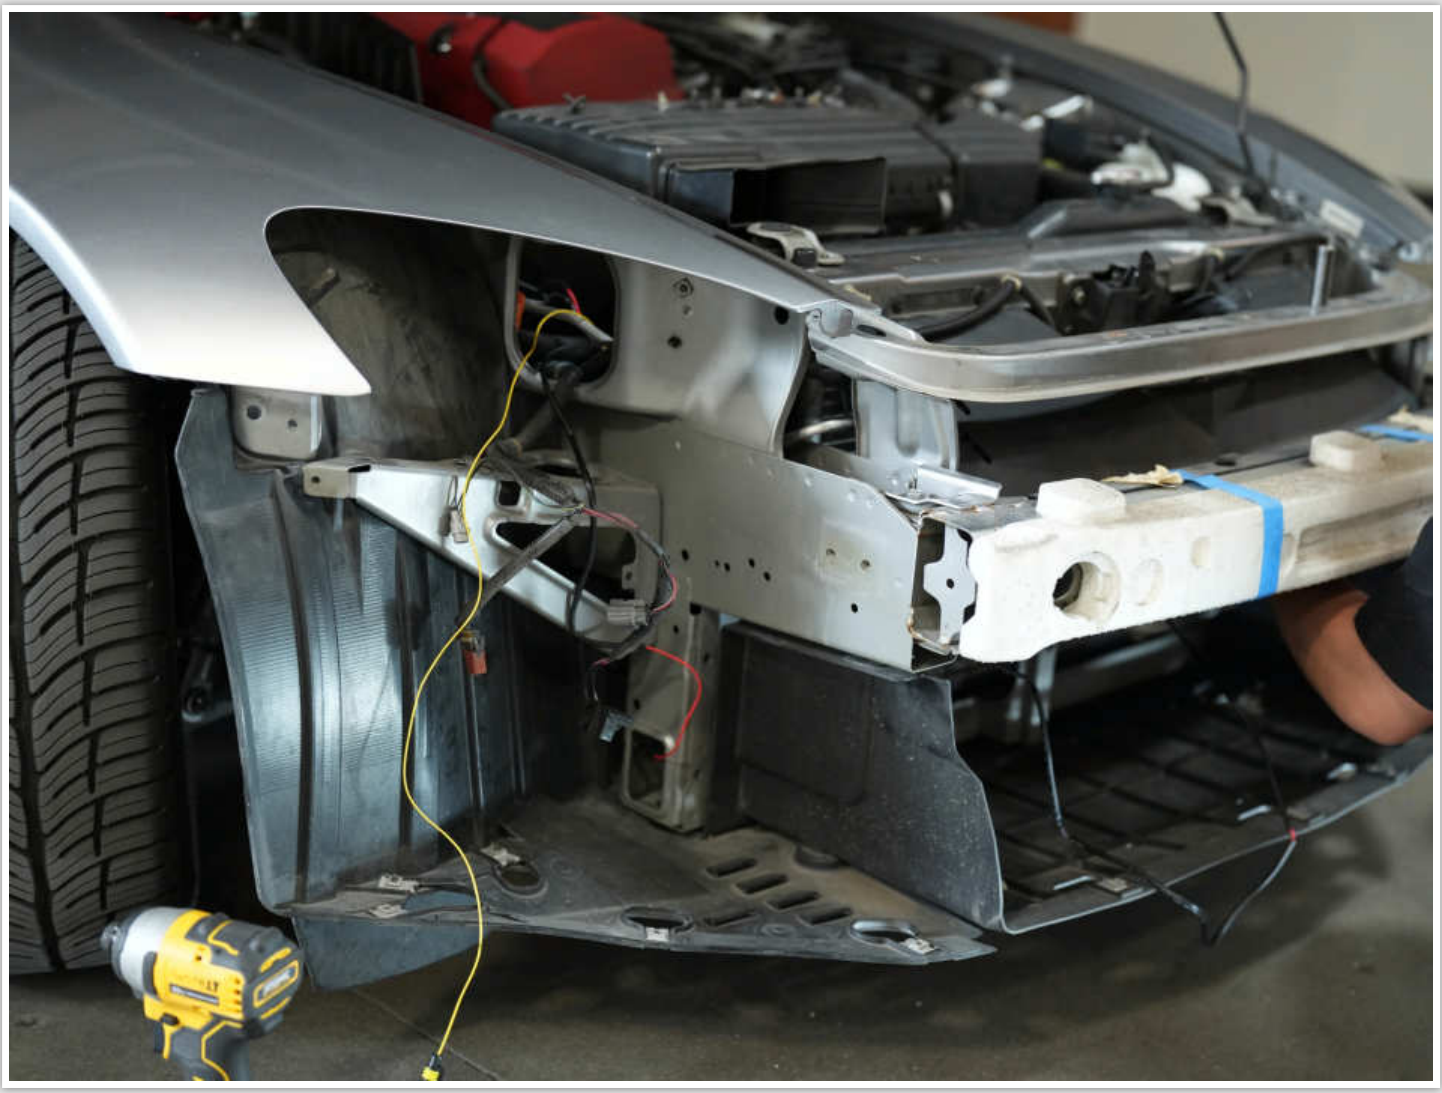

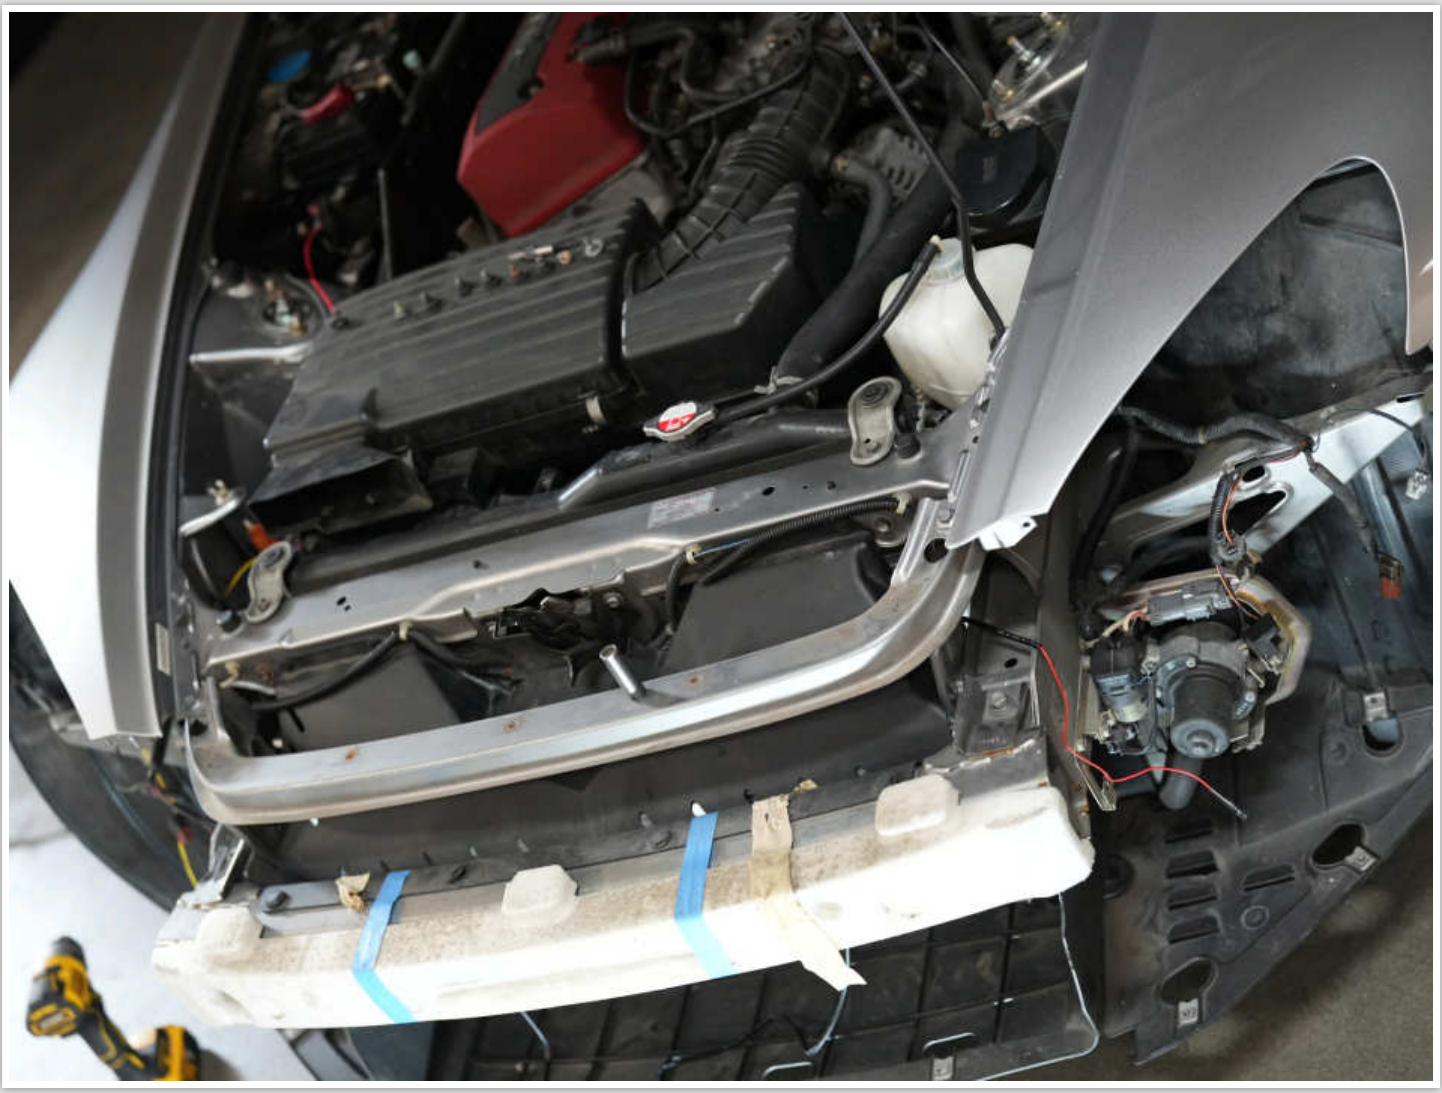

STEP 6 INSTALL THE HEADLIGHTS

Connect the headlight sockets to the new ALPHAREX headlight assembly.
DO NOT USE DIELECTRIC GREASE!

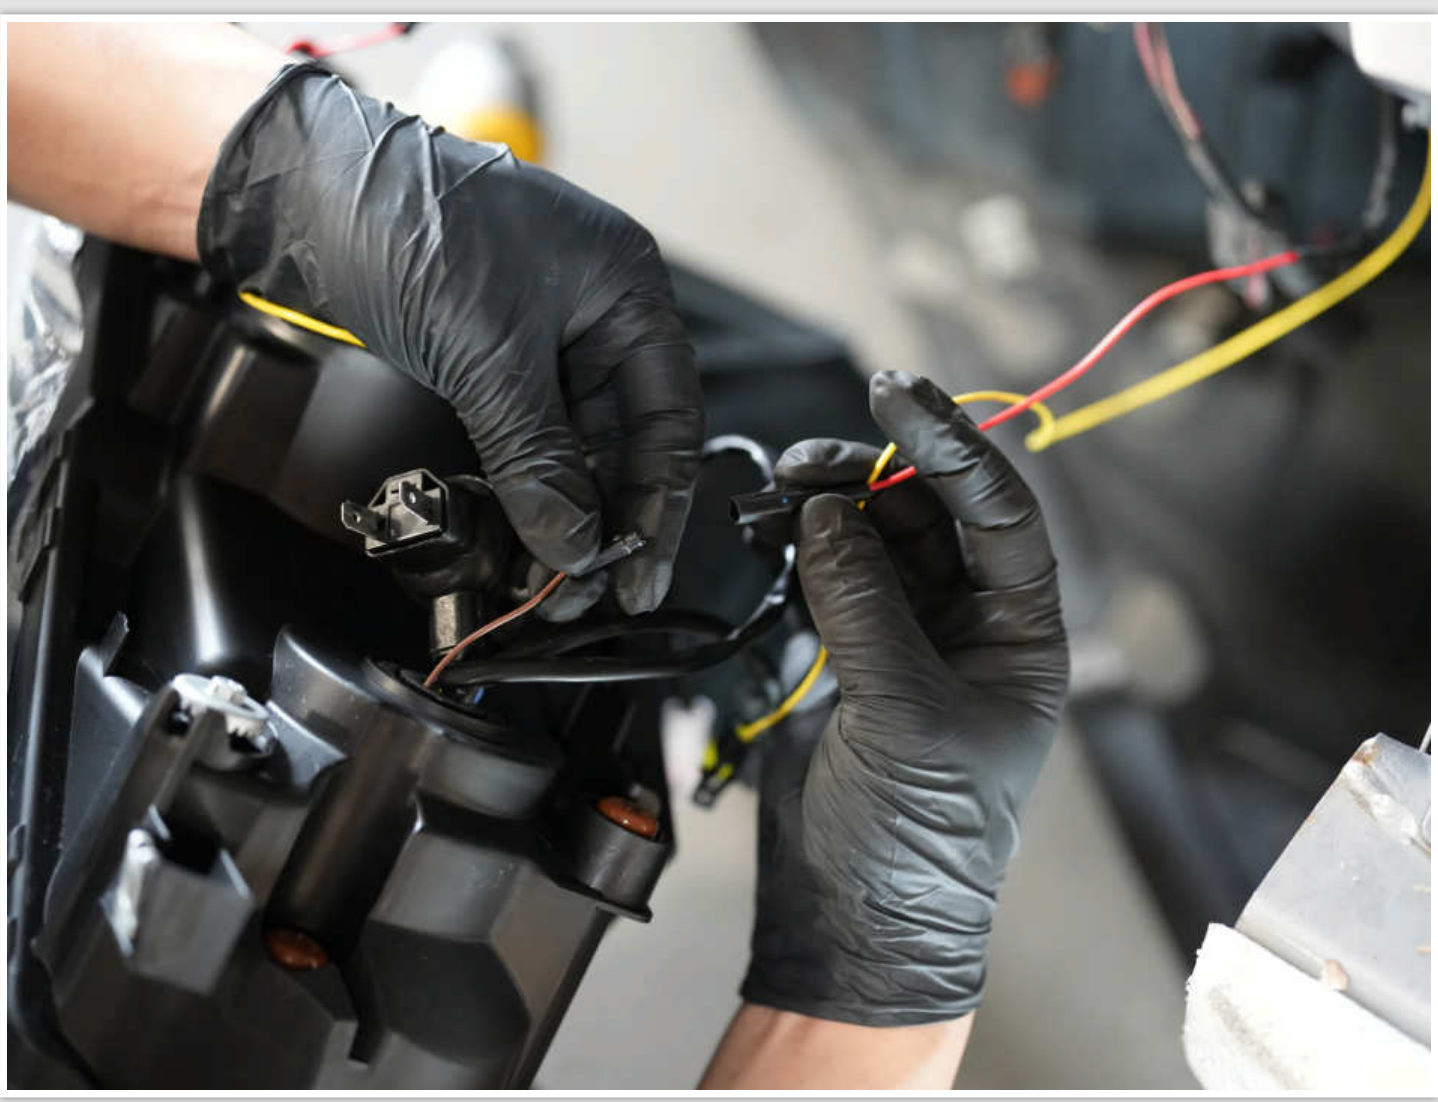

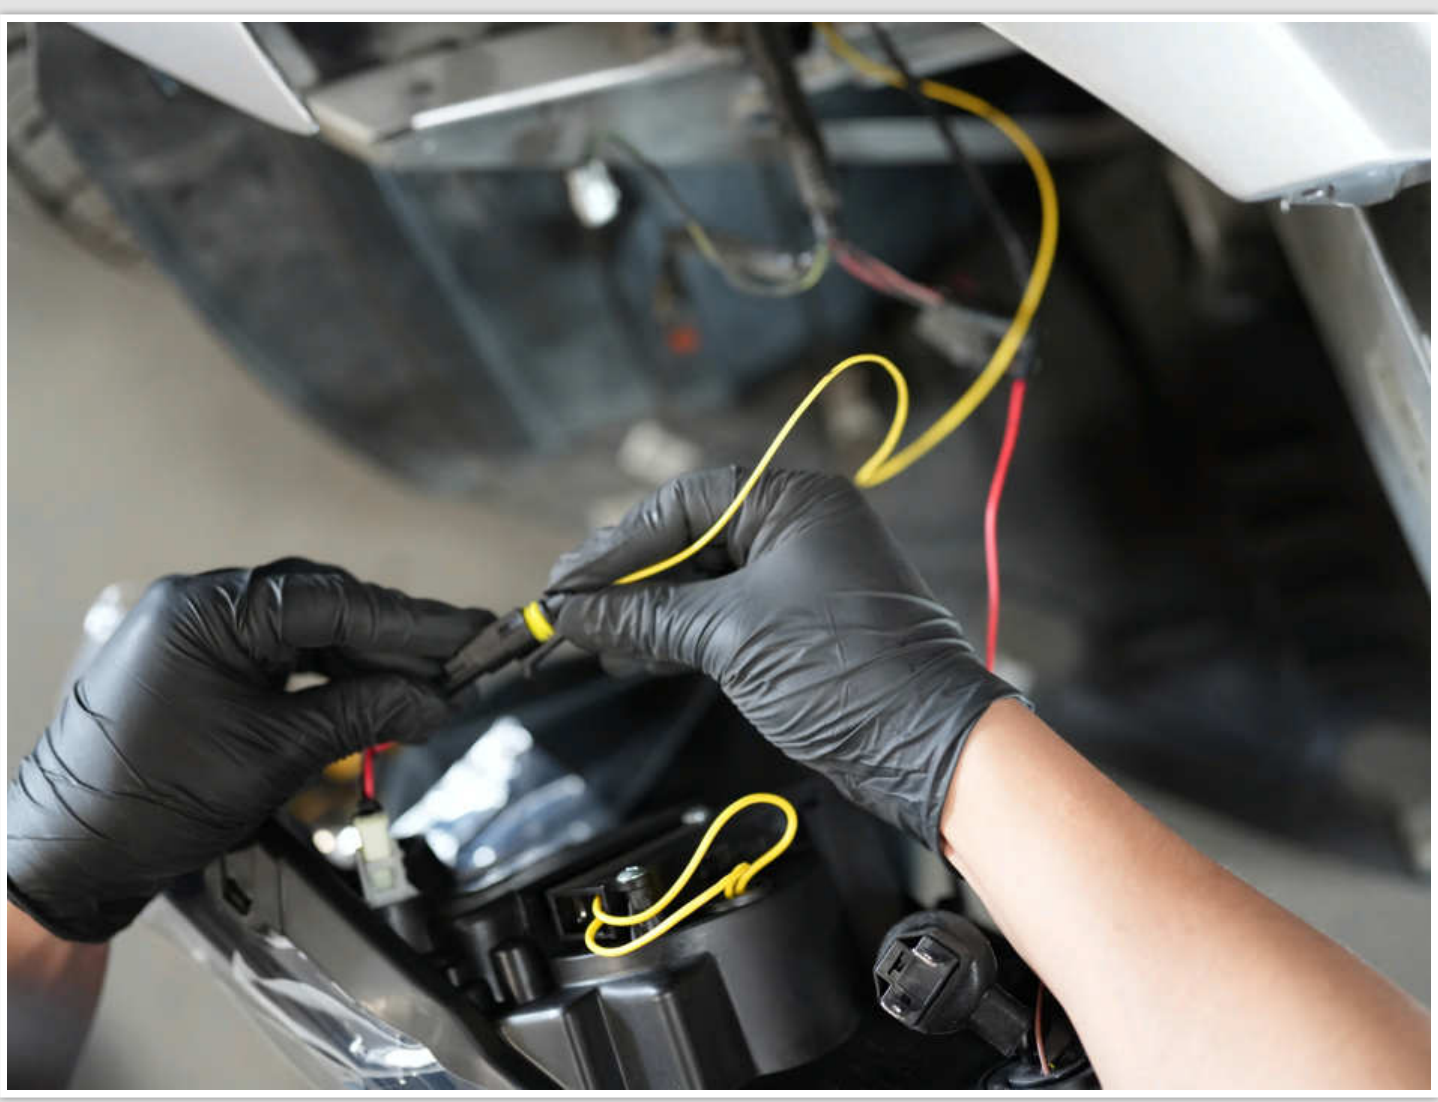

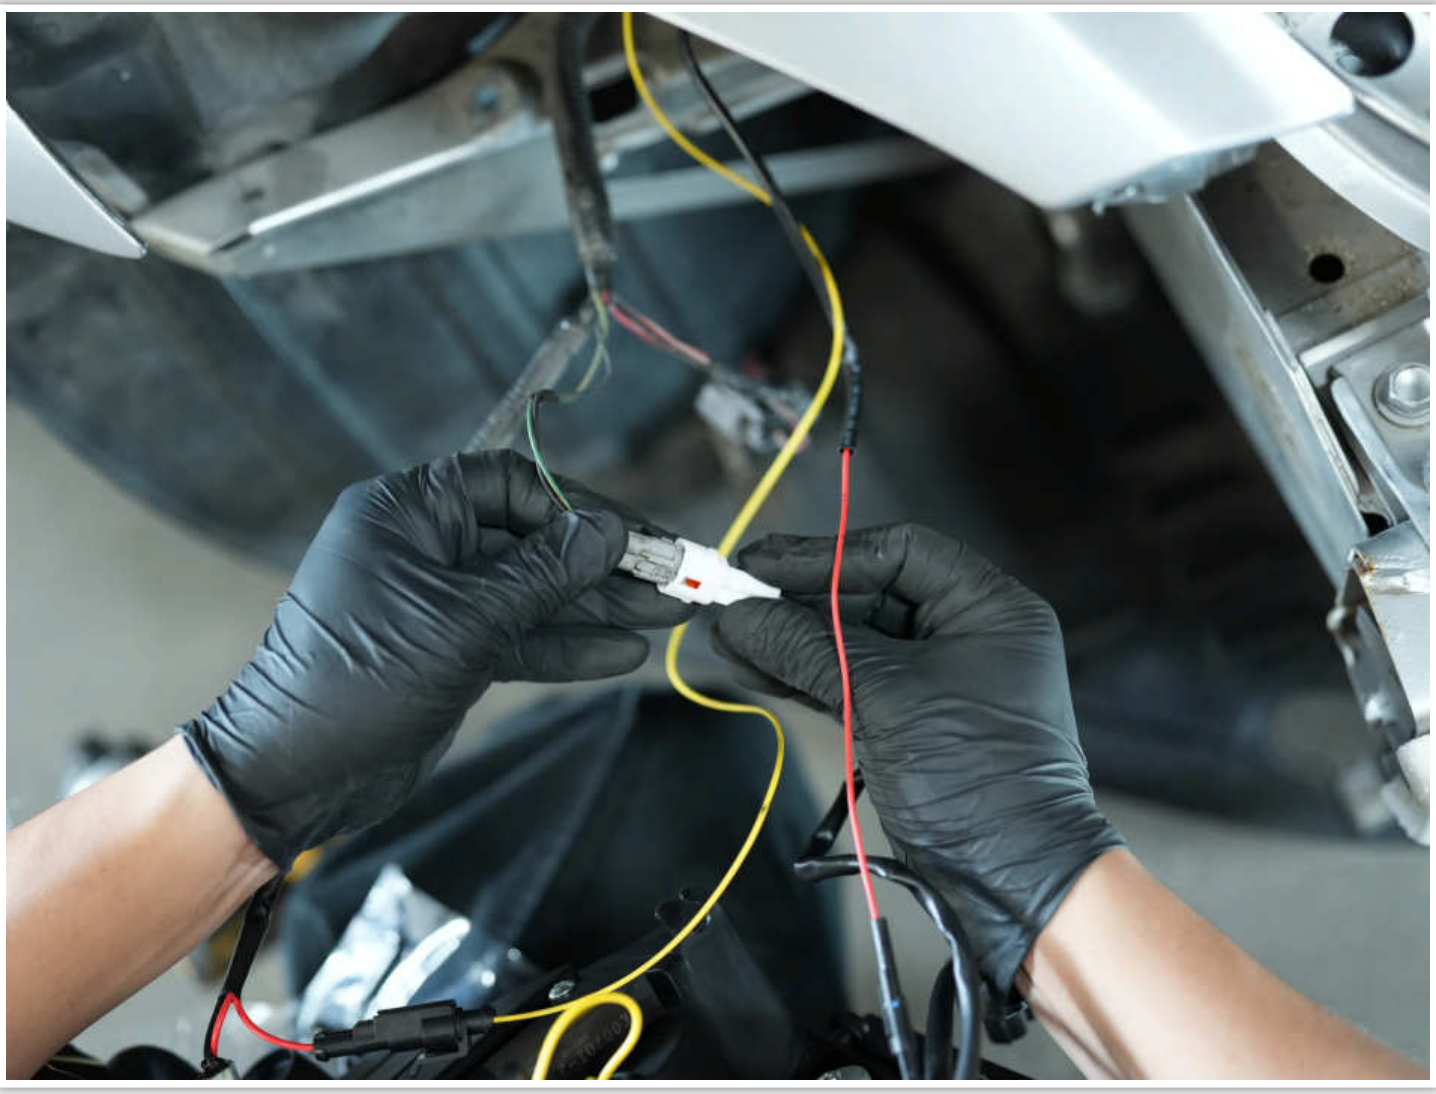

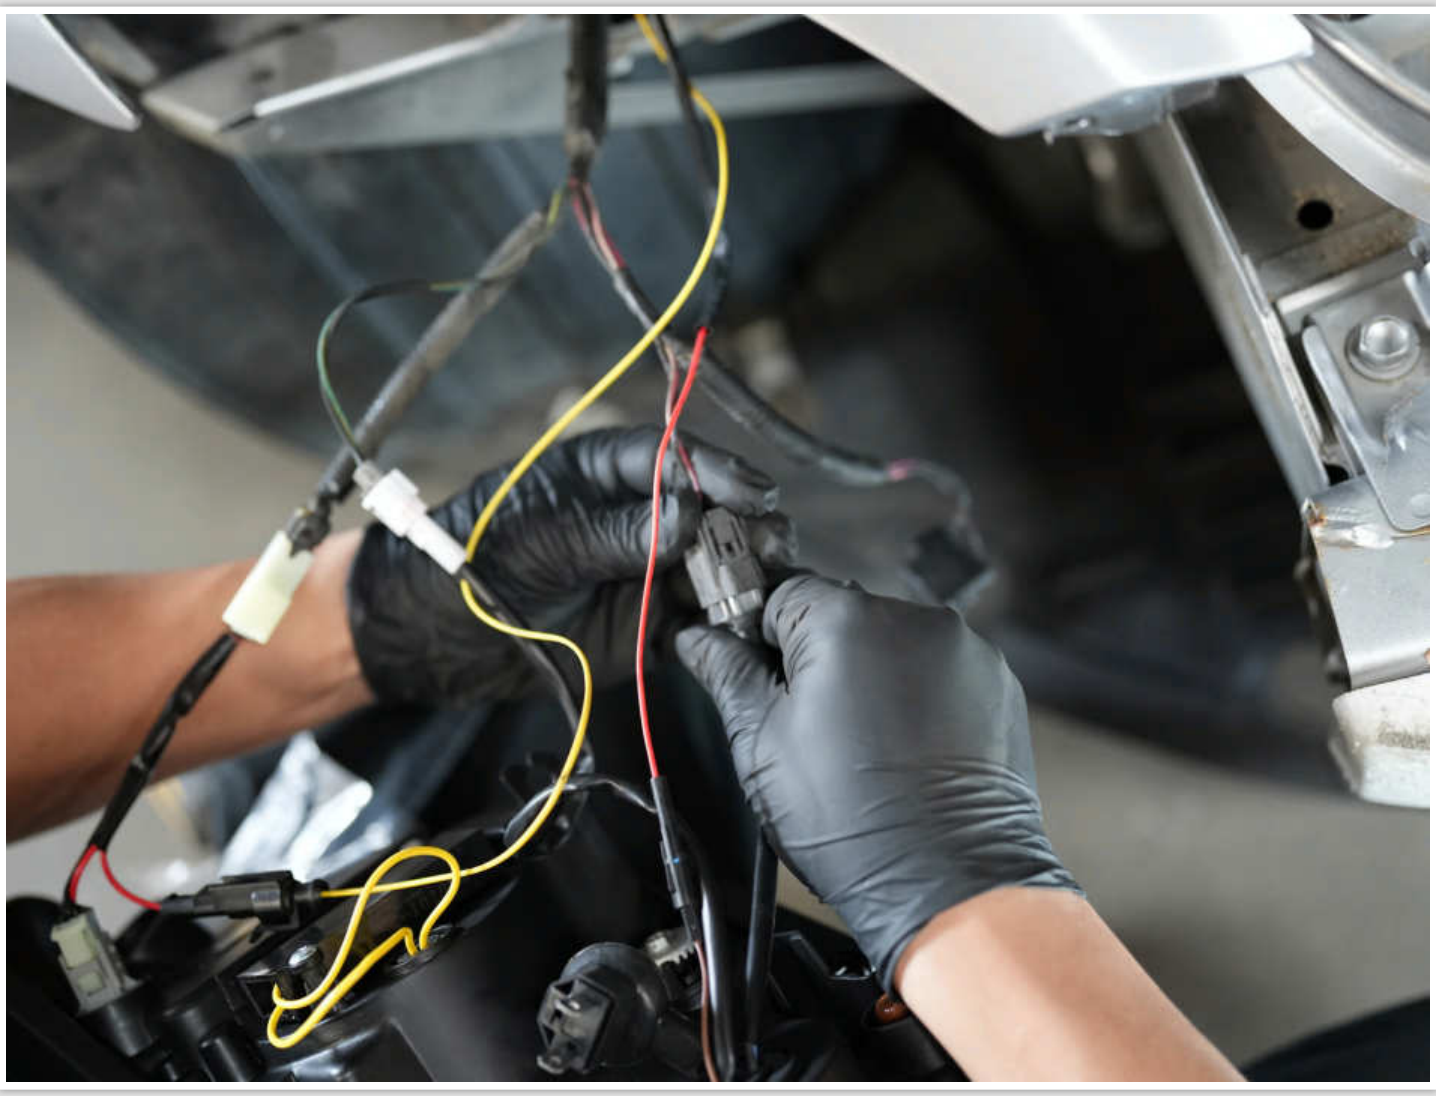

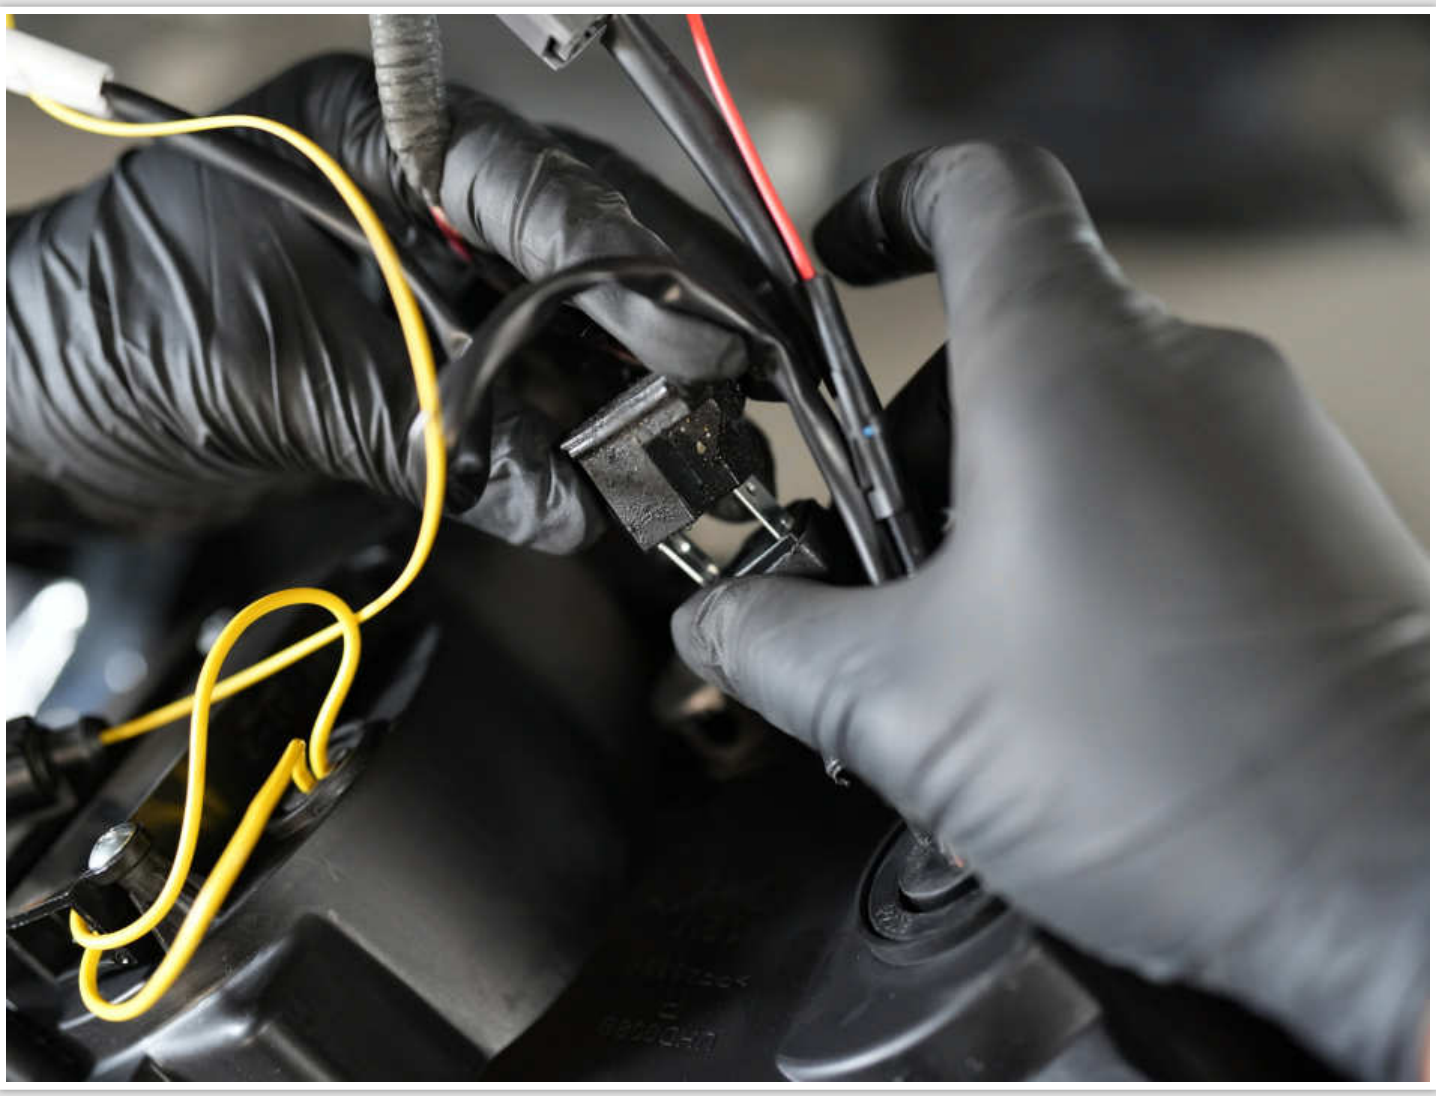

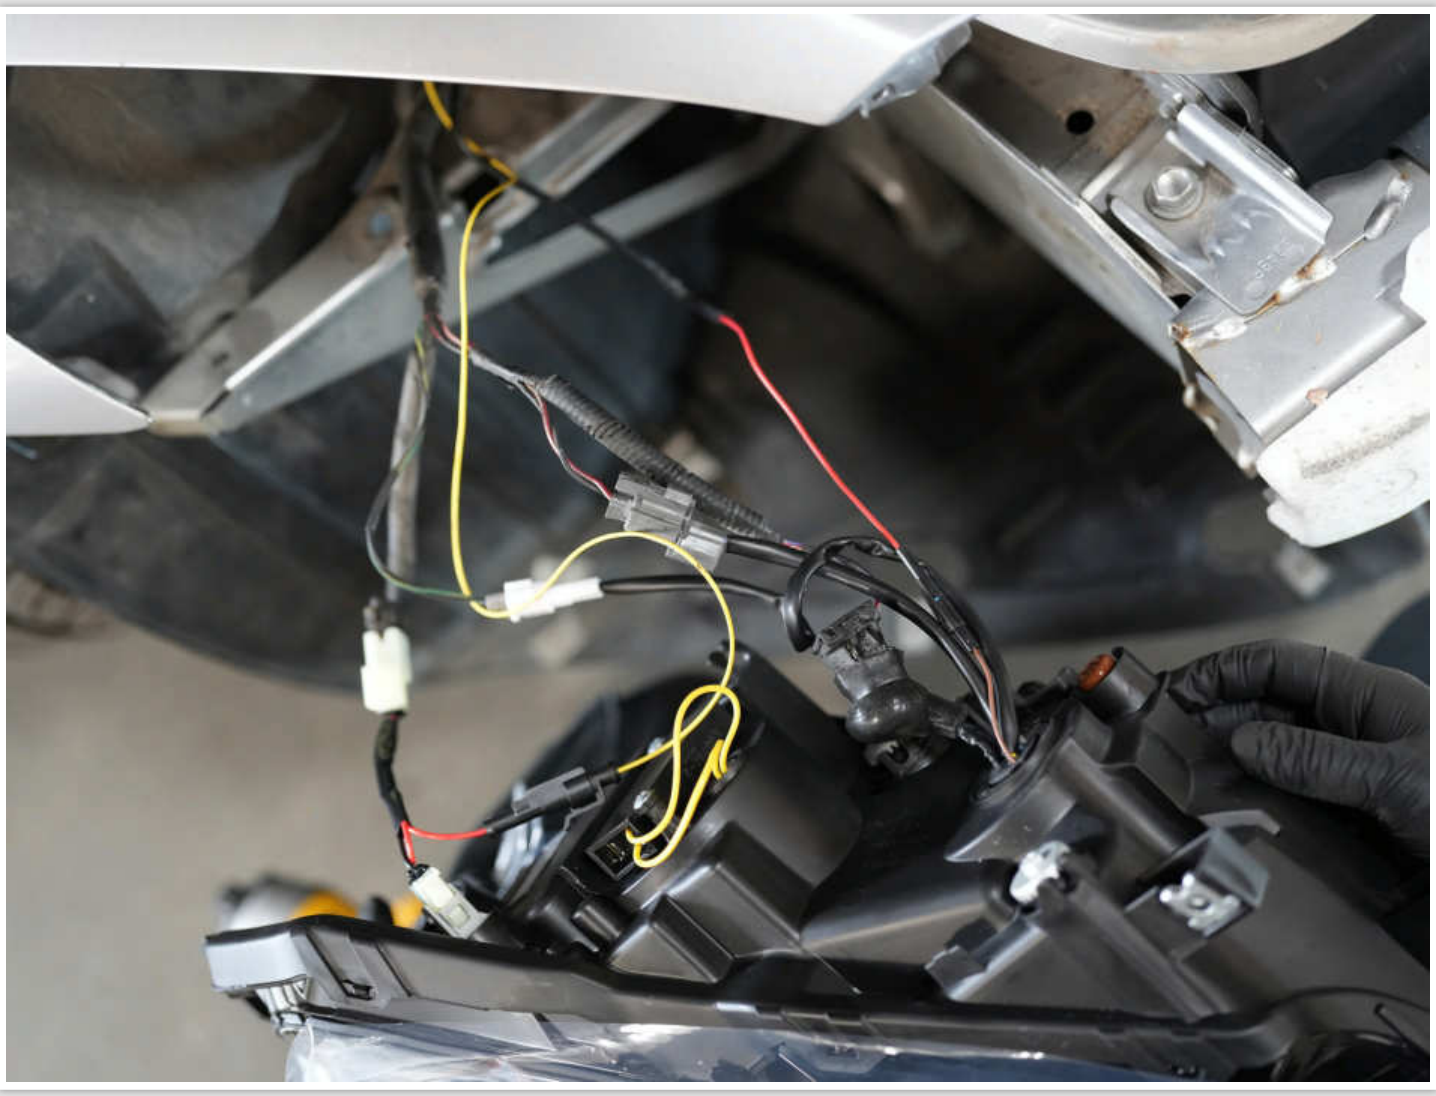

Securely install the headlight into the vehicle and tighten the five 10mm bolts in place. Repeat the same steps for the other side of the headlights.

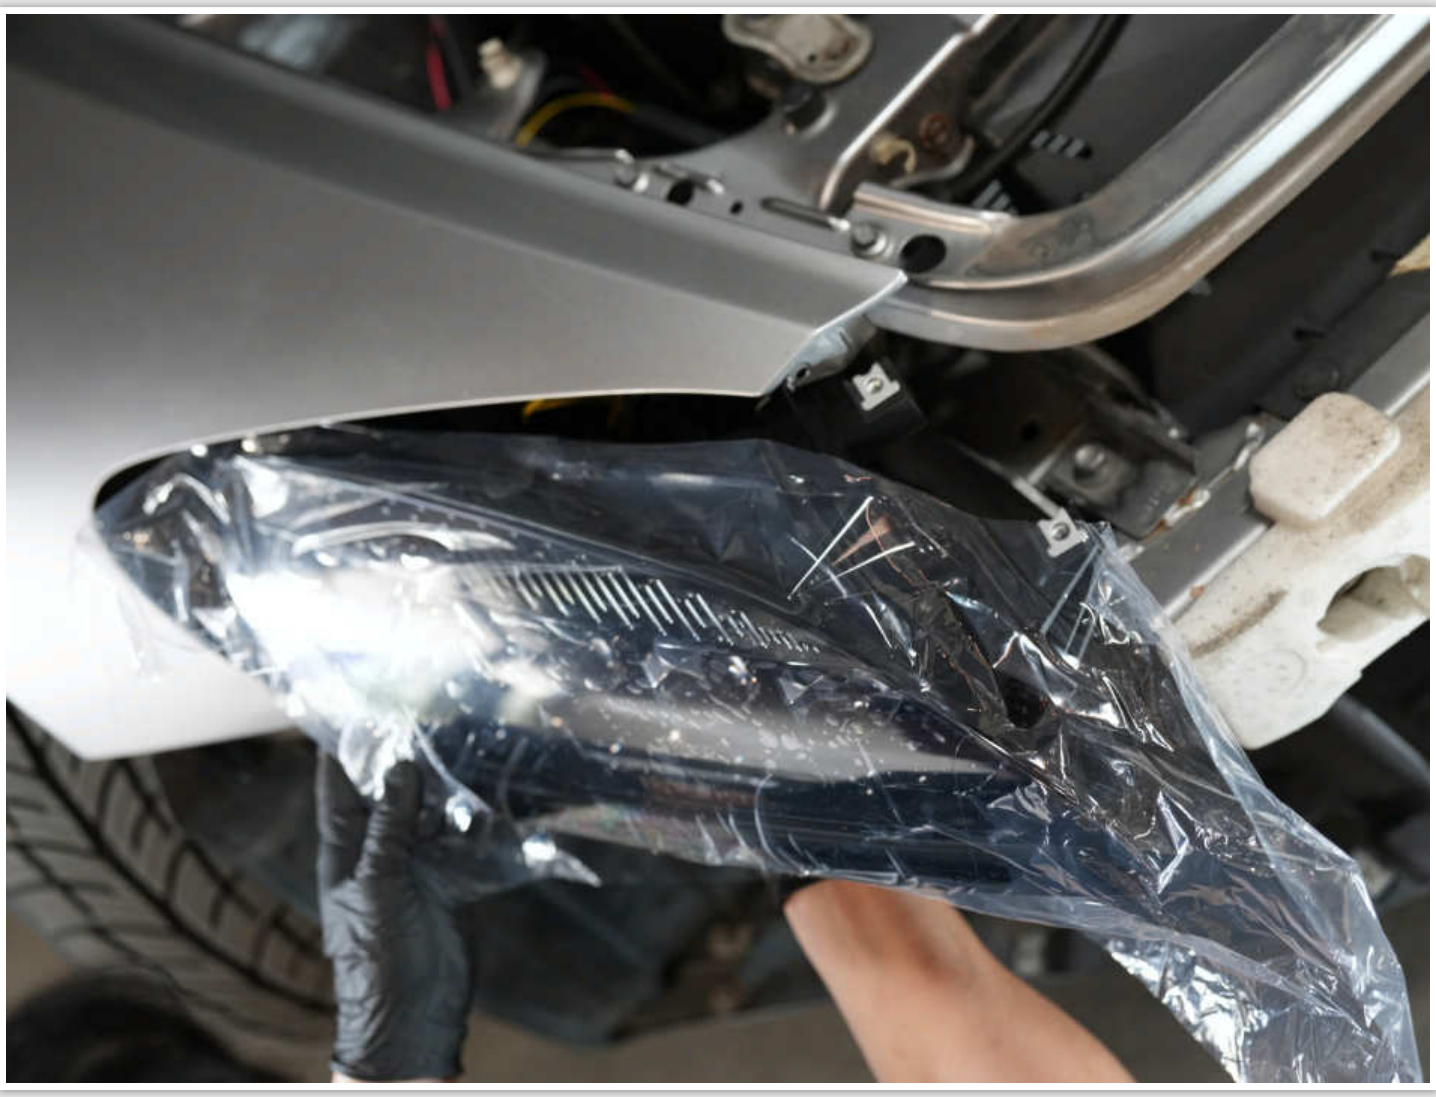

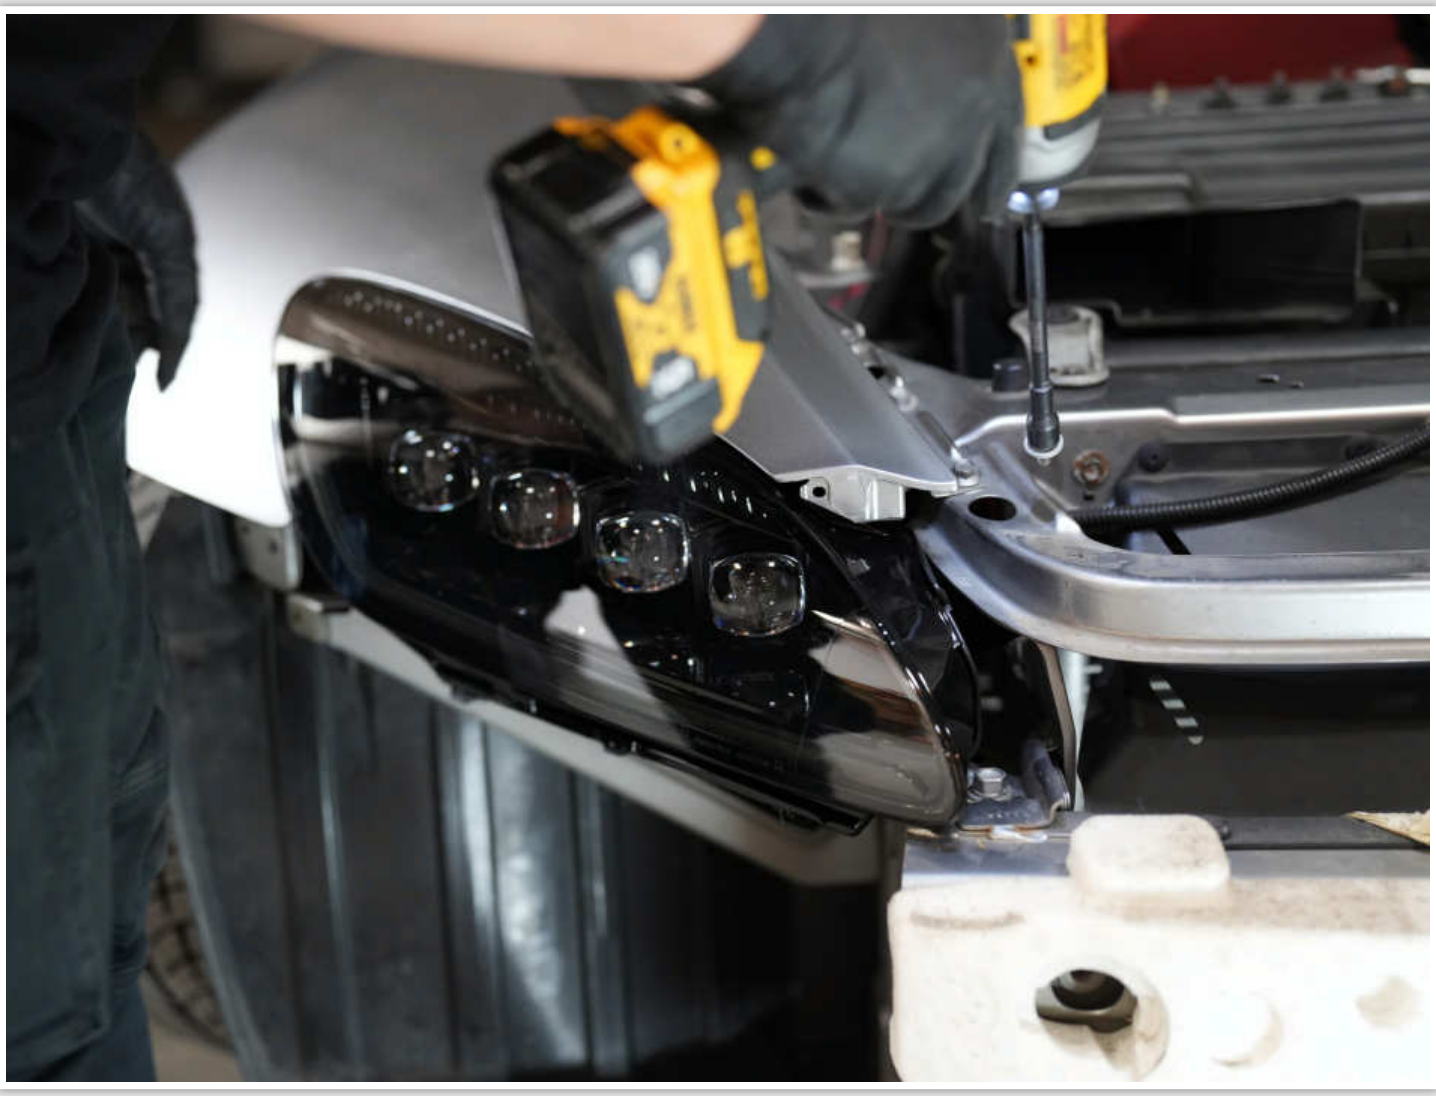

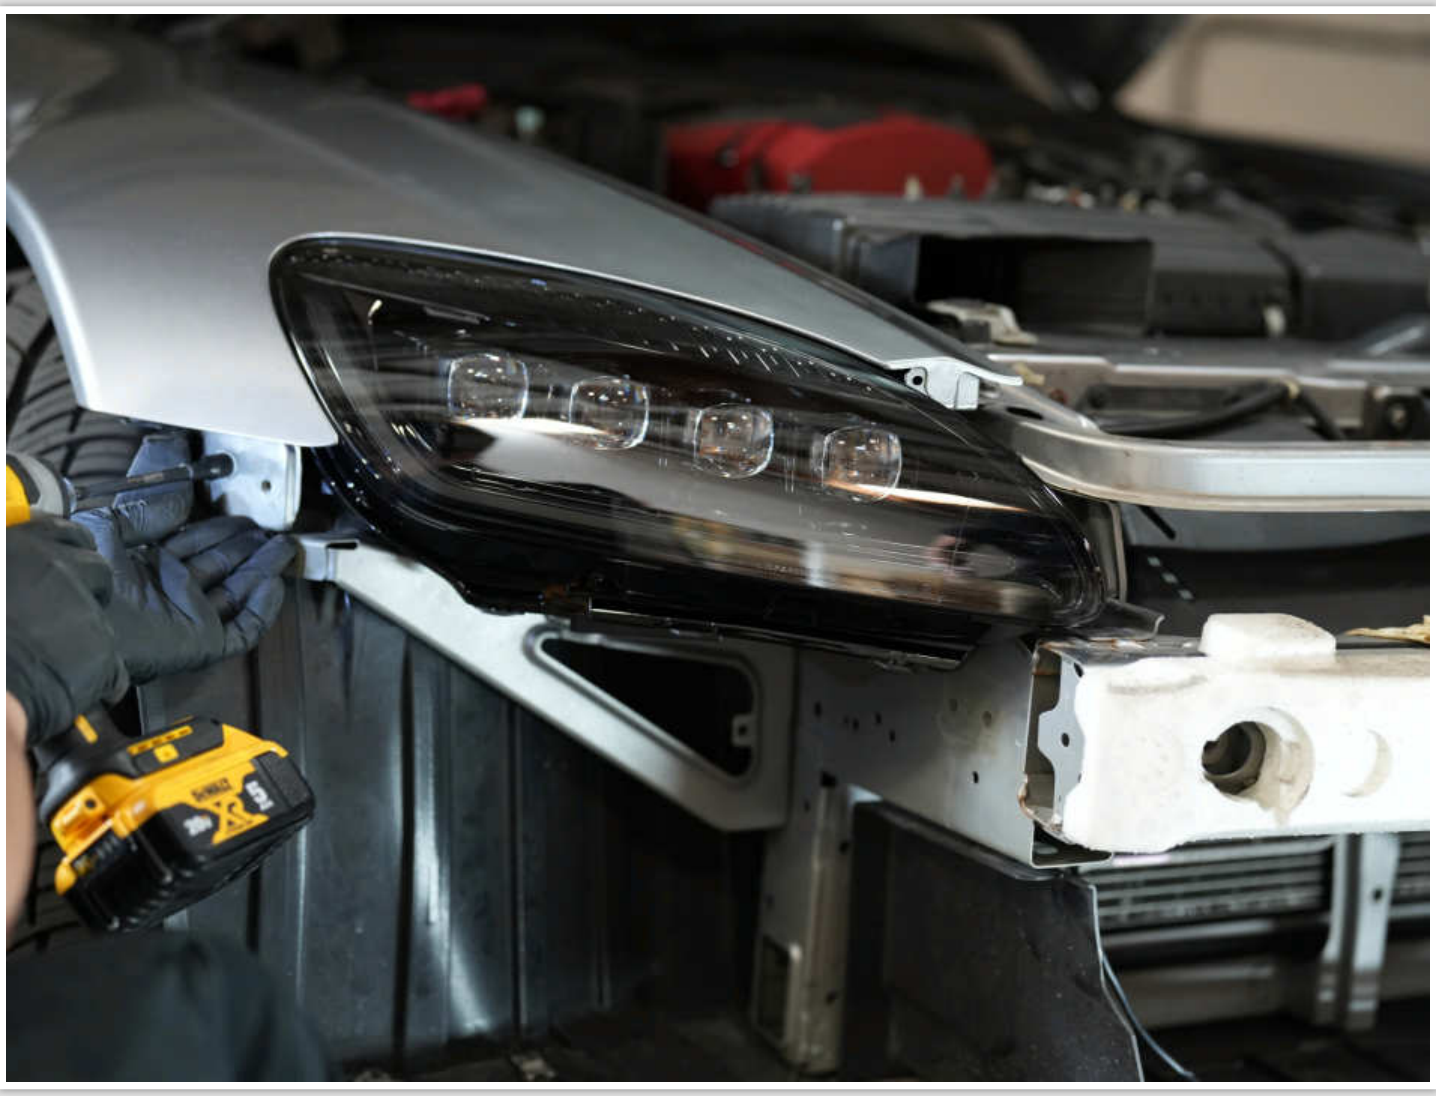

To complete the installation, reverse the removal process, ensuring all previous steps are followed in the opposite order.

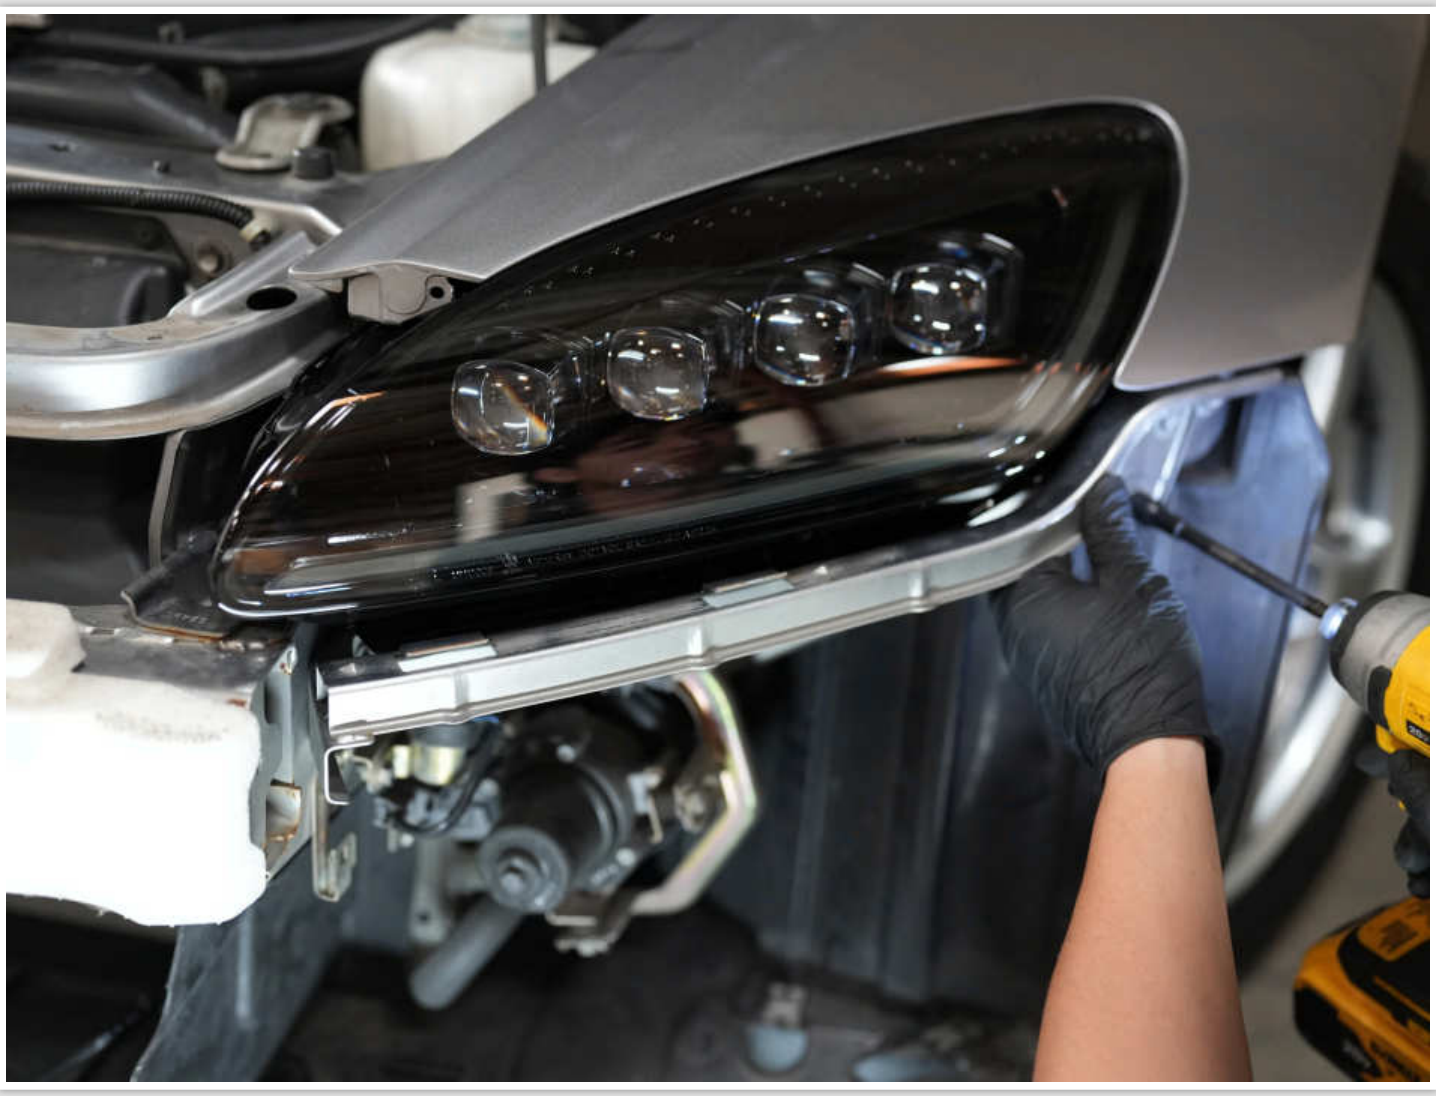

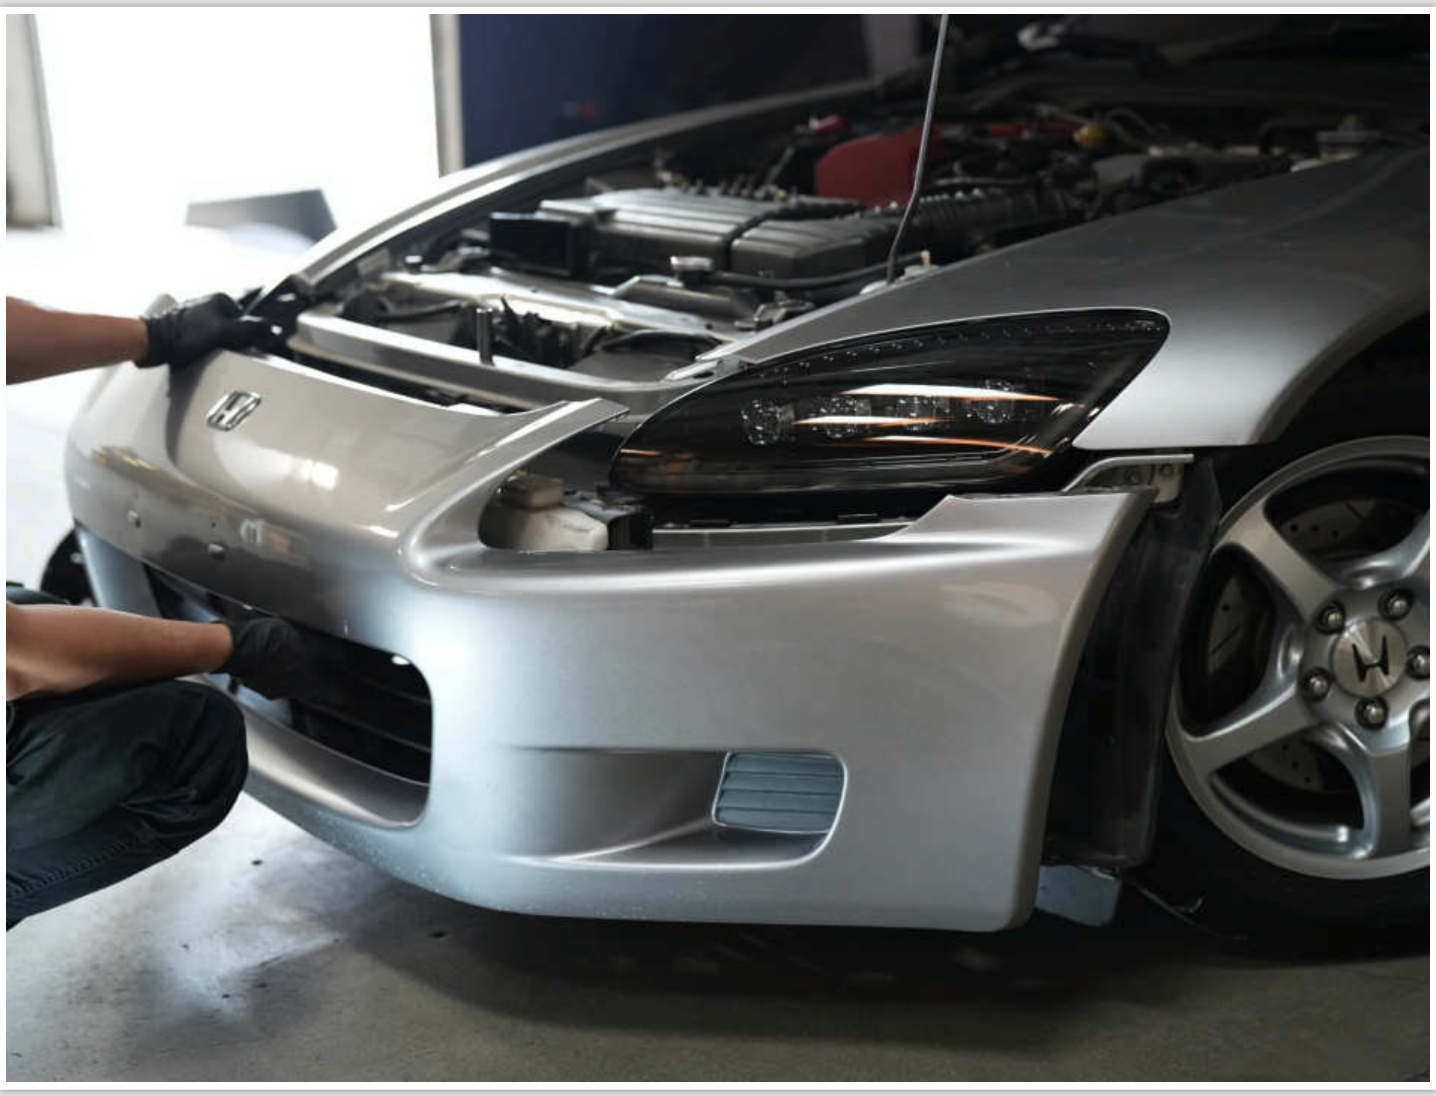

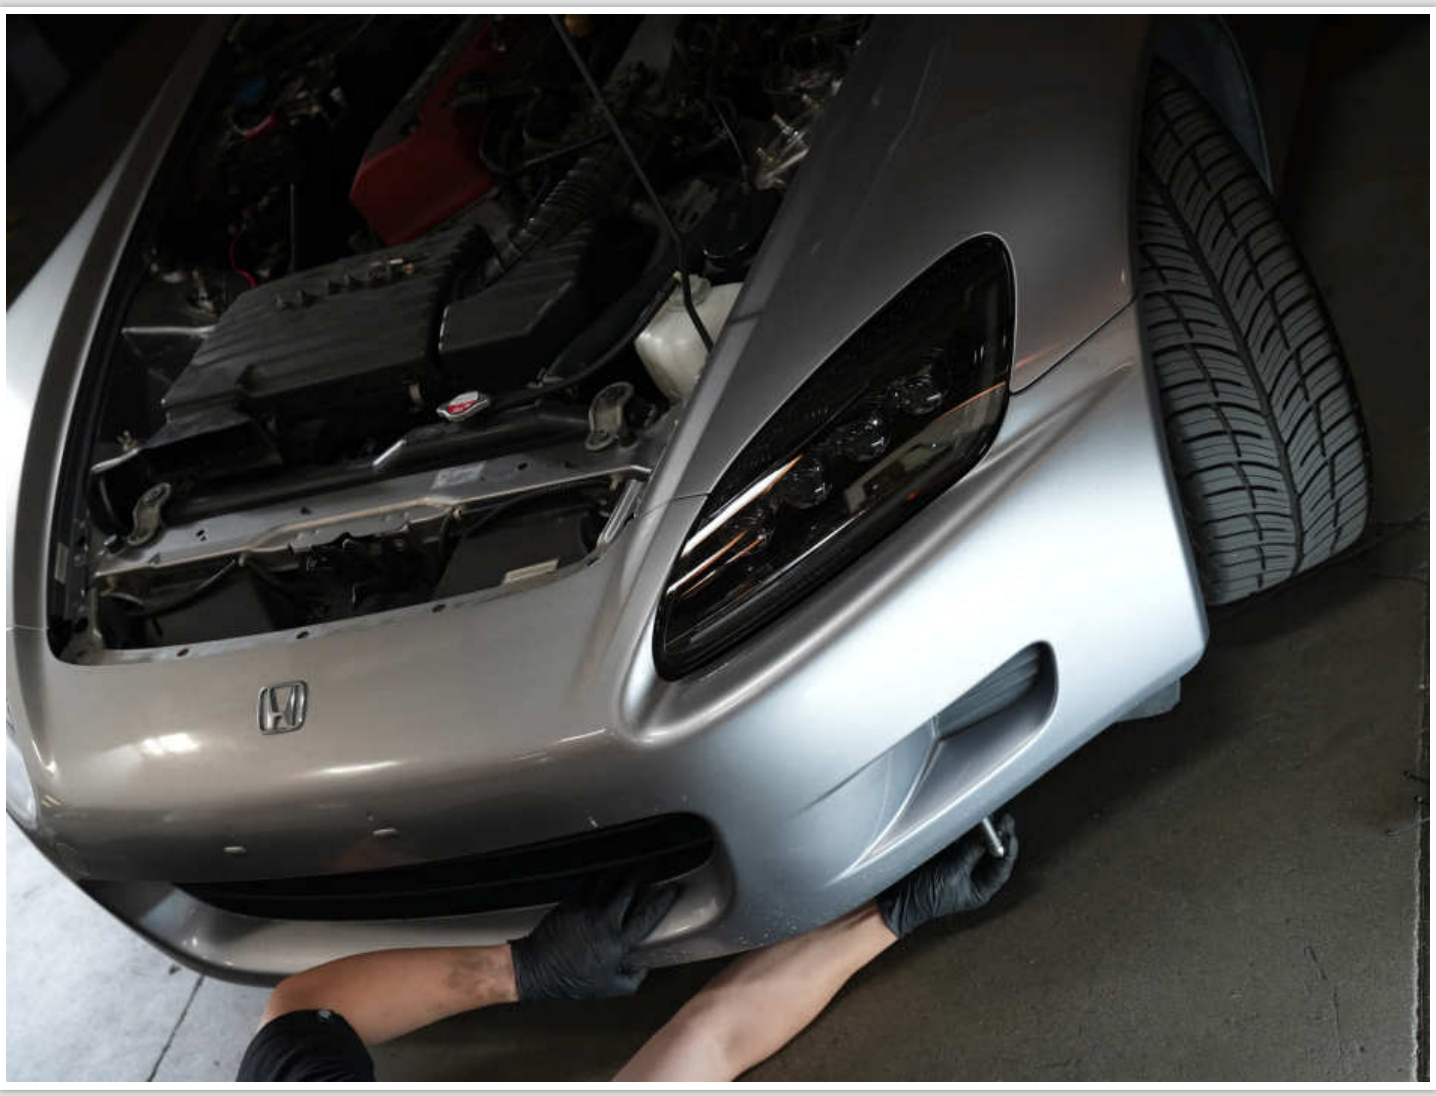

STEP 7 TEST THE HEADLIGHT FUNCTIONS

Test the functions of your ALPHAREX headlights to ensure everything works properly.

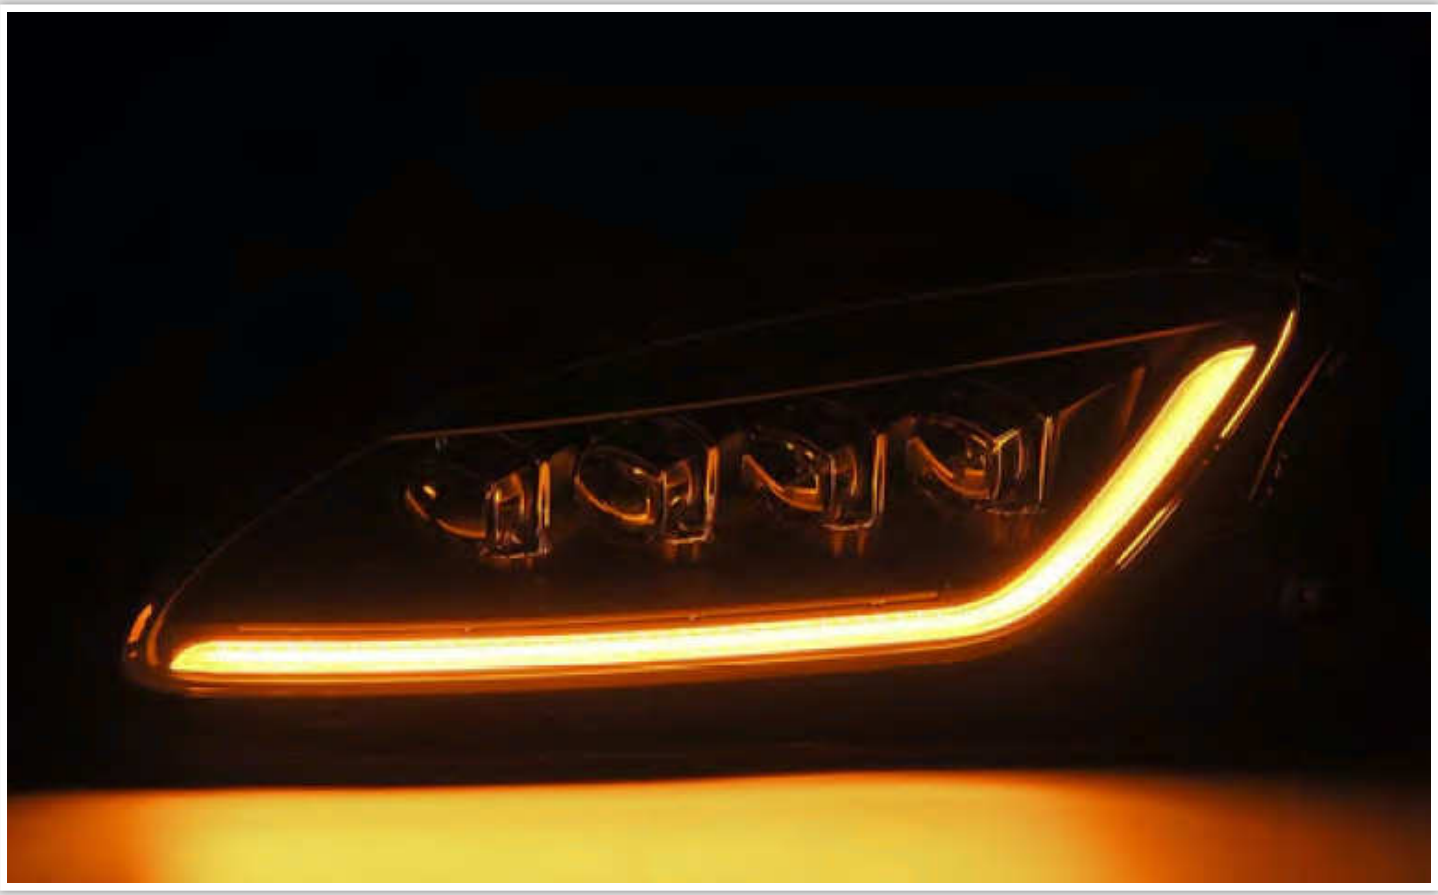

STEP 8 ADJUST HEADLIGHT LEVEL

Once everything has been tested, aim your ALPHAREX headlights by parking 25ft from a wall and level the headlight evenly.

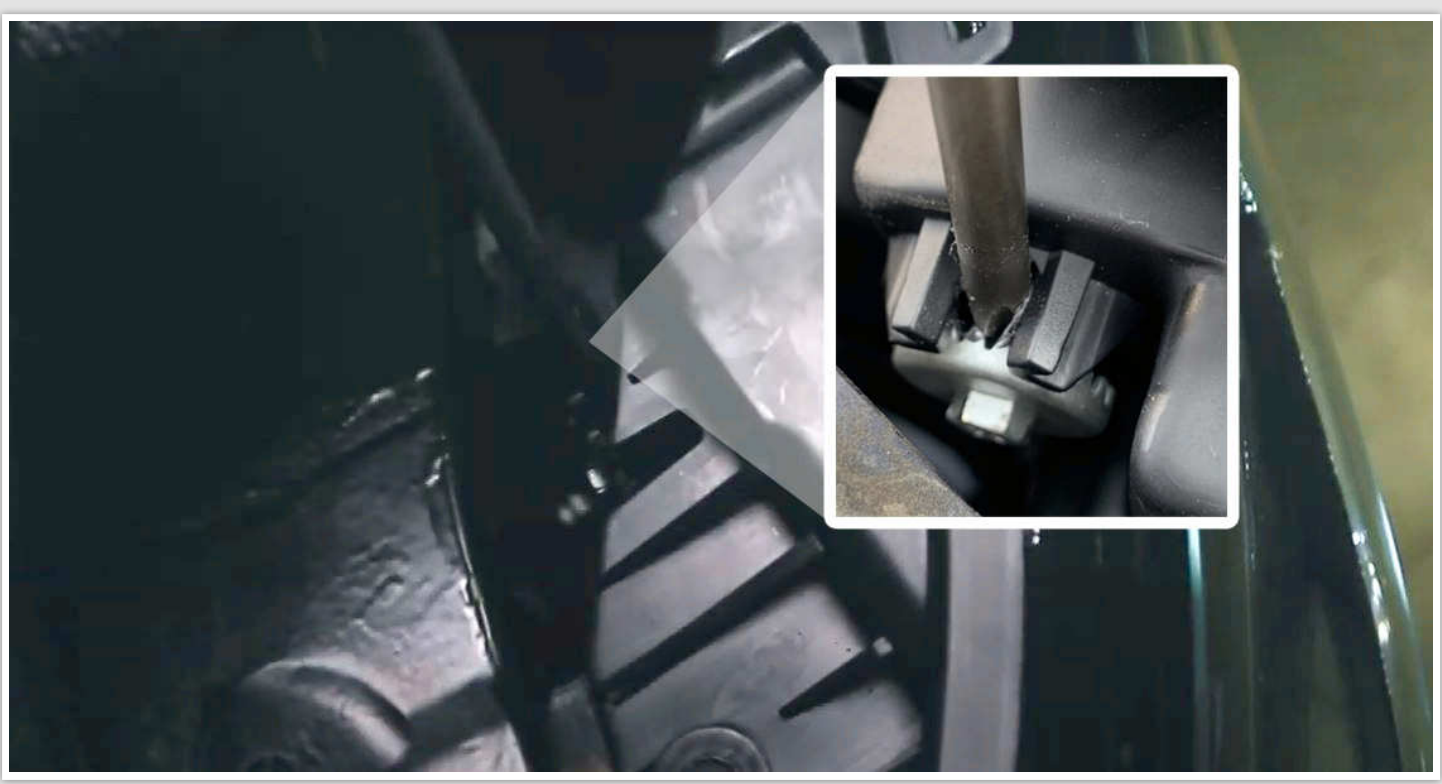

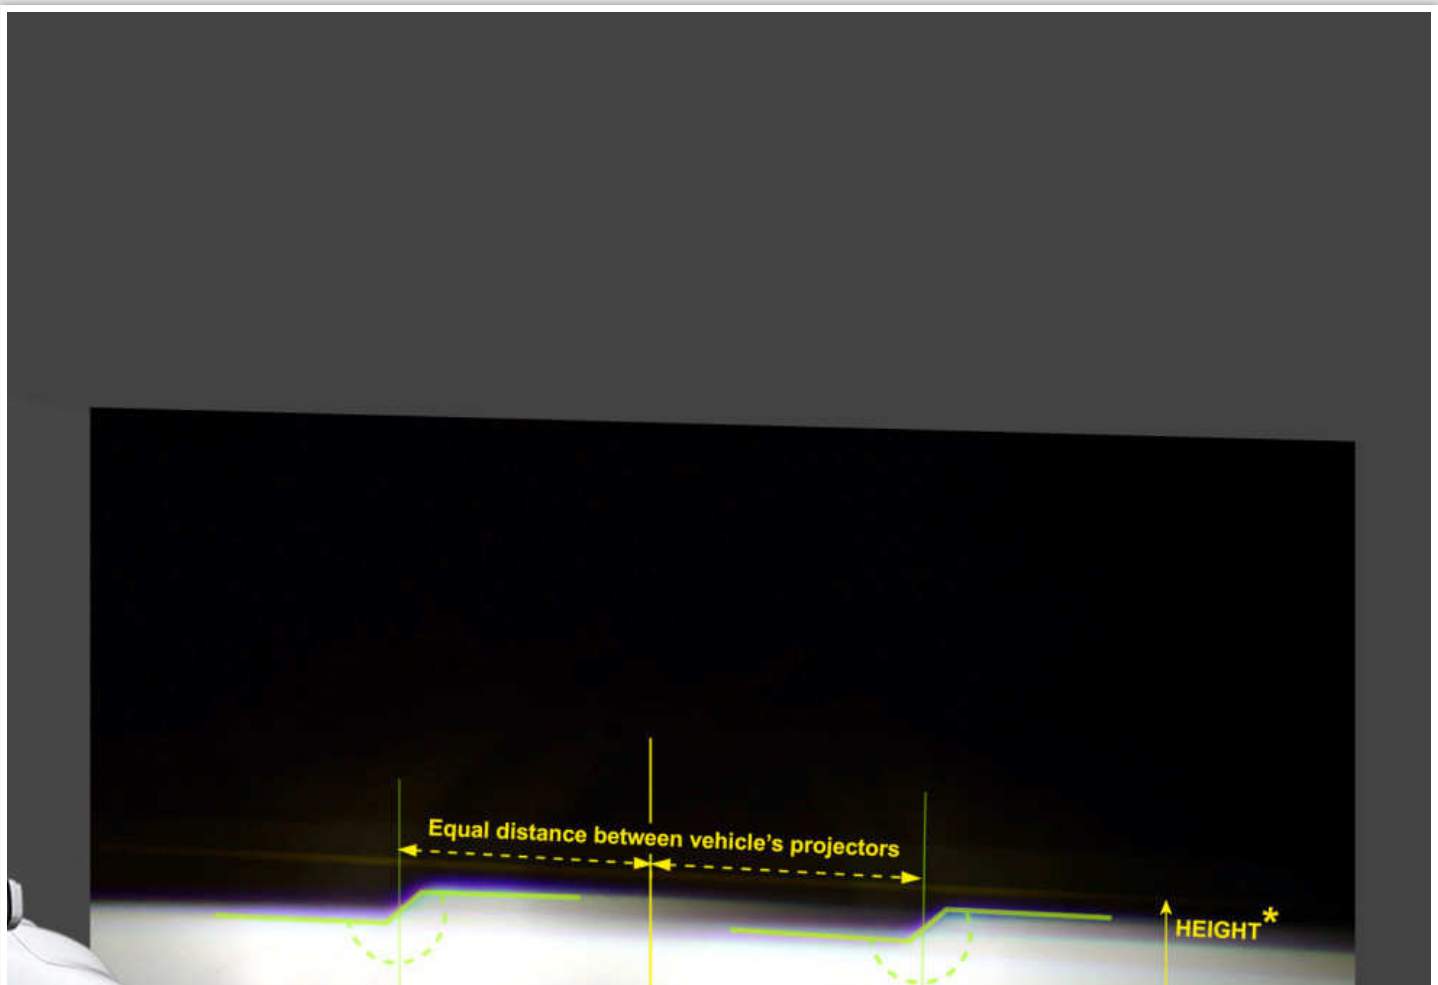

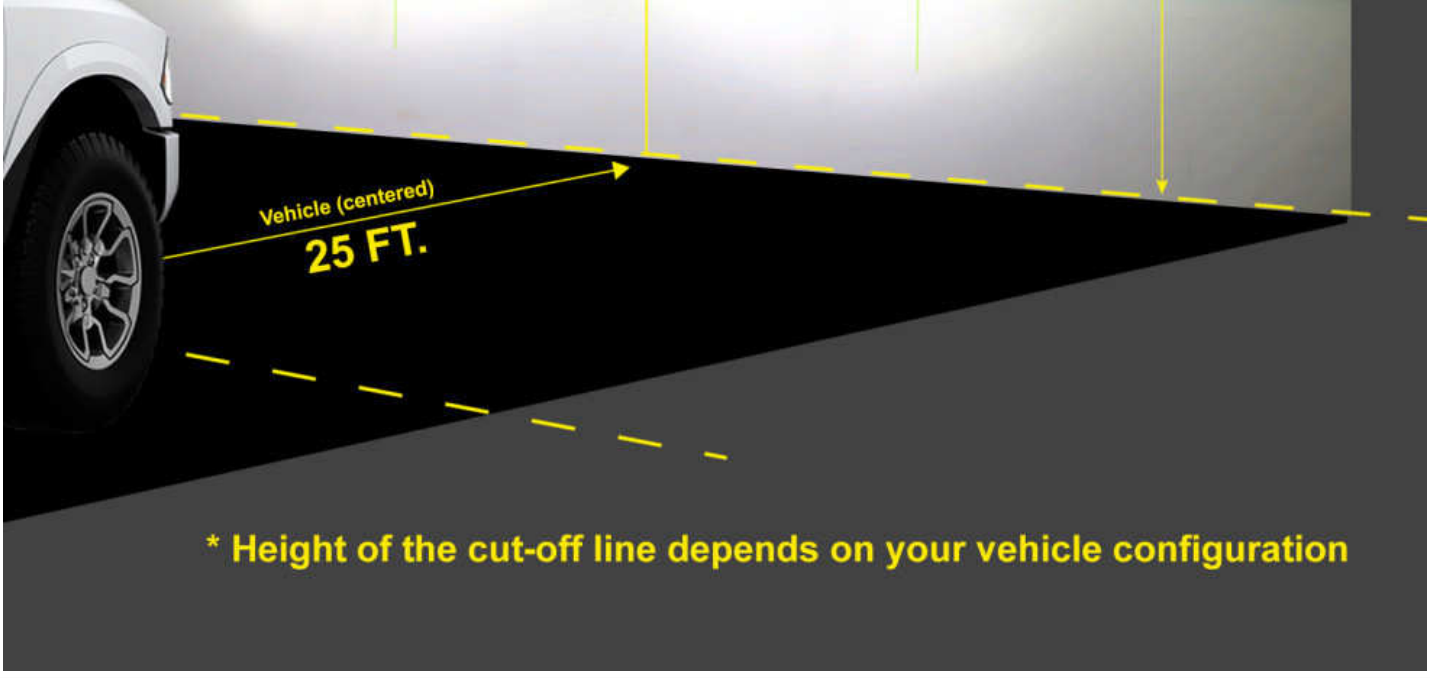
Vehicle (centered)
25 FT.
* Height of the cut-off line depends on your vehicle configuration

STEP 9 COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX 1999-2009 Honda S2000 HEADLIGHTS.