Warehouse Use Only

Part #	QUANTITY
D069	1
D115	1
G004	4
M13W	4
A285-50W	2
BG550	2
Z285	4

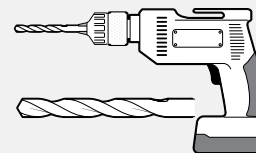|	
Part #:	J1000W
Dimensions:	6" X 6" X 51" (Telescopic)
Weight:	???

W

VANTECH
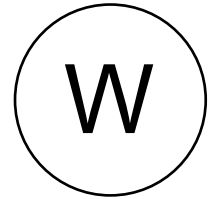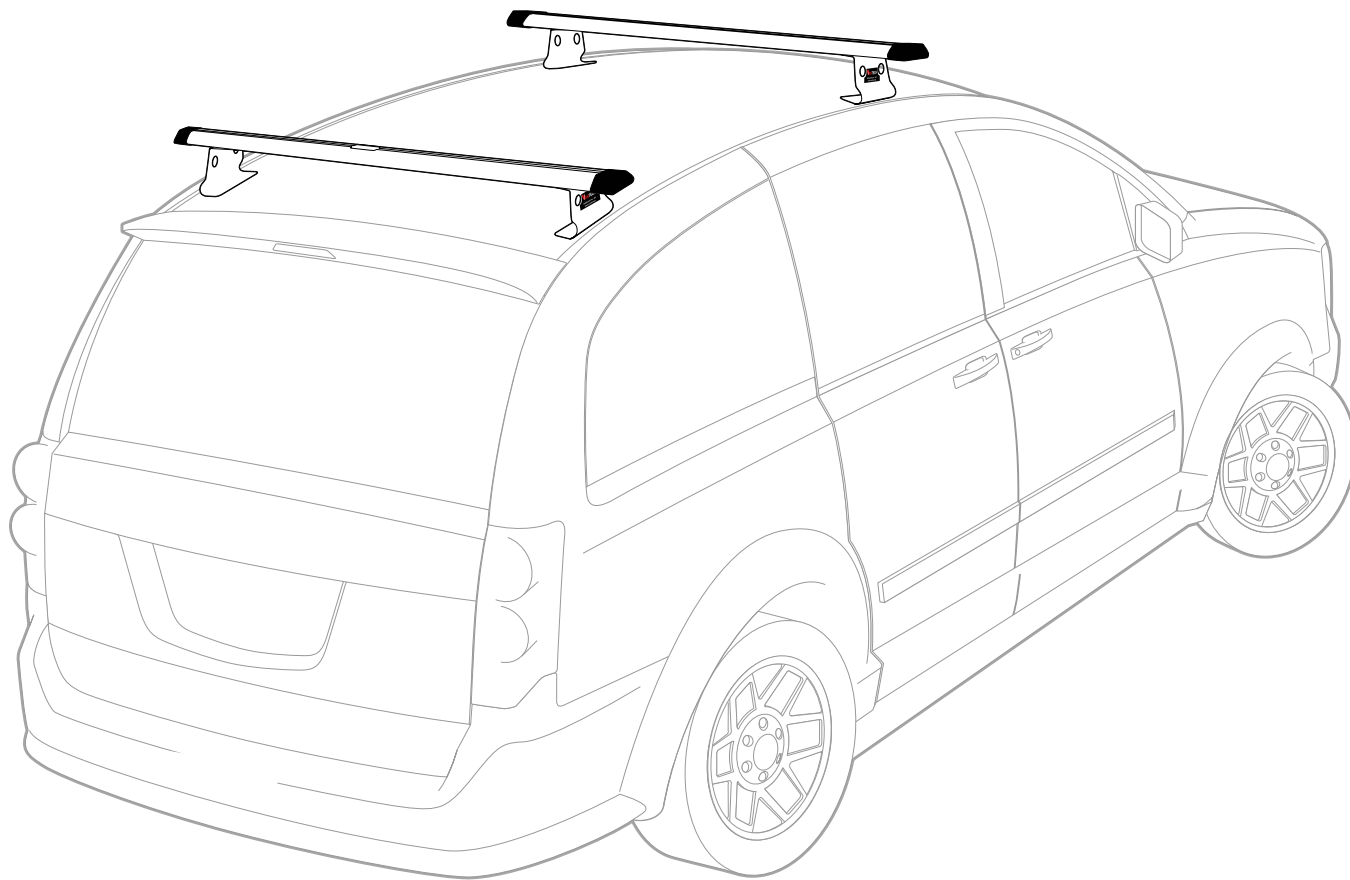
PRODUCT INFO

Part #:   J1000W

System: J1000

Material: Aluminum

Fitment: Universal (Drilling Required)

Color: White

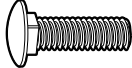## REQUIRED TOOLS

Power Tool With 5/16" Drill Bit
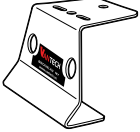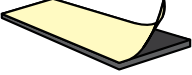
1/2" Wrench

Marker

MARKER

PART #	DESCRIPTION	QTY	ITEM
			ITEM NOT DRAWN TO SCALE
S052	DOUBLE SLIDER 2" BOLT TO BOLT	4	
W008	5/16" X 3/4" WASHER	16	
B016	5/16" X 1 1/4" CARRIAGE BOLT	8	
N005	5/16" NYLON NUT	16	
M13	MOUNTING BASE	4	
M07	INTERIOR PLATE	4	
A285-50	2.25" X 1" X 50" CROSS BAR	2	
G004	POLYFOAM GASKET 1.5" X 4"	4	
BG550	RUBBER BAR GUARD 50"	2	
Z285	ENDCAP	4	

Rubber Bar Guards
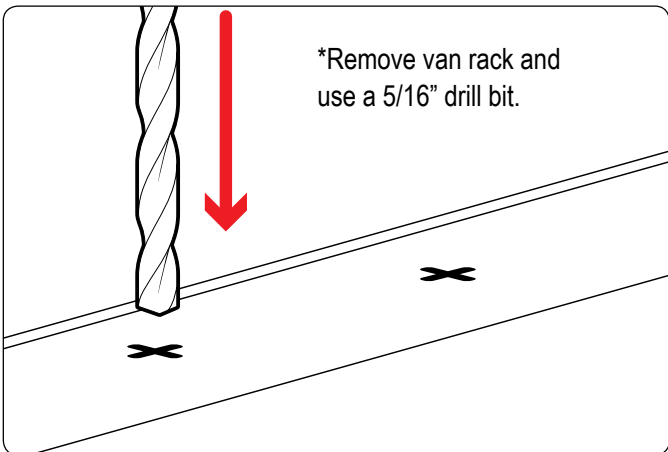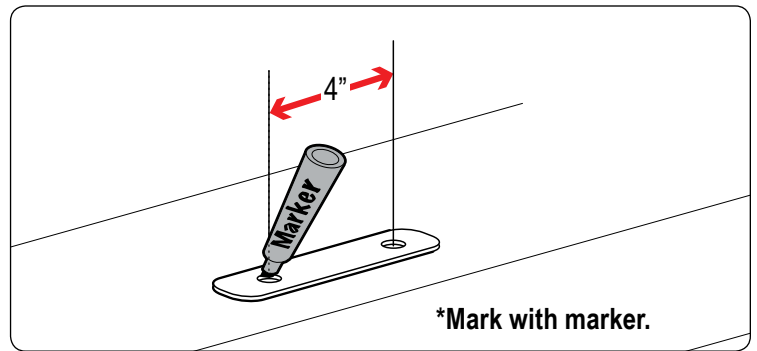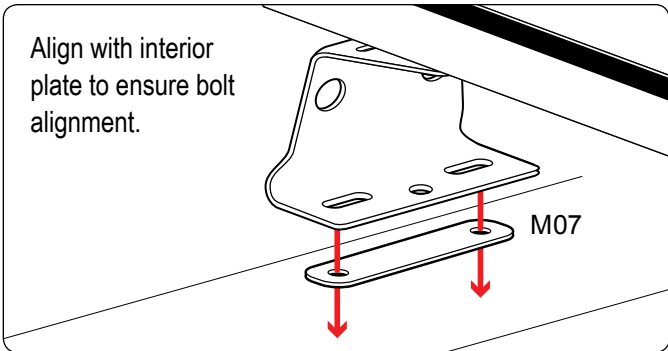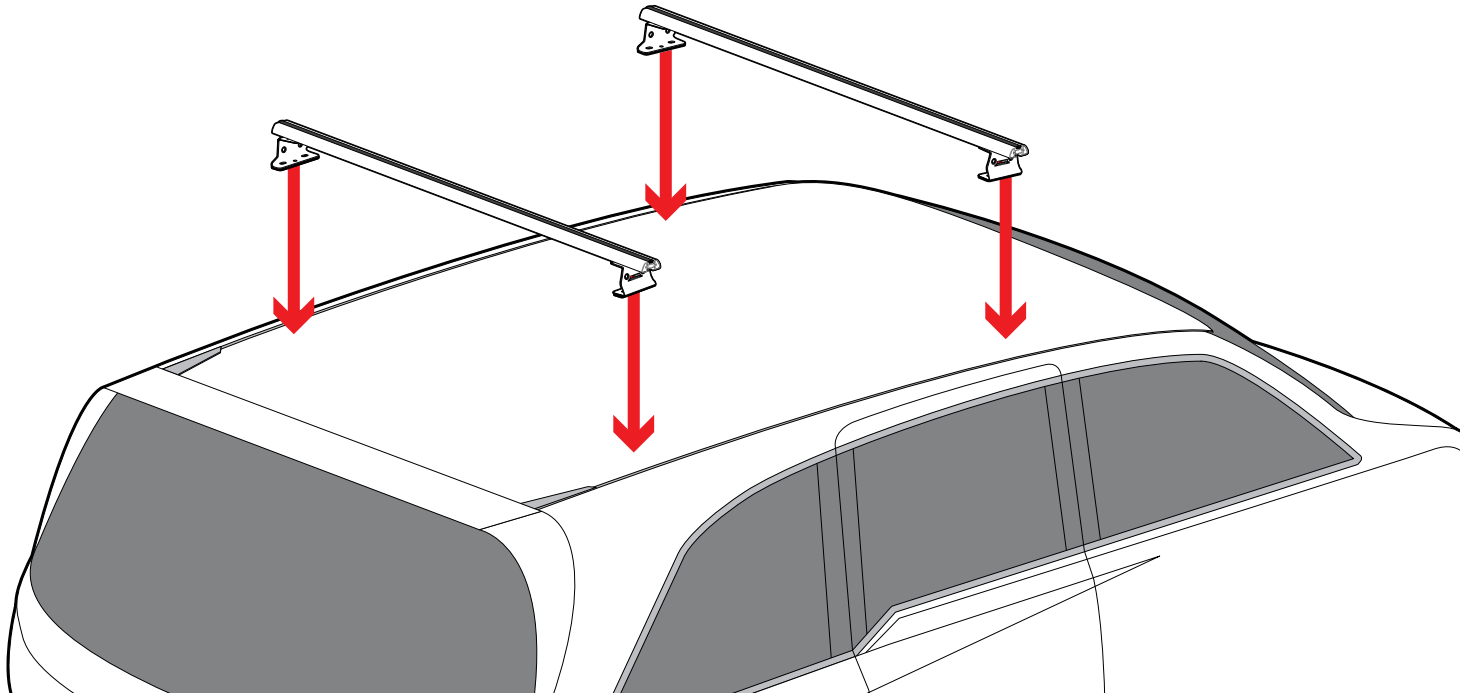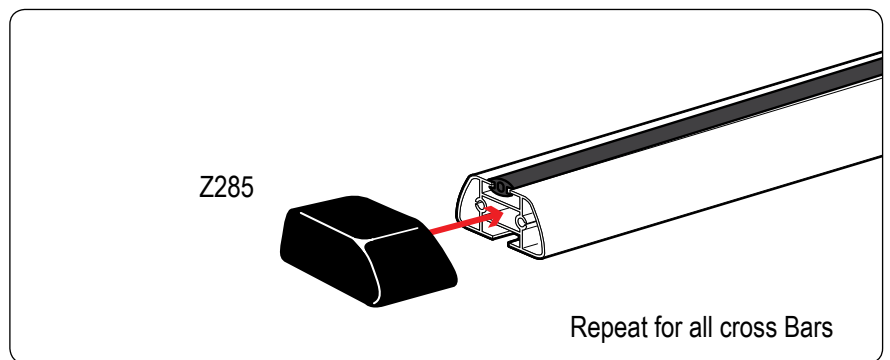
- Press the rubber bar guard into the channels of cross bars
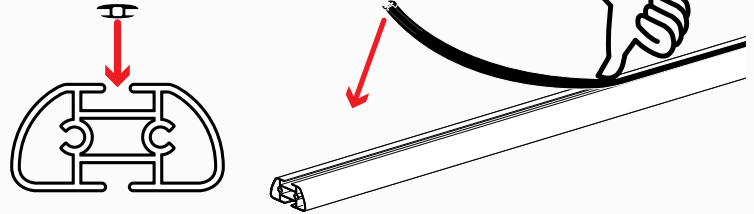
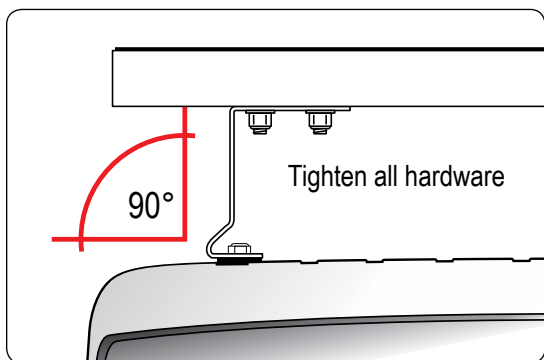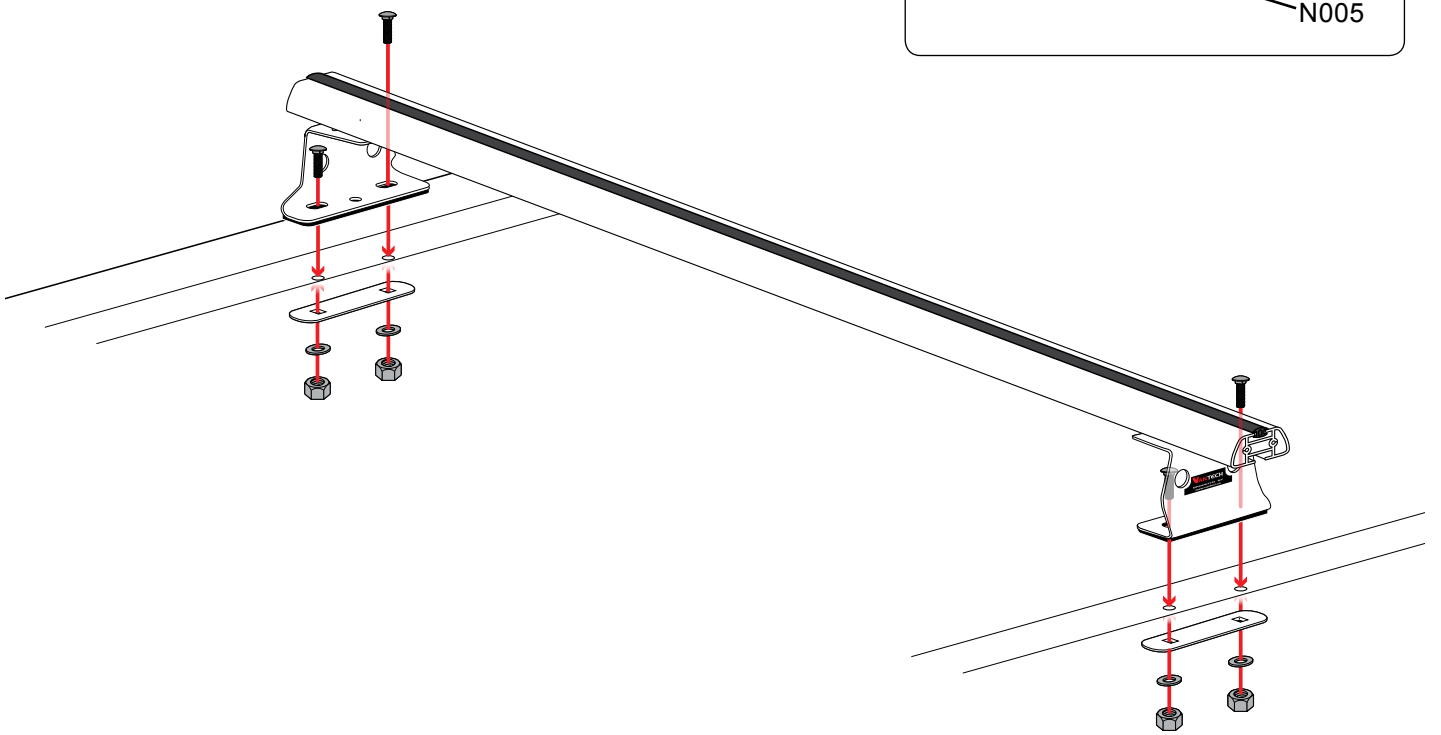## SYSTEM PLACEMENT
MUST BE PLACED IN THIS ORDER

FRONT

S052

M13

W008

N005

A285

REAR

M13

M13

Do not tighten hardware

Align with interior plate to ensure bolt alignment.

M07

4"

Marker

*Mark with marker.

*Remove van rack and use a 5/16" drill bit.

X

X

B016

M07

W008

N005

90°

Tighten all hardware

Z285

Repeat for all cross Bars
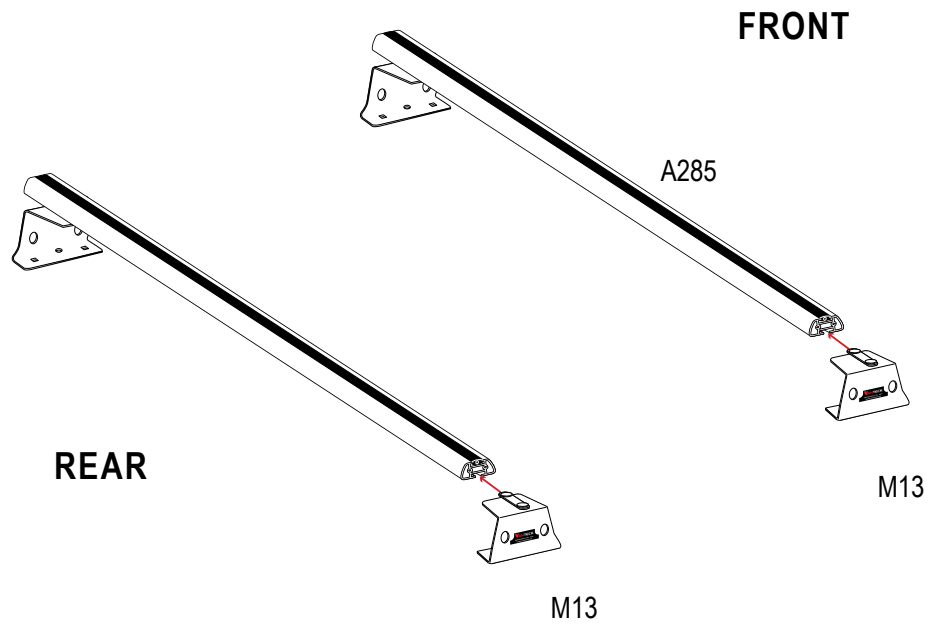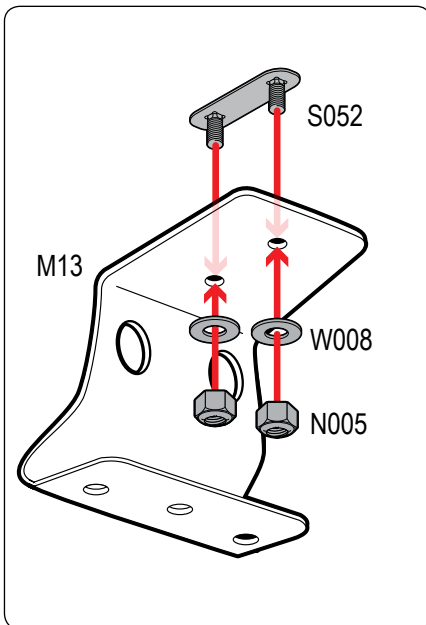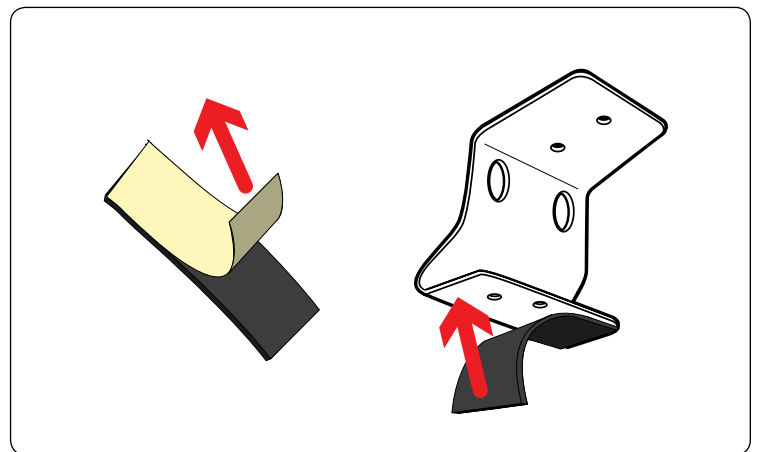
Vantech puts everything within reach.

Learn more about commercial van equipment we have.