

advanced FLOW engineering

Instruction Manual P/N: 42-23011

DFS780 PRO


Make: **Ford** Model: **F-250/F-350** Year: **1999-2007** Engine: **V8-7.3L/6.0L (td) Power Stroke**



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Fuel Manifold Assembly	05-60584
B	1	Filter, Fuel	44-FF018
C	1	Bracket, Frame; Carbon Steel	05-60795
D	4	Washer: M6 (Fiber)	03-50457
E	4	Washer: M6	03-50444
F	4	Locknut, Flanged: M6	03-50445
G	4	Bolt: M6 x 1.0 x 50mm	03-50443
H	3	Rivet, Nuts	03-50569
I	1	Screw, Hex Hd Cap: 3/8"-16 x 1-1/2"	03-50046
J	3	Nut: 3/8"-16 Flange	03-50568
K	3	Washer, Flat: 3/8" AN	03-50230
L	12	Ties, Nylon Cable: 12"	05-60167
M	1	Connector, Add-a-Harness & Fuse (ATM)	05-60583
N	3	Bolt, 3/8"-16 x 1"	03-50124
O	1	Fitting; 3/8" Push-On to -6 AN (Straight)	05-60510B
P	1	Clamp, Spring	05-60578
Q	1	Fitting; 3/8" Push-On to -6 AN (90°)	05-60635B
R	1	Harness, Power	05-60523
S	1	Harness, Relay	05-60551
T	1	Hose, Fuel Inlet/Outlet	05-60855
U	1	Hose, Fuel Return	05-60856
V	1	Nut, 3/8"-16	03-50568
W	1	Washer, Flat: 3/8"	03-50488
X	2	Fitting; 3/8" NPT to -6 AN (Straight)	05-60634B

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

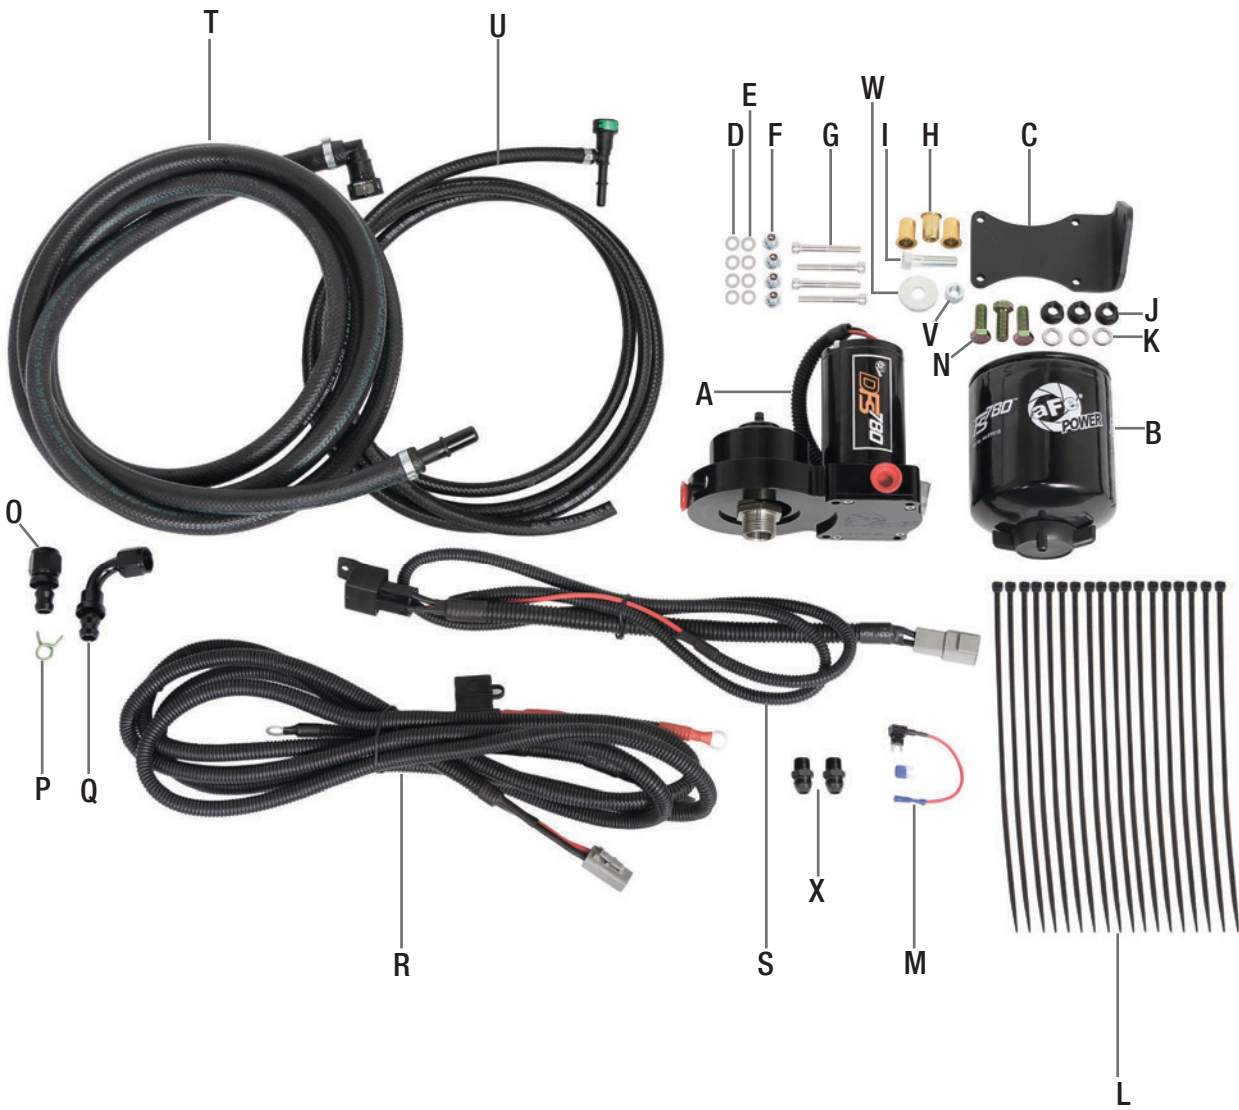



Step 1: Mount the supplied fuel manifold assembly to the supplied carbon steel frame bracket using the supplied hardware and tighten:

- (4) M6 x1.0 x 50mm bolts
- (4) M6 washers
- (4) M6 fiber washers
- (4) M6 flanged locknuts

Note: The fiber washers go between the fuel manifold assembly and the carbon steel bracket.

Step 2: Install the two (2) supplied 3/8" NPT to -6 AN fittings to the fuel manifold assembly using thread sealant.

Note: Installing the fuel filter loosely will give you an idea of the overall assembly size when looking for a mounting location.


Step 3: Mount the fuel manifold assembly to the truck. When looking for a location to mount the assembly, please make sure you take into account the length of hose that was supplied as well as the orientation of the inlet and outlet ports.



Note: Be careful when drilling. Check behind where you are drilling for anything that might get damaged and move it before drilling.

- Step 4:** If you are using the supplied rivet nuts, you will need to drill three (3) $17/32$ " holes into sheet metal with a minimum thickness of $5/32$ " (0.156"). Otherwise, you will need to drill three (3) $3/8$ " holes into sheet metal with a minimum thickness of $3/16$ " (0.188").
- Step 5:** If installing the rivet nuts, use the supplied $3/8$ "-16 x $1-1/2$ " bolt, $3/8$ "-16 nut and $3/8$ " flat washer to make the installation tool (as shown below).



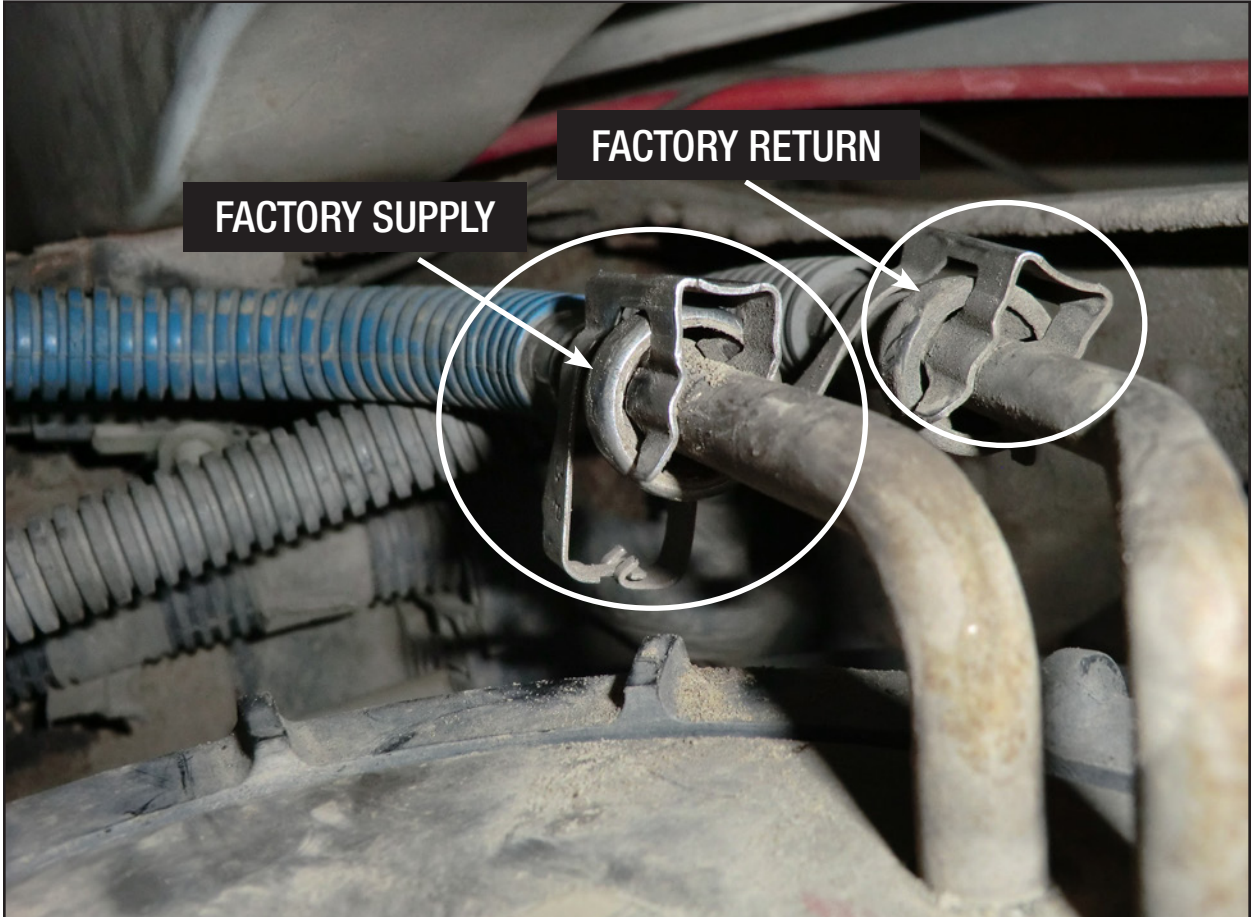

Note: If you have a 1999 - 2000 truck and the fittings look like the above picture, you will need a special tool to release the fuel line from the connectors. You can get this tool at your local parts store.


Step 6: Using the tool assembled in Step 5, attach the rivet nut to the drilled material by holding the bolt steady and turning the nut clockwise. This will force the rivet nut to collapse and tighten onto the drilled material.

Step 7: Install the fuel manifold assembly and the carbon steel frame bracket to the frame using the supplied hardware:

- (3) 3/8" - 16 x 1" bolts
- (3) 3/8" AN washer
- (3) 3/8"- 16 flanged nuts (if not using the rivet nuts)


Step 8: Install the supplied fuel filter and tighten.

Step 9: Find the factory fuel supply lines. They are located on top of the factory fuel tank.

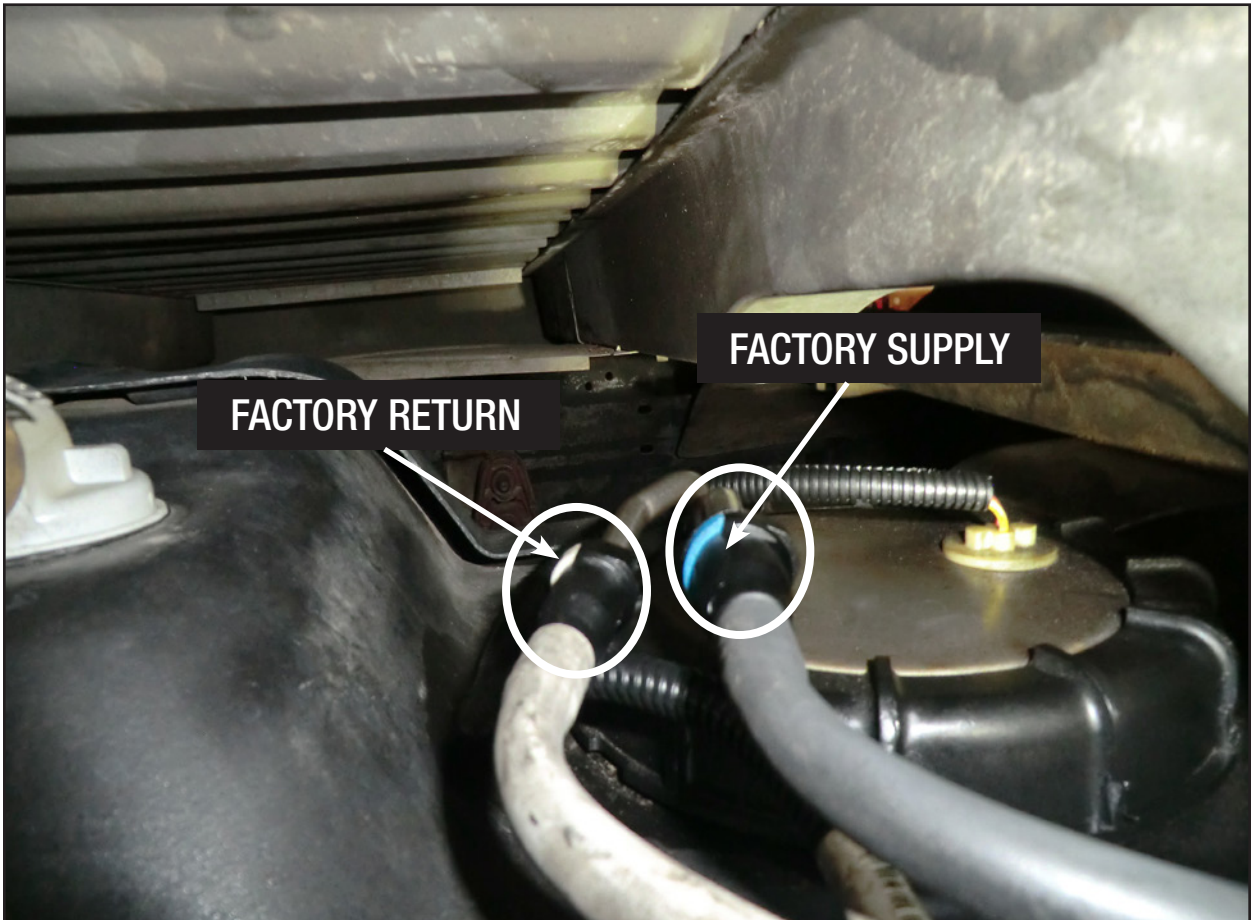


- Step 10:** Disconnect the factory fuel supply line. Attach the male quick disconnect fitting (straight fitting) on the supplied inlet/outlet hose to the factory female quick disconnect fitting on the factory fuel supply line. Route the hose to the inlet port on the fuel manifold assembly, making sure not to kink the hose or allow it near moving parts. Carefully mark and then cut the hose to the correct length.
- Step 11:** Using the other end of the hose you just cut, attach the female quick disconnect fitting (90° fitting) to the factory male quick disconnect fitting on the factory fuel supply line. Carefully route this hose to the outlet port on the fuel manifold assembly, making sure not to kink the hose or allow it near moving parts. Carefully mark the hose and then cut and remove any excess.
- Step 12:** Using a small amount of lightweight oil on the barbed ends, install the supplied 3/8" push on to AN -6 fittings (straight & 90°) to the cut ends of the hoses (determine which fitting works best for both the inlet and outlet port). Make sure both fittings fully seat into the hoses.

Note that these fitting are “self-locking” and do not require a clamp.

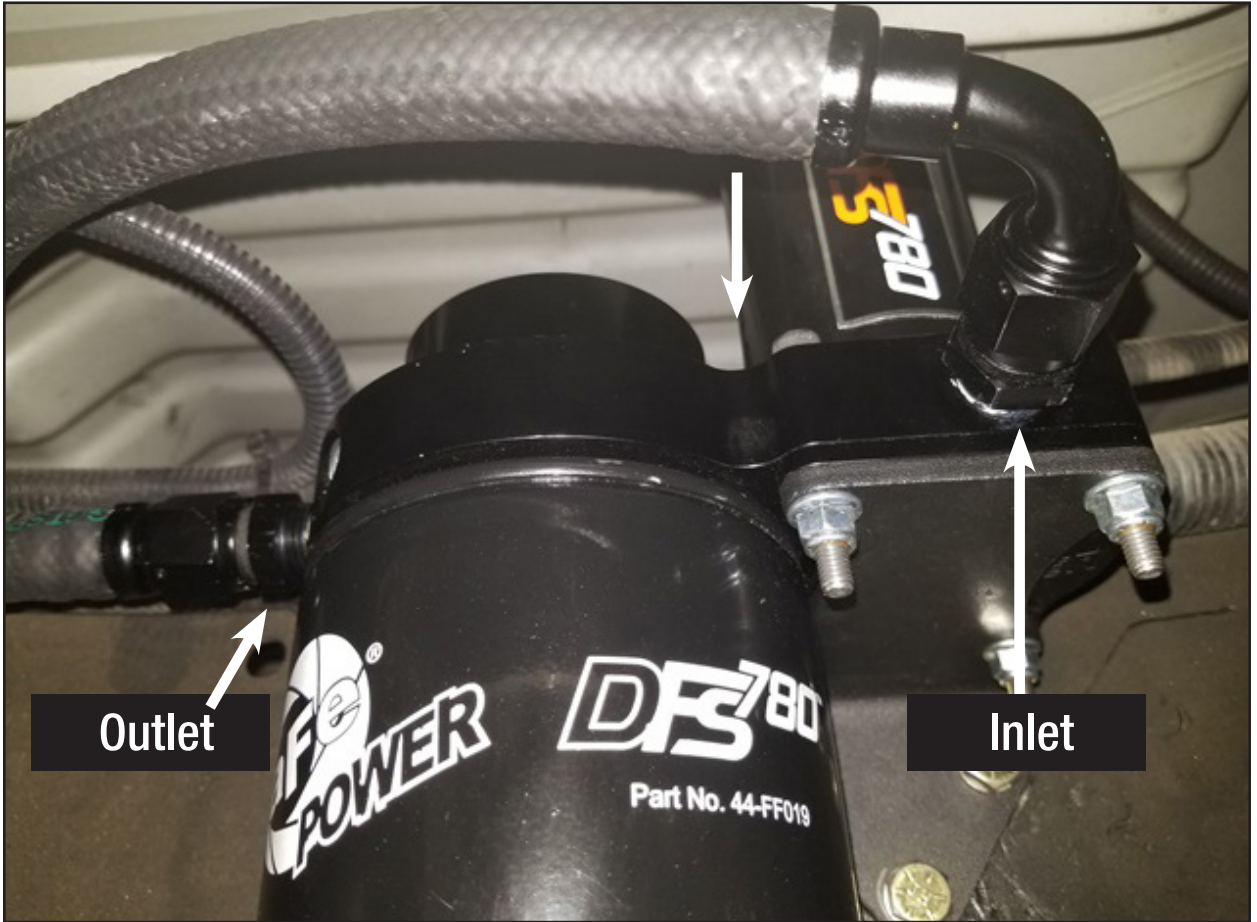


Step 13: Attach the fittings to the inlet & outlet ports of the fuel manifold assembly. Make sure all connections are tight.

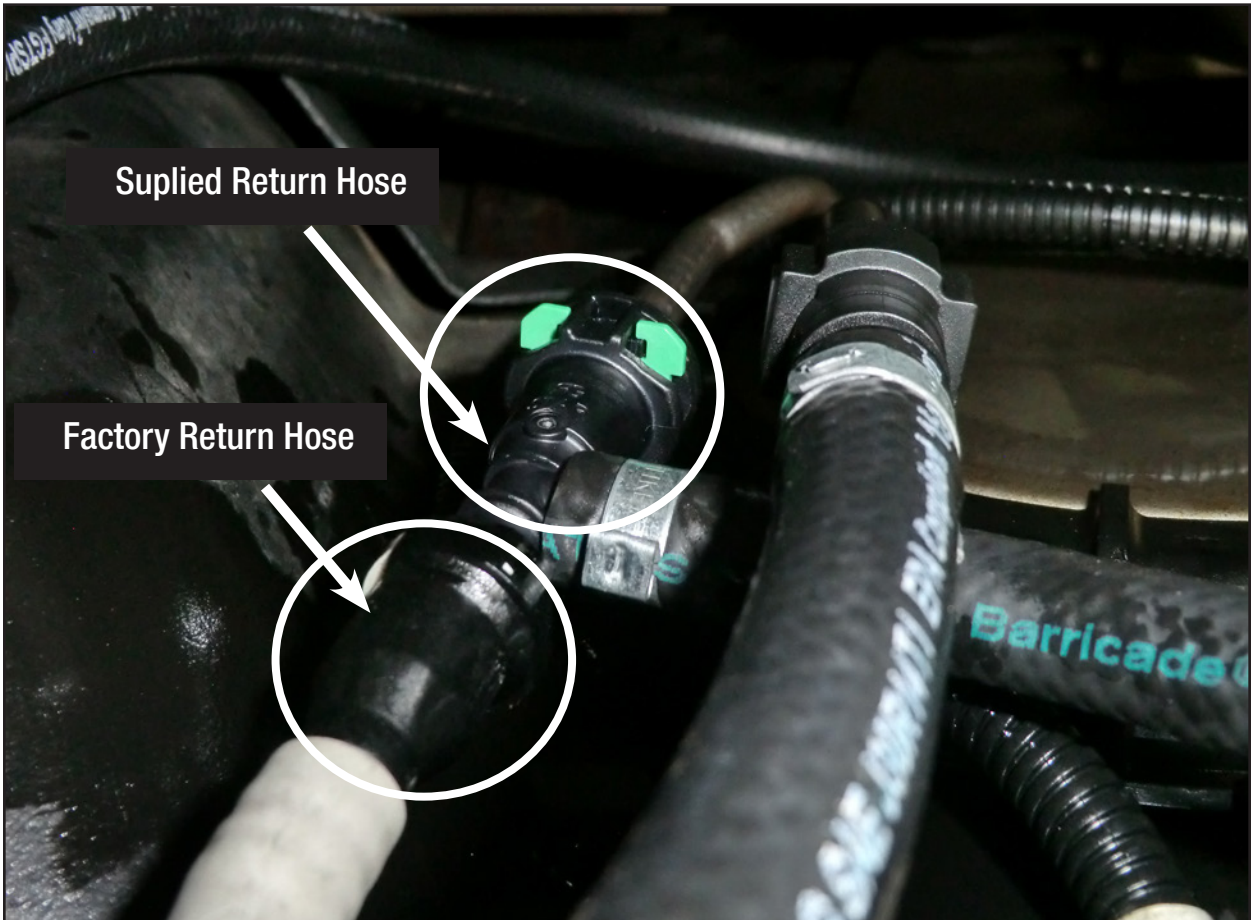

Step 14: Disconnect the factory fuel return line. Attach the supplied fuel return hose between the male and female factory fuel fittings. Push all connections together.



Step 15: Carefully route the ¼" hose to the fitting on the top of the fuel manifold assembly, making sure not to kink the hose or allow it near moving parts. Carefully mark and then cut the hose to the correct length. Using the supplied spring clamp, attach the hose to the nipple on the top of the air chamber on the fuel manifold assembly.

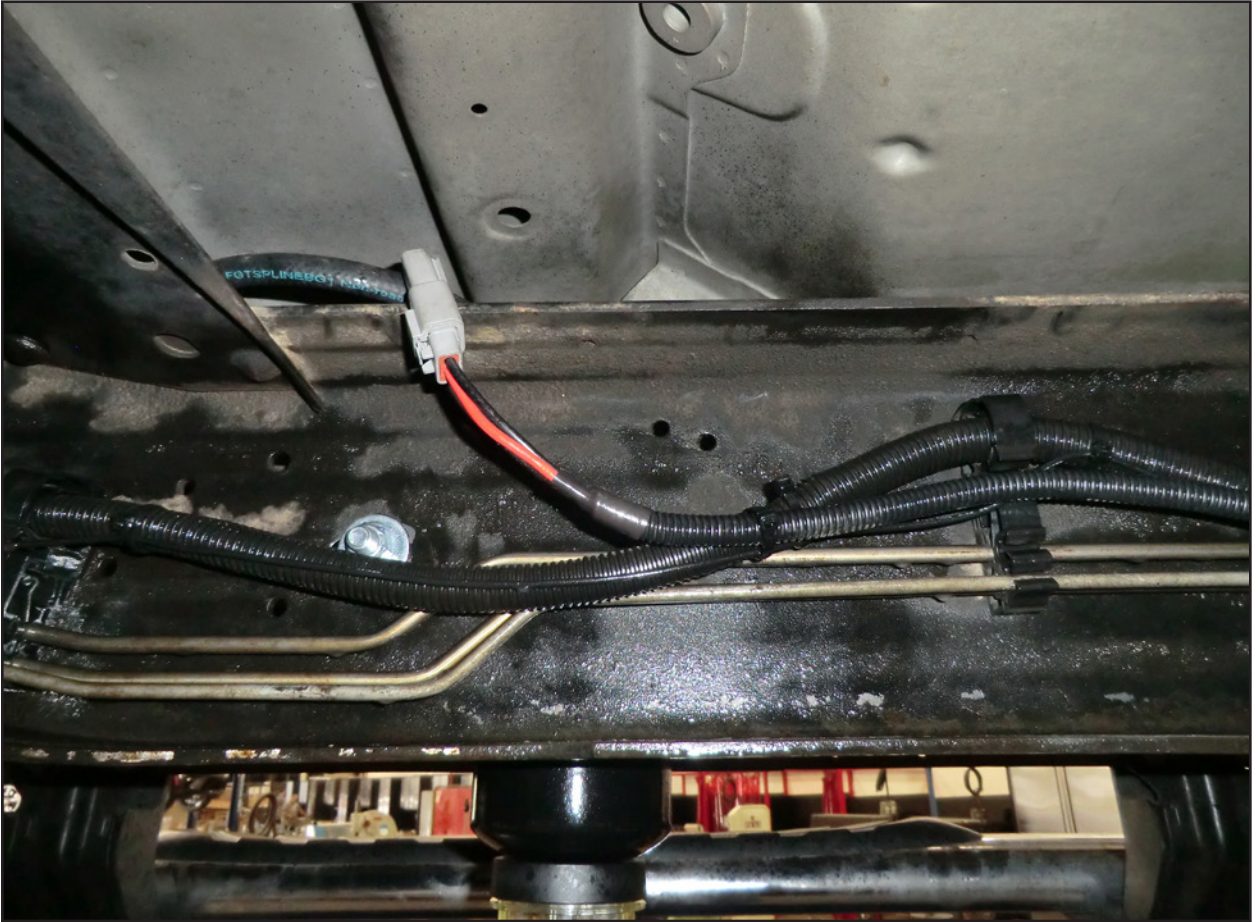

- Step 16:** Plug the Deutsch connector on the end of the supplied power harness into the mating connector on the fuel manifold assembly.
- Step 17:** Route the power harness along the inside of the frame and into the engine compartment.
- Step 18:** Organize the power harness and secure with the supplied nylon cable ties.
- Step 19:** Connect the red wire ring terminal on the power harness to the positive side of the battery.
Note: Check the fuse to make sure it is already installed in the connector.
- Step 20:** Connect the black wire ring terminal on the power harness to the negative side of the battery.
- Step 21:** Plug the supplied relay harness into the Deutsch connector on the power harness and run the red trigger wire into the cab to the fuse box under the dash.
- Step 22:** Secure the relay harness using a supplied cable tie.
- Step 23:** Remove the panel under the steering wheel. Remove the fuse box cover. Locate a 12 volt source inside the fuse box that only comes on with the key in the “run” position. Once a 12 volt source is located, remove the fuse from the fuse box.

Locations for 12 volt fuse (under the dash fuse block):

1999 - 2001	#27	Customer Access
2002 - 2003	#29	Customer Access
2003 - 2007	#45	Ignition Run/START feed



- Step 24:** Attach the power wire from the relay harness to the add-a-harness fuse connector.
- Step 25:** Insert the fuse removed in Step 23 into the open location on the add a harness fuse connector (not in line with the wire).
- Step 26:** Insert the add a harness fuse connector (with installed fuses) into the 12 volt source location from Step 23.
- Step 27:** Carefully route the power wire outside the fuse box and reinstall the cover (making sure not to pinch the wire). Reinstall the panel below the steering wheel.
- Step 28:** Organize the wire harnesses and secure with the remaining nylon cable ties.
- Step 29:** Turn the key to the “Run” position and wait for 30 seconds. Start the engine.
- Step 30:** Installation is now complete. Make sure that all fittings are tight and that fuel is not leaking from any of the connections made during installation.



SCORCHER HD Module



P/N: 77-43012 ('04.5-'07)

Momentum Air Intake



P/N: 50-73003 (P10R)
51-73003 (PDS)
(For V8-6.0L)

Momentum Air Intake



P/N: 50-73002 (P10R)
51-73002 (PDS)
(For V8-7.3L)

Sprint Booster V3



P/N: 77-13001

Turbo-Back Exhaust



P/N: 49-43004 (Pol. Tip)
49-43077-B (Blk. Tip)
(For V8-6.0L)

Turbo-Back Exhaust



P/N: 49-43075-B (Blk. Tip)
49-43075-P (Pol. Tip)
(For V8-7.3L)

Transmission Pan



P/N: 46-70122-1 (Black)
46-70120 (RAW)

Superchips Flashpaq



P/N: 77-43011

Rear Differential Cover



P/N: 46-70022-WL (w/ Oil)
46-70020 (RAW)

Oil Cap



P/N: 79-12005

OE Replacement Filter



P/N: 30-10006 (P5R) ('99-'03)
10-10100 (P5R) ('03-'07)

Oil Filter



P/N: 44-LF004 ('99-'03)
44-LF003 ('03-'07)