

Exhaust System Installation PN-140416, 140417, & 140438



Thank you for purchasing a Borla Performance Cat-Back™ Exhaust System.

This Borla Performance Cat-Back™ Exhaust System (Part number 140416, 140417) is designed for the Ford F-150, 5.0L V8 Engine, 2 or 4-wheel drive and automatic transmission.

This Borla Performance Cat-Back™ Exhaust System (Part number 140438) is designed for the Ford F-150, 3.5L V6 EcoBoost engine, 2 or 4-wheel drive and automatic transmission.

Borla Performance Industries recommends that an exhaust shop or professional after market parts installer perform the installation of this system. However, if you decide to perform the installation on your own it is recommended that two people are used. This installation should not be performed by one person due to the risk of injury. Ensure the installers use all under car safety precautions including eye protection.

Please take time to read and understand the following...

By installing your Borla Performance Exhaust System, you indicate that you have read this document and you agree with the terms stated below.

It is the responsibility of the purchaser to follow all installation instruction guidelines and safety procedures supplied with your Borla Performance Exhaust System

Borla Performance Industries assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

Minimum Required Tool List:

TOOLS:

- 1 3/8" Drive Ratchet
- 2 3/8" Drive Extension 3"
- 3 15mm Deep Well Socket
- 5 Pry Bar

SHOP SUPPLIES:

- 1 Spray Lubricant

Borla Performance Cat-Back™ Bill of Materials

140416

| ITEM NO. | QTY. | PART NO. | DESCRIPTION |
|----------|------|----------|---|
| 1 | 1 | 54441 | FRONT PIPE ASSEMBLY |
| 2 | 1 | 54442 | MUFFLER ASSEMBLY |
| 3 | 1 | 54439 | R/H TAIL PIPE ASSEMBLY |
| 4 | 1 | 67381 | INTERMEDIATE PIPE-Ø2.25 X 36.18" (FROM 80026) |
| 5 | 1 | 54440 | L/H TAIL PIPE ASSEMBLY |
| 6 | 2 | 54434 | HANGER/BRACKET ASSEMBLY |
| 7 | 1 | 90114 | 3/5 ACCUSEAL CLAMP Ø3.00 |
| 8 | 3 | 90112 | 3/5 ACCUSEAL CLAMP Ø2.25 |
| 9 | 2 | 44489 | RUBBER BRACKET |
| 10 | 2 | 11514597 | NUT: HXHD, M10 X 1.50p |
| 11 | 2 | 11515767 | BOLT: M10 X 1.50P |

140417

| ITEM NO. | QTY. | PART NO. | DESCRIPTION |
|----------|------|----------|---|
| 1 | 1 | 54441 | FRONT PIPE ASSEMBLY |
| 2 | 1 | 54442 | MUFFLER ASSEMBLY |
| 3 | 1 | 54439 | R/H TAIL PIPE ASSEMBLY |
| 4 | 1 | 67381 | INTERMEDIATE PIPE-Ø2.25 X 36.18" (FROM 80026) |
| 5 | 1 | 54440 | L/H TAIL PIPE ASSEMBLY |
| 6 | 2 | 54434 | HANGER/BRACKET ASSEMBLY |
| 7 | 1 | 90114 | 3/5 ACCUSEAL CLAMP Ø3.00 |
| 8 | 3 | 90112 | 3/5 ACCUSEAL CLAMP Ø2.25 |
| 9 | 2 | 44489 | RUBBER BRACKET |
| 10 | 2 | 11514597 | NUT: HXHD, M10 X 1.50p |
| 11 | 2 | 11515767 | BOLT: M10 X 1.50P |

140438

| ITEM NO. | QTY. | PART NO. | DESCRIPTION |
|----------|------|----------|---|
| 1 | 1 | 54533 | FRONT PIPE ASSEMBLY |
| 2 | 1 | 54534 | MUFFLER ASSEMBLY |
| 3 | 1 | 54439 | R/H TAIL PIPE ASSEMBLY |
| 4 | 1 | 67381 | INTERMEDIATE PIPE-Ø2.25 X 36.18" (FROM 80026) |
| 5 | 1 | 54440 | L/H TAIL PIPE ASSEMBLY |
| 6 | 2 | 54434 | HANGER/BRACKET ASSEMBLY |
| 7 | 1 | 90114 | 3/5 ACCUSEAL CLAMP Ø3.00 |
| 8 | 3 | 90112 | 3/5 ACCUSEAL CLAMP Ø2.25 |
| 9 | 2 | 78998 | RUBBER HANGER |
| 10 | 2 | 11514597 | NUT: HXHD, M10 X 1.50p |
| 11 | 2 | 91151 | SCREW: CAP, HXHD, M10 X 60mm, 1.50p |

Caution!!! *Never work on a hot exhaust system. Serious injury in the form of burns can result* If the vehicle has been in use and the exhaust system is hot, allow vehicle to cool for at least 1 hour. Always wear eye protection when working under any vehicle.

Note: It is our recommendation that you use a hoist or hydraulic lift to facilitate the installation of your new Borla Performance Cat-Back™ Exhaust System.

Taking all under car safety precautions, lift the vehicle using a hoist or hydraulic lift. Once this has been done, you may begin the removal of your old exhaust system from your vehicle.

Note: Before removing the original exhaust system from your vehicle, please compare the parts you have received with the bill of materials provided on the previous page to assure that you have all the parts necessary for the installation of your new Borla Performance Cat-Back™ Exhaust System.

Original Exhaust System Removal

Note: With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble.

1. Lubricate all hangers and rubber isolators.
2. Unbolt the front flange bolts. Keep hardware for reinstallation of your new exhaust. (See Fig. 1)
3. Loosen clamp on front muffler. (See Fig. 2)
4. Remove front muffler assembly. (See Fig. 3)
5. Using a muffler stand or an additional person to hold the exhaust system up in place, remove the hangers from the rubber isolators and remove the remaining exhaust system from the vehicle. (See Figs. 4 & 5)

Warning: Use extreme caution during installation. Torque all fasteners according to manufacturer's torque values and tightening sequence. **DO NOT** use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks.

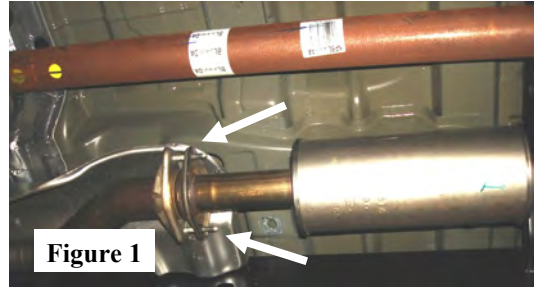


Figure 1

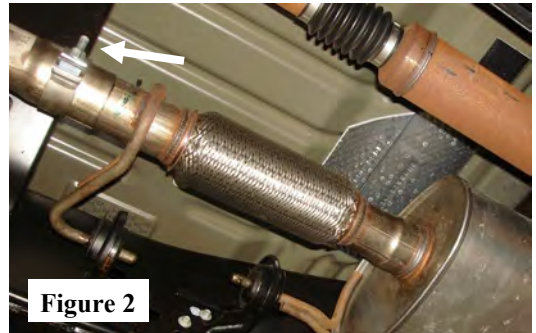


Figure 2

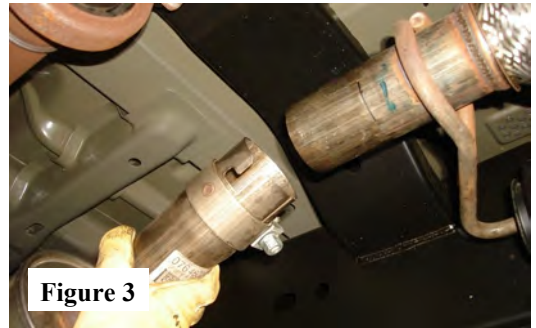


Figure 3



Figure 4



Figure 5

Borla Performance Cat-Back™ Exhaust System Installation

1. Working on a flat surface and referring to drawing on page 2, Assemble Front Pipe and Muffler Assembly with 3” clamp. DO NOT tighten the clamp.
2. Position the assembly over the rear axle and insert hangers into factory rubber isolators. (See Fig. 6)
3. Assemble Front Pipe hardware and tighten hardware. (See Fig. 7)
4. Install Hanger Bracket Assembly to driver’s side. (See Fig. 8A)
5. Install Hanger Bracket Assembly to passenger side. (See Fig. 8B)
6. Assemble Intermediate Pipe and L/H Tail Pipe. (See Fig 9) Position inlet pipe into left-side Muffler Assembly and insert hangers into rubber isolators. (See Fig. 10) DO NOT tighten the clamp.
7. Position R/H Tail Pipe Assembly into right-side Muffler Assembly and insert hangers into rubber isolators. DO NOT tighten the clamp.
8. Check your exhaust system for proper clearance under the vehicle and also for tip alignment. Starting at the front and moving to the rear, tighten the Accuseal clamps to 32-35 ft. lbs.
9. Before starting your vehicle, make sure to check all wires, hoses, brake lines, body parts and tires for safe clearance from the exhaust system.
10. Start vehicle and check for any leaks. If any leaks are found, determine cause (such as loose or incorrectly positioned clamp) and repair as necessary.

Note: When you first start your vehicle after the installation of your new Borla Performance Exhaust System, there may be some smoke and fumes coming from the system. This is a protective oil based coating used in the manufacturing of mandrel bent performance exhaust tubing. This is not a problem and will disappear within a very short period of time after the exhaust has reached normal operating tem-

Congratulations!!! You have completed the installation of the world famous Borla Performance Stainless Steel Exhaust System.



Figure 6



Figure 7



Figure 8A

Figure 8B



Figure 9



Figure 10



Figure 11