

11261

97-99 NISSAN SENTRA SEDAN, 97-98 NISSAN 200SX

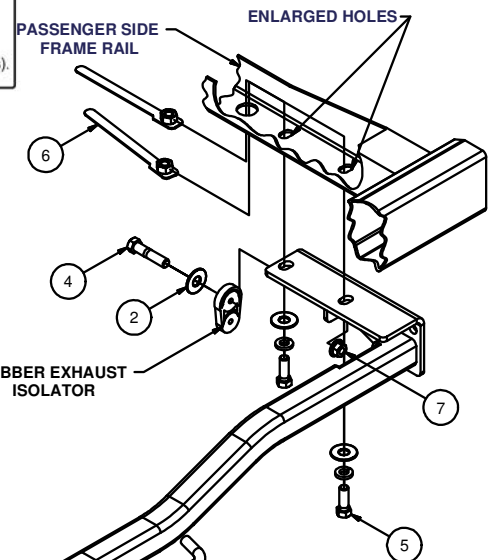
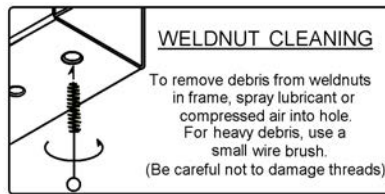
GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**

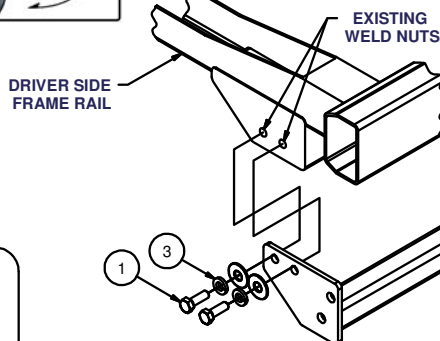
Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	M10 - 1.25 x 30	HEX BOLT
2	5	7/16 WASHER	WASHER
3	4	7/16 LOCK WASHER	HELICAL LOCK WASHER
4	1	7/16-14 x 2.00"	HEX BOLT
5	2	7/16-14 x 1 1/4	HEX BOLT
6	2	7_16-14 TAB NUT	HANDLE NUT
7	1	7/16-14	HEX FLANGE NUT

**RUBBER ISOLATOR REMOVAL DIAGRAM**

This technique can be used if and Exhaust Hanger Removal Pliers is not available.

Using a 5/8" open end wrench, slide the wrench up to the rubber isolator, cradling the hanger rod as shown. Next place the flat edge of a pry bar between the wrench and the hanger stop or hanger rod. Then simply rotate the pry bar toward the wrench to remove the rubber isolator.

Note: Using a spray lubricant or soapy water on the hanger rod and the rubber isolator helps removal.



HITCH WEIGHT: 23 LBS.

INSTALL TIME

PROFESSIONAL: 45 MINUTES

NOVICE (DIY): 90 MINUTES

INSTALL NOTES:

- HOLE ENLARGING REQUIRED
- REMOVE TOW LOOP BRACKET
- LOWER EXHAUST

FRONT
↑
REAR

DESIGNED FOR USE WITH
BALLMOUNT #55001 / 45501

INSTALLATION STEPS

1. Under the rear of the vehicle locate the driver and passenger side frame rails.
2. Remove the metal exhaust hanger bolted to the passenger side. The rubber exhaust hanger will mount to the hitch after installation. Remove the tow loop bracket assembly mounted by (4) bolts on the driver's side frame rail. Return exhaust bracket and tow loop to customer for reinstallation if hitch is ever removed.
3. Position the hitch on the vehicle matching the holes in the side of the tow loop frame extensions on the driver's side frame rail, with the holes in the hitch plate. Install 10mm fasteners as shown above. On the passenger side, position the hitch over the rearward most existing holes in the frame rail. Using the hitch as a template, enlarge (2) holes for 7/16" fasteners as shown.
4. Install forward handle nuts through access hole in the passenger side frame rail as shown above. The rear handle nut can be placed between the frame and the bumper bracket.
5. Torque all 7/16" fasteners to 70 lb-ft, and all 10 mm fasteners to 48 lb-ft.
6. Install bolt under the passenger side plate to the rubber isolator as shown above.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.



The **FIRST** Name
in Towing Products™

Trailer Hitches