



**Part number SES7027ICP**  
**08-09 Chevy Cobalt SS**  
**2.0L 4 cyl. Turbo**

- 1- 2 piece upper intercooler tubing
- 1- 2" x 2 1/2" long straight hose (#3146)
- 2- 2 1/2" ID x 2" long str. hose (#3048)
- 1- m6 vibra-mount (#6020)
- 1- m6 flange nut (#6002)
- 1- fender washer (#6010)
- 4- Hose clamp 040/.312 (#4003)
- 2- Hose clamps 032/.262 (#4008)
- 1- 3 page Instruction

**Congratulations! You have just purchased the best engineered, dyno-proven intercooler piping available.**

**Please check the contents of this box immediately.**

Report any defective or missing parts to the Authorized Injen Technology dealer you purchased this product from. Before installing any parts of this system read the instructions thoroughly. If you have any questions regarding installation please contact the dealer you purchased this product from. Installation DOES require some mechanical skills. A qualified mechanic is always recommended.

\*Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.


Injen Technology offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

**Please check the contents of this box immediately.**


**Note:** The installation of this intercooler piping does require mechanical skills. Injen strongly recommends that this system be installed by a professional mechanic.




**Figure 1**  
Stock upper intercooler piping to be removed.

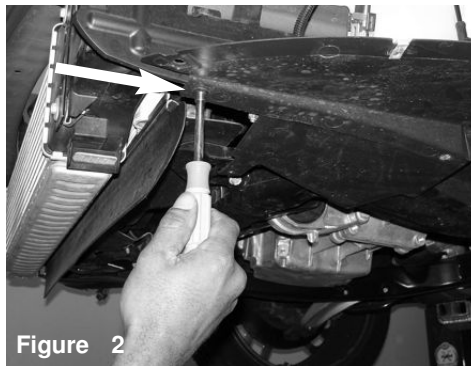


**Figure 2**  
Driver side skid plate needs to be separated in order to expose the lower intercooler piping. a nut driver is used to remove the first m6 bolt.

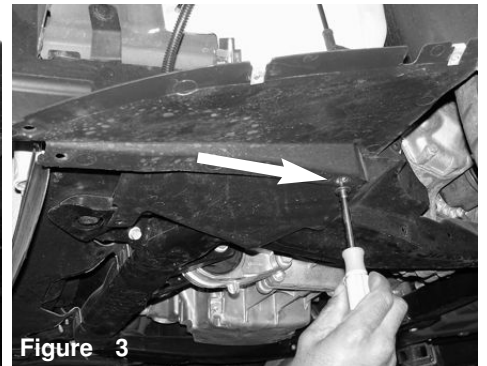


**Figure 3**  
A nut driver is used to unscrew the second m6 bolt.

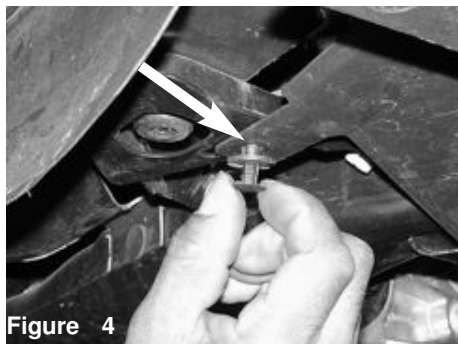

**Figure 4**  
A flathead screwdriver is used to pop the plastic clip. Once you have popped the clip, remove it for now.

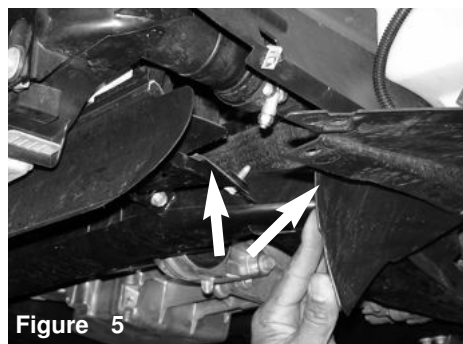

**Figure 5**  
The skid plates are now separated to expose the lower intercooler piping.

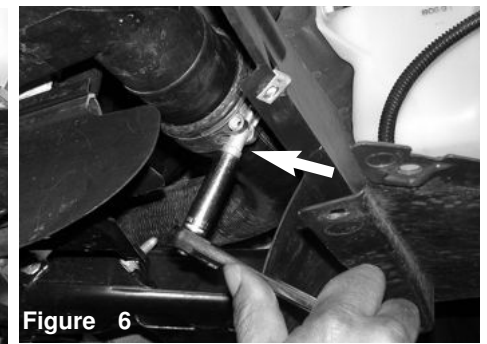


**Figure 6**  
Once the intercooler piping is exposed, continue to loosen clamp and remove the pipe and hose.



**Figure 7**

The hose is loosened and the plastic intercooler piping is removed.

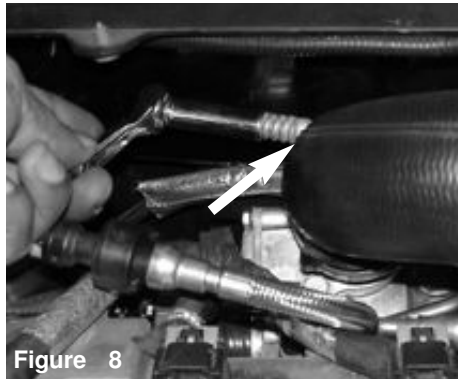

**Figure 8**

The upper intercooler piping hose is loosened at the throttle body as shown above.




**Figure 9**

Once you have loosened the clamp, continue to pull the plastic intercooler piping out of the engine compartment.




**Figure 10**

The plastic intercooler plastic pipe is pulled from the engine compartment.

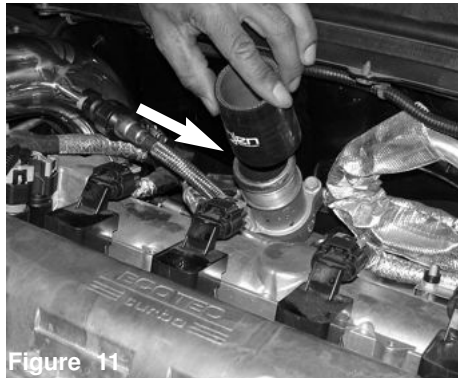


**Figure 11**

The 2 1/2" straight hose is pressed over the throttle body. Once the hose is sitting flush over the throttle body, continue to place two clamps on the hose.

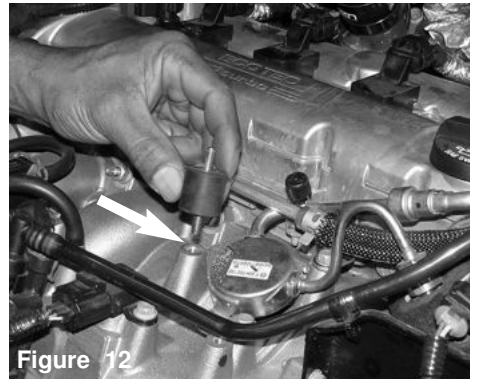

**Figure 12**

The vibra-mount is aligned to the pre-tapped stand-off over the plenum.

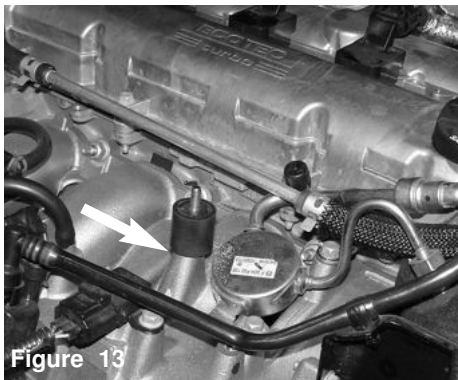

**Figure 13**

The vibra-mount is now sitting flush on the plenum stand-off.



**Figure 14**

The upper intercooler piping is lower into the engine compartment. The top end of the piping is pressed into the throttle body hose.



**Figure 15**

As the upper end of the piping is pressed into the hose, the bracket is aligned to the vibra-mount.



**Figure 16**

The m6 nut and fender washer is screwed onto the vibra-mount and a ratchet is used to tighten the nut in place




**Figure 17**

The 2 1/2" hose is now pressed over the lower end of the intercooler piping as shown above.



**Figure 18**

Once you have pressed the hose over the piping, continue to tighten the clamp over the pipe. The hose should be placed half ways on the pipe.

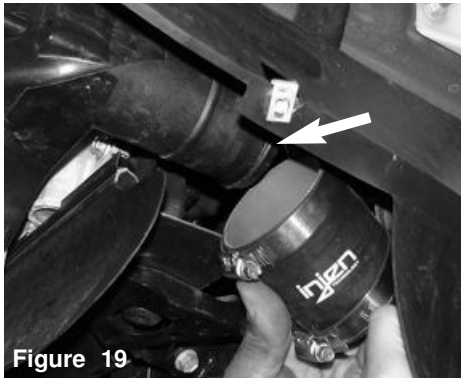

**Figure 19**

The last 2 1/2" hose is pressed over the intercooler tank as shown above. The two clamps are also used on the hose, tighten the clamp over the end tank.




**Figure 20**

The lower intercooler pipe is now lower into the engine compartment. The lower end is aligned to the hose on the end tank.




**Figure 21**

The lower end of the intercooler pipe is pressed into the 2 1/2" hose located on the end tank.

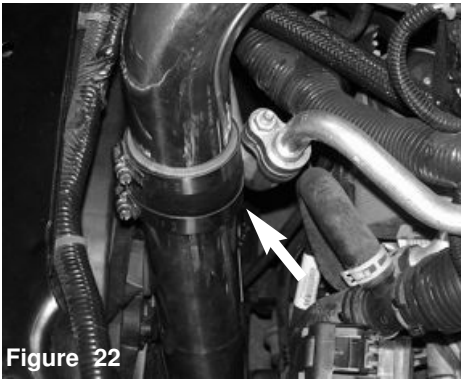


**Figure 22**

The top end of the lower intercooler piping is pressed into the upper intercooler hose. The both intercooler pipes should be butted up together.

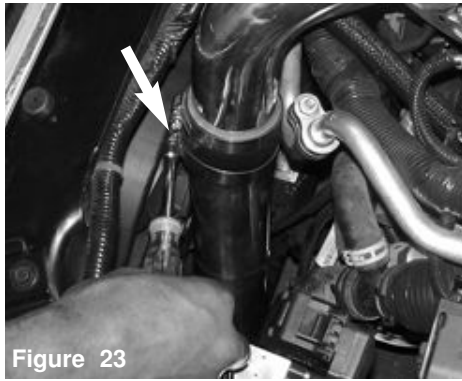


**Figure 23**

Once you have butted up both pipes, continue to tighten the lower hose clamp.

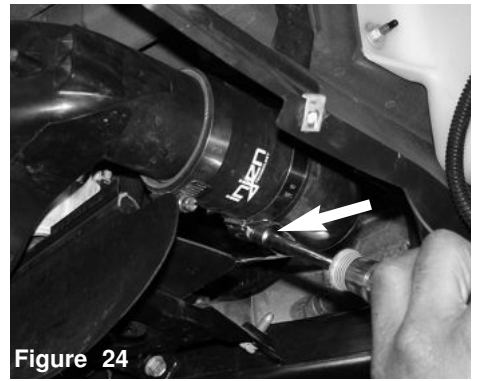


**Figure 24**

The lower and upper intercooler piping is aligned for best fit and the lower clamp on the end tank is tightened.

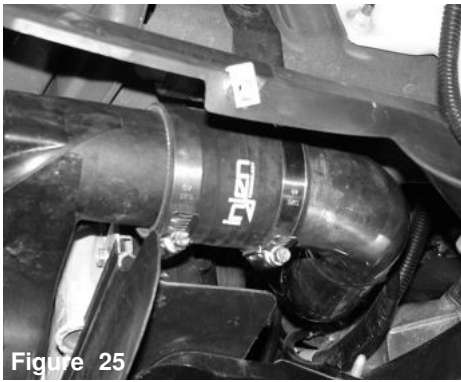

**Figure 25**

The hose and lower intercooler piping is now installed.

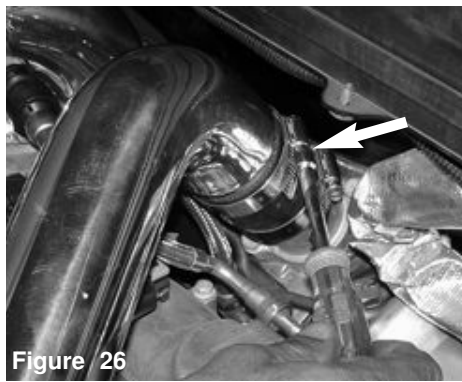

**Figure 26**

The upper intercooler piping is also aligned and tightened at the hose.



**Figure 27**

The entire upper intercooler piping is now installed. Check all nut, bolts and clamps prior to starting the engine and be sure there are no loose parts.