


K&N TYPHOON INTAKE SYSTEMS

INSTALLATION INSTRUCTIONS

69-3500TP
69-3500TB
FORD
2000-03 Escort ZX2
L4-2.0L

TOOLS NEEDED:

- Flat blade Screwdriver
- 4mm Allen Wrench
- Ratchet
- 6" Extension
- 10mm Socket
- 12mm Socket

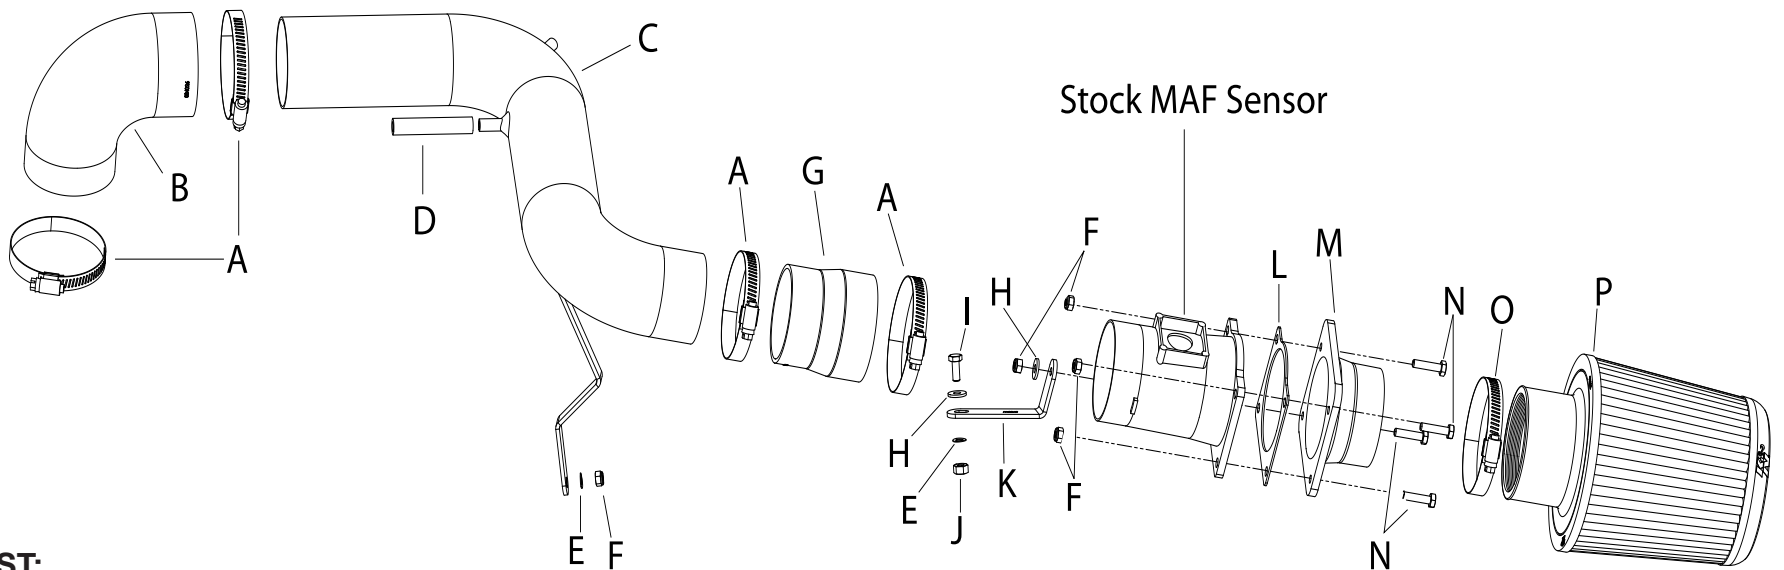

PARTS LIST:

Description	Qty.	Part #	Description	Qty.	Part #	Description	Qty.	Part #
A Hose Clamp, #44, SS	4	08560	G Step Hose	1	08096	M Mass Air Adaptor	1	088043
B Hose, 90 degree, Blk.	1	084027	H 6mm Flat Washer, SS	2	08269	N 6mm Hex Bolt, 25mm L	4	07858
C Intake Tube	1	27102	I 6mm Bolt, 16mm, SS	1	07812	O Hose Clamp #48	1	08601
D Hose, 8mm x 2-3/4" L.	1	084029	J 6mm Hex Nut, SS	1	07506	P Air Filter	1	RU-4990
E 6mm Wave Washer, SS	2	08277	K "L" Bracket	1	070041			
F 6mm Nylock Nut, SS	5	07512	L Gasket	1	09202			

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND NOT USING THE PROVIDED HARDWARE MAY DAMAGE THE INTAKE TUBE, THROTTLE BODY AND ENGINE.


TO START:

1. Turn off the ignition and disconnect the negative battery cable.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles' anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Disconnect the secondary mass air sensor electrical connection as shown.

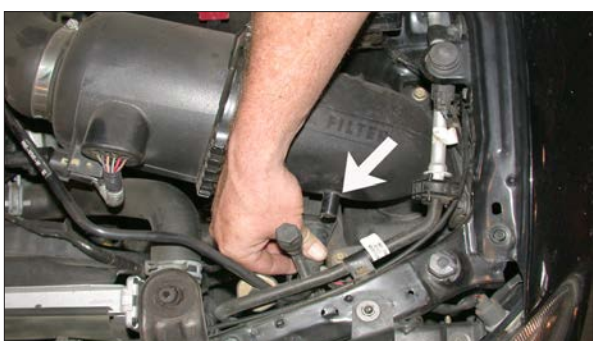

3. Disconnect the crank case vent hose from the stock air cleaner assembly as shown.




4. Remove the crank case vent hose from the breather on the cam cover as shown.



5. Remove the vent hose from the stock intake tube as shown.



6. Loosen the hose clamp at the throttle body and at the mass air sensor, then, remove the stock intake tube as shown.

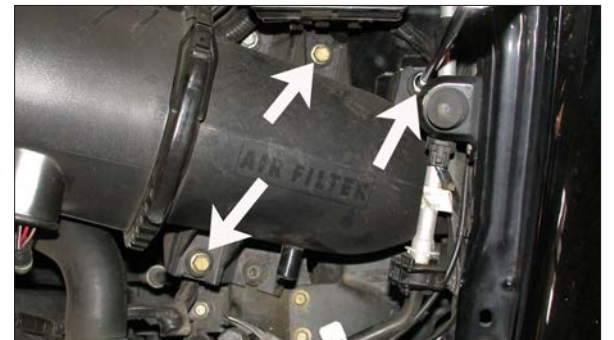

7. Loosen and remove the three bolts that secure the air cleaner assembly as shown.



8. Pull firmly upwards to remove the air cleaner assembly as shown.

NOTE: K&N Engineering, Inc., recommends that customers do not discard factory air intake.



9. Pull the rubber boot back then depress the release tab to disconnect the mass air sensor electrical connection as shown.




10. Remove the mass air sensor base plate from the air cleaner housing as shown.



11. Remove the two bolts that secure the mass air sensor, then, remove the mass air sensor as shown.



12. Assemble the 90 degree silicone hose and hose clamps onto the intake tube as shown. Due to hood clearance problems, the long end of the silicone hose should be clamped onto the tube. **NOTE: Before installing the silicone hose, inspect the inside of the tube for any debris, then clean the inside out with water and a towel. Inspect the tube one more time before proceeding to the next step.**

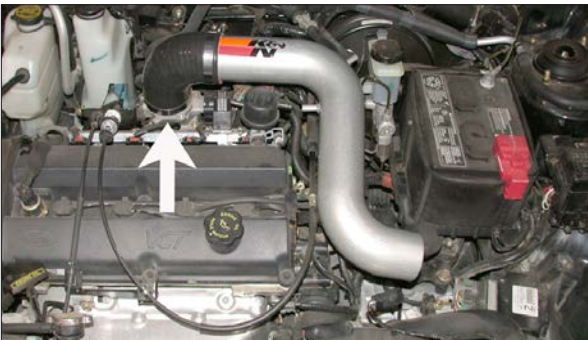

13. Slide the intake tube assembly onto the throttle body as shown, but do not tighten completely at this time.



14. Line up the bracket on the tube with the stud on the water neck as shown.




15. Secure the bracket to the stud using the provided washer and hex nut as shown.



16. Connect the provided hose onto the cam cover vent and to the vent on the intake tube as shown.



17. Install the silicone step hose and hose clamps onto the intake tube as shown.

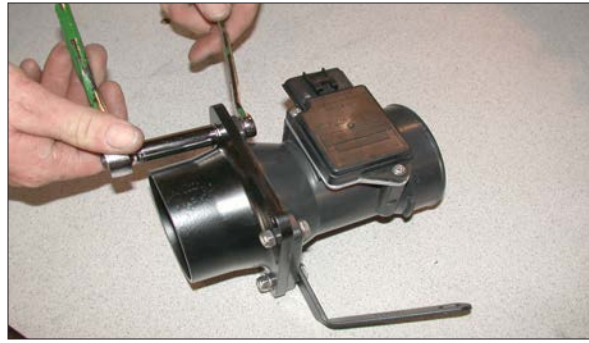

18. Assemble the stock mass air sensor, gasket, mass air adapter, and bracket using the provided hardware as shown.



19. Slide the mass air sensor assembly into the silicone step hose, then, line up the bracket with the hole located on the battery tray as shown.



20. Secure the bracket to the battery tray using the provided hardware as shown.



21. Tighten all hose clamps and hardware and adjust for best fit.



22. Install the air filter and secure with the provided hose clamp as shown.



23. Reconnect the secondary and primary mass air electrical connections as shown.



24. Reconnect the vehicle's negative battery cable. Double check to make sure everything is tight and properly positioned before starting the vehicle.

25. The C.A.R.B. exemption sticker, (attached), must be visible under the hood, so that an emissions inspector can see it when the vehicle is required to be tested for emissions. California requires testing every two years, other states may vary.

26. It will be necessary for all K&N® high flow intake systems to be checked periodically for realignment, clearance and tightening of all connections. Failure to follow the above instructions or proper maintenance may void warranty.

ROAD TESTING:

1. Start the engine with the transmission in neutral or park, and the parking brake engaged. Listen for air leaks or odd noises. For air leaks secure hoses and connections. For odd noises, find cause and repair before proceeding. This kit will function identically to the factory system except for being louder and much more responsive.

2. Test drive the vehicle. Listen for odd noises or rattles and fix as necessary.

3. If road test is fine, you can now enjoy the added power and performance from your kit.

4. K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. When the element becomes covered in dirt (or once a year), service it according to the instructions on the Recharger® service kit, part number 99-5050 or 99-5000