



INSTALLATION INSTRUCTIONS



2019 RAM 1500 5.7L

PART NO. 19433

BILL OF MATERIALS:



1. MUFFLER ASSEMBLY



WEAR SAFETY GLASSES



READ INSTRUCTIONS THOROUGHLY BEFORE INSTALLING PRODUCT



SPRAY LUBRICANT

To ease removal of existing exhaust components (especially on older vehicles) spray penetrating lubricant on all fasteners and hangers/insulators that will be loosened or removed and let soak before disassembly.

HARDWARE KIT:

- 1.[1] 3.00" Band Clamp
- 2.[2] 7/16-14 x1.50" Bolt
- 3.[2] 7/16-14 Hex Nut
- 4.[2] 7/16 Washer

MINIMUM REQUIRED TOOLS:



15mm



Saw (or Other Cutting Tool)



Hanger Tool (Or Pry Bar)

MAGNAFLOW RECOMMENDS PROFESSIONAL INSTALLATION ON ALL THEIR PRODUCTS



WARNING: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

ATTENTION: Always install any supplied band or V-band clamps to the proper torque specifications of 40-45 ft-lbs for band clamps and 70 in-lbs for V-band clamps. Over tightening will result in the clamp breaking and will NOT be warranted by MagnaFlow.


INSTALLATION INSTRUCTIONS



Step 1. Begin removal of the OE muffler by marking cut point to the rear of OE Muffler as shown in photo below. Then cut the OE Exhaust at that cut point.



Step 2: Remove the OE exhaust by loosening and removing the bolts at the inlet flange. Then disengage the hangers from the rubber insulators. Be sure to not damage the rubber insulators as these will be used for the new MagnaFlow Muffler.

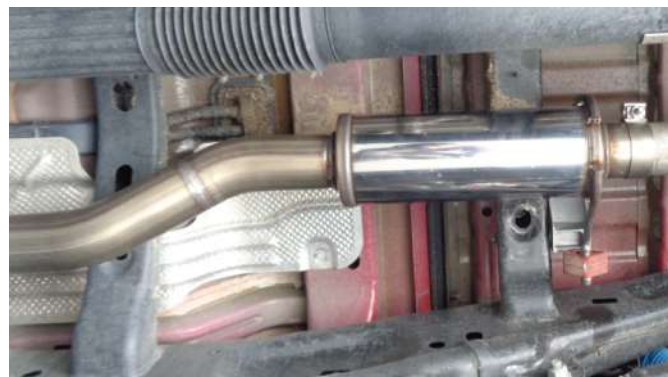

Step 3: Install new MagnaFlow Muffler by first sliding the outlet onto the OE System and then bolting the MagnaFlow inlet flange to the OE flange.



Step 4: Finish by inserting the hangers into the rubber insulators and securing the supplied 3.00" clamps. Once a final position has been chosen for the new exhaust system, evenly tighten all clamps and bolts from front to rear. Inspect all fasteners after 25-50 miles for operation and re-tighten if necessary.