


S61180PLM

04.5-07 DODGE 2500/3500 "600/610" 5.9L CUMMINS, CAT BACK, 5" SINGLE SIDE

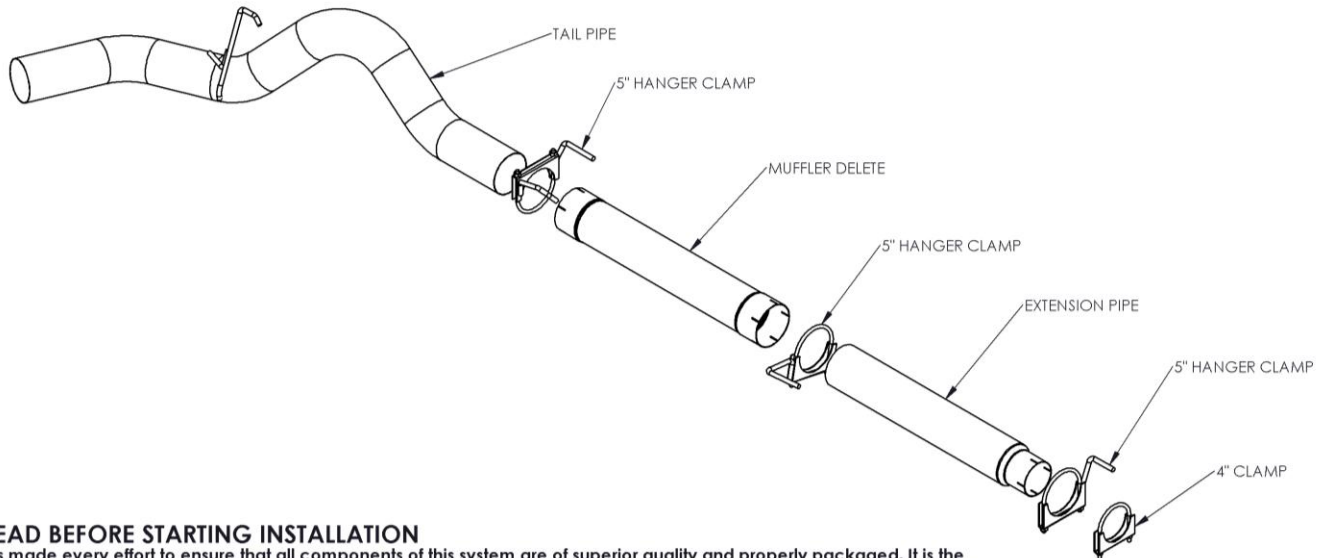

PLEASE READ BEFORE STARTING INSTALLATION

MBRP Inc. has made every effort to ensure that all components of this system are of superior quality and properly packaged. It is the installer's responsibility to ensure that all components are present and fit together as shown. Please also ensure that all components are undamaged before removal of the factory exhaust. Finally, check that this system properly matches the make and model of the vehicle and will not interfere with previous or planned modifications.



Removal of stock system:

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber isolators.
2. Remove the exhaust system from the rubber insulator and remove all of the clamps from the Catalytic Converter back.
3. Separate the slip joint behind the muffler and remove the Tail Pipe. Next, separate the slip joint located behind the Catalytic Converter and remove the Muffler and Extension Pipe.
4. Remove the spare tire. You may not be able to reinstall your spare tire after the installation of this exhaust system.

Installation of MBRP Inc. Performance Exhaust:

1. Install the **4" to 5" Extension Pipe** over the OEM pipe behind the Catalytic Converter. This pipe provides the required length to fit a Quad Cab Long Bed or Mega Cab truck. The **4" to 5" Extension Pipe** will have to be cut to fit all other vehicles. **Installation tip:** Temporarily install the **Muffler Delete** and **Tail Pipe** using the factory rubber insulators and the Hanger Clamp. Measure from the **Muffler Delete** to the back of the Catalytic Converter to determine the length required. Ensure you leave 6" (3" each end) for the joints to overlap. Cut the **Extension Pipe** to length.
2. Install the **Muffler Delete** over the **Extension Pipe**.
3. Install the **Hanger Clamp** into the OEM rubber hanger located on the frame near the inlet of the **Muffler Delete**.
4. Remove the factory rubber insulator for the factory tail pipe and install it onto the **Tail Pipe** hanger. Install the **Tail Pipe** from the rear of the truck, over the axle and attach to the outlet of the **Muffler Delete**. Finish hanging the **Tail Pipe**.
5. Install the **Hanger Clamp** into the two OEM rubber hangers located above the outlet of the **Muffler Delete**.
6. Install the provided clamps around pipes where needed. Adjust the **Tail Pipe** and check along the whole length of the exhaust system to ensure there is adequate clearance around the fuel and brake lines or any wiring. If there is any interference detected, relocate or adjust.
7. Make sure that the exhaust is properly in place before tightening clamps. Start at the front of the exhaust system and tighten all connections.
8. If a tip has been purchased, install and adjust to suit. Tighten the lock bolt located on the **Tip**. **A Tip is not included with this kit.** Tips may be purchased separately, check with your dealer.

Congratulations! You are ready to begin enjoying the improved performance and driving experience of your MBRP Inc. performance exhaust system. We hope you enjoy your purchase.