



TOOLS REQUIRED: 5/16" DRILL \* 1/2" HEX SOCKET \* 1/2" WRENCH \* 5/16" NUT DRIVER \* 3/8" NUT DRIVER

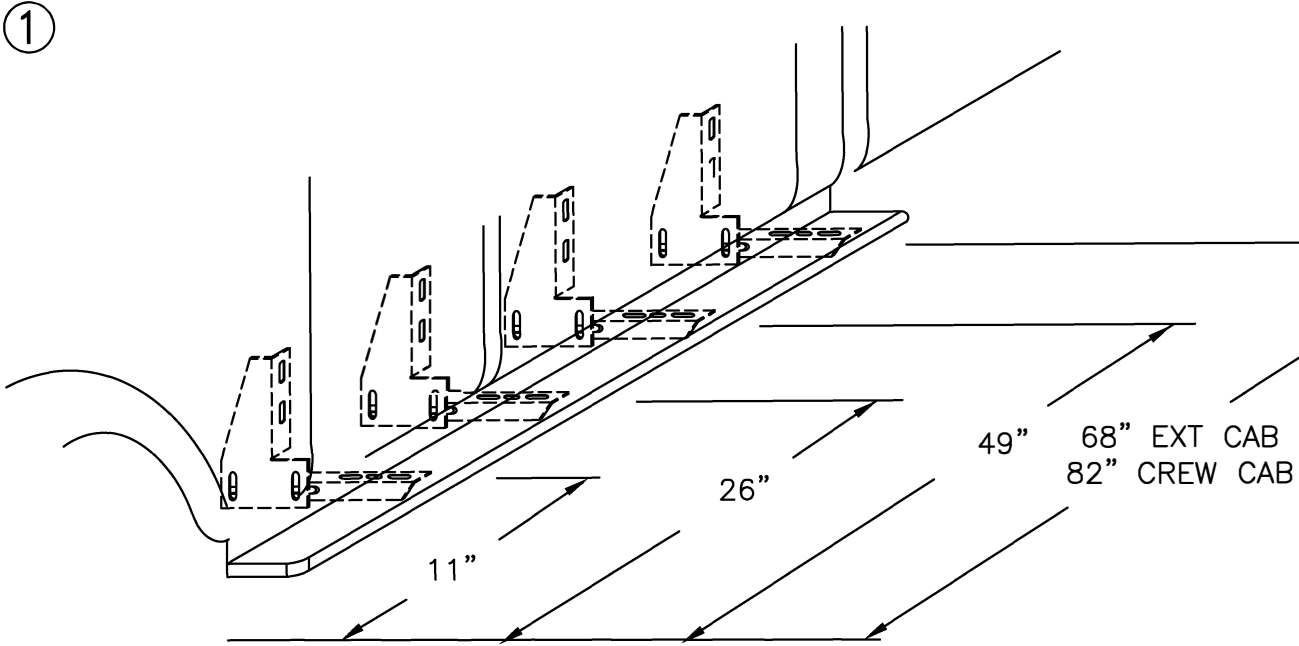


(DRIVERS SIDE SHOWN)  
MEASURE FROM FRONT WHEEL WELL TO DIMENSIONS SHOWN  
THERE ARE FACTORY HOLES AT OR VERY CLOSE TO THESE LOCATIONS

②  
BRACKET ASSEMBLY  
ASSEMBLE WITH 5/16" BOLTS

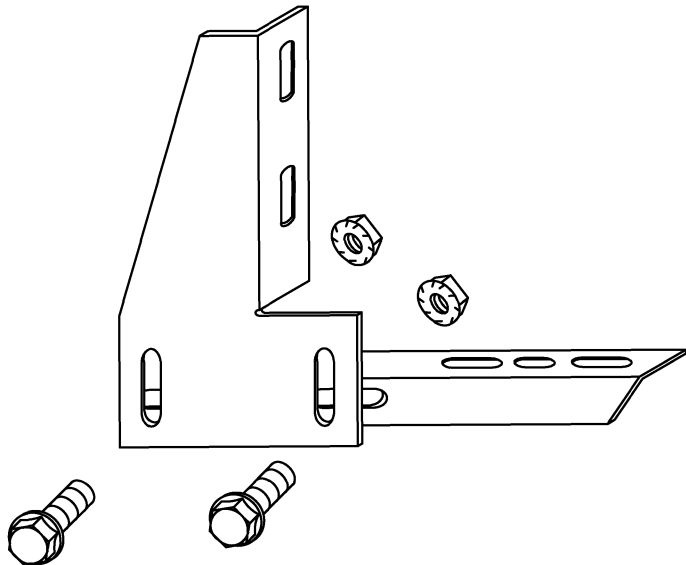


③  
SLIDE NUT CUP INTO BODY  
HOLES AT BRACKET LOCATIONS

ASSEMBLE WITH 5/16" BOLTS AND  
NUT CUP AND 5/16" BOLT

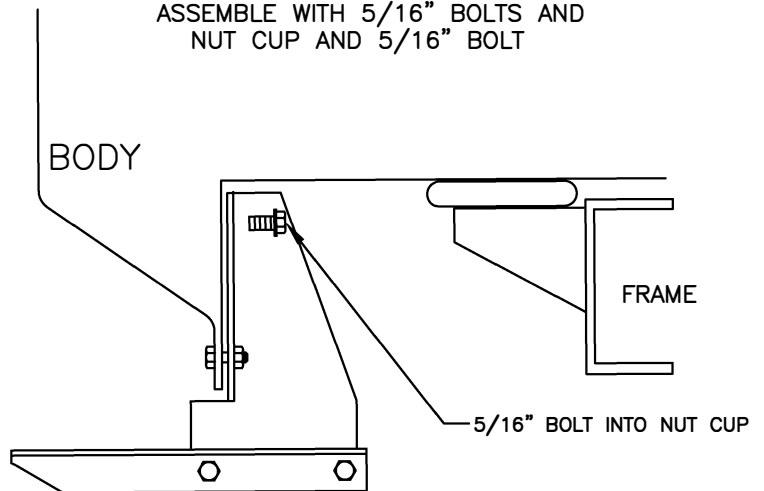


### BOARDS WITHOUT STONEGUARDS

④ PROCEED TO STEP 9 IF PLASTIC BOARDS ARE TO BE INSTALLED.

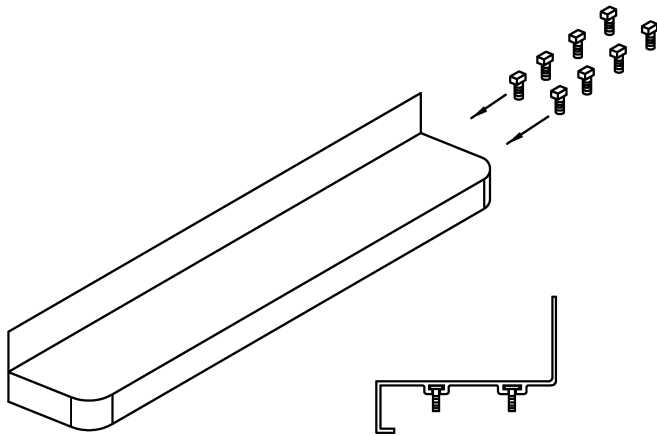

SLIDE ONE 1/4" X 5/8" SQUARE HEAD SCREWS INTO EACH TRACK FOR EACH BRACKET.

⑤

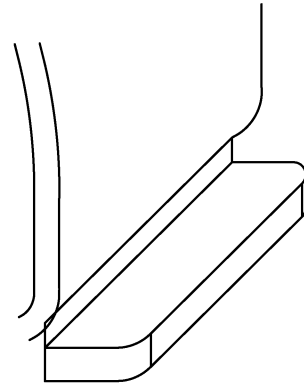


HOLD THE BOARD IN PLACE WITH IT RESTING ON THE BRACKETS.

BE SURE THAT THE 1/4" BOLTS ARE PLACED INTO THE SLOTS IN THE BRACKET STEP SUPPORT

### BOARDS WITH STONEGUARDS


⑥ ATTACH STONE GUARD TO BOARD WITH 3/8" SELF TAPPING BOLT.

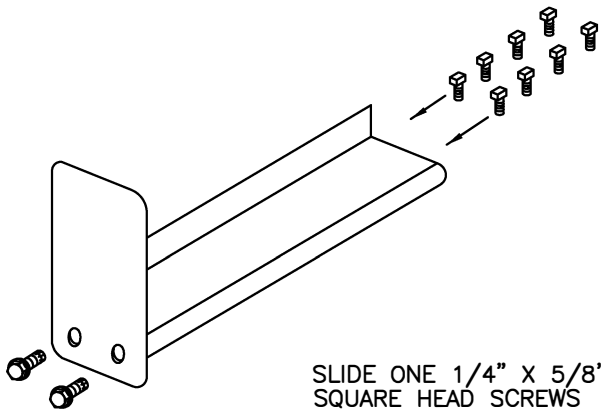

SLIDE ONE 1/4" X 5/8" SQUARE HEAD SCREWS INTO EACH TRACK FOR EACH BRACKET.

⑦


LEVEL THE BOARD ON THE BRACKETS

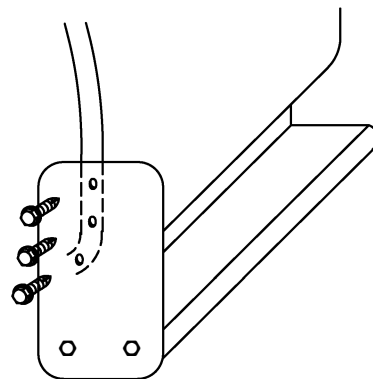

SCREW THROUGH STONE GUARD INTO FENDERWELL LIP USING #14 BY 3/4 SELF DRILLING SCREWS, MAKE SURE YOU DRILL INTO METAL

YOUR BRACKETS INSTALL IN FACTORY HOLES


8

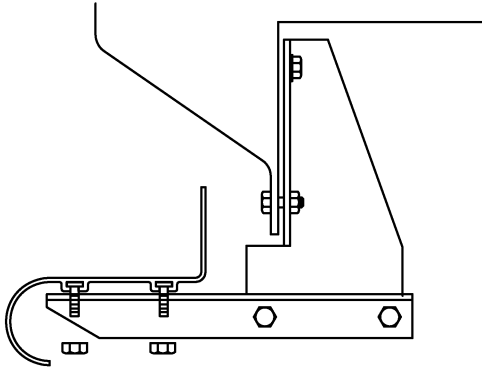

SECURE BOARD TO BRACKET  
WITH 1/4" NUTS

9

FOR PLASTIC BOARDS, APPLY FOAM TAPE AND STEP TREAD TO BOARD.  
ATTACH THE BOARD TO THE BRACKETS  
WITH SELF DRILLING SCREWS.

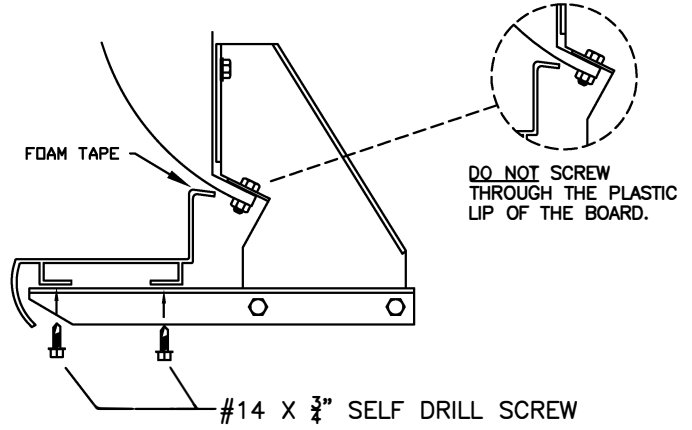

FOAM TAPE

DO NOT SCREW  
THROUGH THE PLASTIC  
LIP OF THE BOARD.

#14 X 3/4" SELF DRILL SCREW

10

WITH BOARD LEVEL, TIGHTEN  
ANY LOOSE BOLTS

11

REPEAT FOR OPPOSITE SIDE